



Service Manual (Supplement)

532H, 537H

PUBLISHED BY THE
TECHNICAL PUBLICATIONS DEPARTMENT OF
JCB SERVICE; ©
WATERLOO PARK, UTTOXETER,
ST14 5PA, ENGLAND
Tel. 01889 - 590312
PRINTED IN ENGLAND

Publication No. 9803/3641

| | |
|----------------------------|----------|
| General Information | 1 |
| Care & Safety | 2 |
| Routine Maintenance | 3 |
| Electrics | C |
| Hydraulics | E |
| Transmission | F |
| Brakes | G |
| Steering | H |
| Engine | K |

Overall Contents

i

i

Section 1 General Information

Introduction

| | |
|-----------------|-------|
| Care and Safety | 1 - 1 |
| * Service Tools | 1 - 2 |

Section 2 Care and Safety

| | |
|--------------------|-------|
| Operating Safety | 1 - 1 |
| Maintenance Safety | 1 - 1 |

Section 3 Routine Maintenance

Introduction

| | |
|---|-------|
| Fluids, Lubricants, Capacities and Specifications | 1 - 1 |
|---|-------|

| | |
|-------------------|-------|
| Service Schedules | 2 - 1 |
|-------------------|-------|

| | |
|------------------|-------|
| Towing a Machine | 4 - 1 |
|------------------|-------|

| | |
|---------------------------------|-------|
| Checking the Drop Box Oil Level | 5 - 1 |
|---------------------------------|-------|

| | |
|---|-------|
| Changing the Transmission Charge Filter | 6 - 1 |
|---|-------|

| | |
|---------------------------|-------|
| Testing the Parking Brake | 7 - 1 |
|---------------------------|-------|

Section C Electrics

| | |
|--------------|-------|
| Introduction | 1 - 1 |
|--------------|-------|

Fuses and relays

| | |
|----------------------|-------|
| Fuse Identification | 1 - 2 |
| Relay Identification | 1 - 3 |

* Transmission Controller

| | |
|------------------|-------|
| Diagnostic LED's | 2 - 1 |
|------------------|-------|

| | |
|--------------------|----------------|
| Schematic Diagrams | 4 - 1 to 4 - 8 |
|--------------------|----------------|

Section E Hydraulics

| | |
|--|--------|
| Technical Data | 1 - 1 |
| Hydraulic Contamination | 2 - 1 |
| Fault Finding | 3 - 1 |
| Schematic Diagrams and Circuit Descriptions | |
| Schematic Diagrams | 4 - 1 |
| Circuit Descriptions | |
| Drive Pump | 4 - 5 |
| Drive Motor | 4 - 6 |
| Engine/Drive Pump Coupling | 5 - 1 |
| Drive Pump | |
| Removal and Replacement | 6 - 1 |
| Minor Repairs | |
| Location of Components | 6 - 3 |
| Shaft Seal | 6 - 4 |
| Multi-Function Valves | 6 - 5 |
| Charge Pressure Relief Valve | 6 - 5 |
| Coupling Removal and Replacement | 6 - 6 |
| Servo Piston Cover Seals Renewal | 6 - 7 |
| Control Valve | 6 - 8 |
| Speed Sensor Removal and Replacement | 6 - 9 |
| Pump Cover | 6 - 10 |
| Servo Control Valve | 6 - 10 |
| Drive Motor/Drop Box Assembly | |
| Removal and Replacement | 7 - 1 |
| Minor Repairs | |
| Location of Components | 7 - 3 |
| Shaft Seal | 7 - 4 |
| Loop Flushing Valve | 7 - 5 |
| Charge Pressure Relief Valve | 7 - 5 |
| Multi-Function Block/Pressure Compensator Valve | 7 - 6 |
| Fan Pump | |
| Removal and Replacement | 8 - 1 |
| Dismantling and Assembly | 8 - 2 |
| Fan Motor | |
| Removal and Replacement | 9 - 1 |
| Dismantling and Assembly | 9 - 2 |
| Main Service Pump | |
| Removal and Replacement | 11 - 1 |
| Dismantling and Assembly | 11 - 2 |

Section E Hydraulics (continued)

Priority Valve

| | |
|-----------------------------------|--------|
| Description and Operation | 12 - 1 |
| Removal and Replacement | |
| To Machine Serial Number 775548 | 12 - 2 |
| Dismantling and Assembly | |
| To Machine Serial Number 775548 | 12 - 3 |
| Removal and Replacement | |
| From Machine Serial Number 775549 | 12 - 4 |
| Dismantling and Assembly | |
| From Machine Serial Number 775549 | 12 - 5 |

Transmission Oil Cooler Bypass Valve

| | |
|-------------------------|--------|
| Removal and Replacement | 13 - 1 |
|-------------------------|--------|

Start-up procedure

15 - 1

Section F Transmission

Introduction

| | |
|----------------|-------|
| Technical Data | 1 - 1 |
|----------------|-------|

Description and Operation

| | |
|---|-------|
| Introduction | 2 - 1 |
| Drive Circuit | 2 - 2 |
| Fan (Charge) Pump and Fan Motor Circuit | 2 - 3 |
| Brake Pressure Defeat Valve | 2 - 3 |
| Case Drain Circuit | 2 - 4 |
| Oil Cooling Circuit | 2 - 5 |
| Test Points | 2 - 6 |
| Sensors | 2 - 7 |

Drop Box

| | |
|--------------------------|-------|
| Removal and Replacement | 4 - 1 |
| Dismantling and Assembly | 5 - 1 |

Propshafts

| | |
|-------------------------|-------|
| Removal and Replacement | 6 - 1 |
|-------------------------|-------|

Section G Brakes

Introduction

| | |
|----------------|-------|
| Technical Data | 1 - 1 |
|----------------|-------|

Parking Brake

| | |
|------------|-------|
| Adjustment | 2 - 1 |
|------------|-------|

Section H Steering

Introduction

1 - 1

Technical Data

1 - 1

Section K Engine

| | |
|---------------------------------------|-------|
| Introduction | 1 - 1 |
| Technical Data | 1 - 1 |
| Engine Removal and Replacement | 2 - 1 |
| Renewing the Coupling | 2 - 5 |
| Drive Flange Replacement | 2 - 6 |
| Engine Mounting Bracket And Bushes | 2 - 6 |
| Machine Start-up Procedure | 2 - 7 |

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com