

Compact Loadalls

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmissions](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/3690-10



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.



General Information

Service Manual - Compact Loadalls

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmissions](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/3690-8



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Section 1 - General Information

Contents	Page No.
Introduction	
About This Publication	1-1
Machine Model and Serial Number	1-1
Using the Service Manual	1-1
Units of Measurement	1-1
Section Numbering	1-1
Left Side, Right Side	1-2
Cross References	1-2
Identifying Your Machine	1-3
Machine Identification Plate	1-3
Component Identification Plates	1-4
Standard Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1-5
Introduction	1-5
Bolts and Screws	1-5
Hydraulic Connections	1-9
'O' Ring Face Seal System	1-9
'Torque Stop' Hose System	1-12
Service Tools	
Numerical List	1-13
Tool Detail Reference	1-16
Section B - Frame and Bodywork	1-16
Section C - Electrics	1-20
Section E - Hydraulics	1-21
Section F - Transmission	1-26
Section H - Steering	1-27
Section K - Engine	1-28
Service Consumables	
Sealing and Retaining Compounds	1-29
Terms and Definitions	
Colour Coding	1-30
Hydraulic Schematic Colour Codes	1-30

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com