

## 506-36, 507-42, 509-42, 510-56, 512-56

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Network](#)



Publication No.  
**9803/3740-08**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.



## General Information

Service Manual - 506-36, 507-42, 509-42, 510-56, 512-56

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Network](#)



Publication No.  
**9803/3740-07**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support





# Section 1 - General Information

<b>Contents</b>	<b>Page No.</b>
<b>Applications</b>	
Introduction .....	1-1 - 1
Tables .....	1-1 - 2
Section 1 - General Information .....	1-1 - 2
Section 2 - Care and Safety .....	1-1 - 2
Section 3 - Routine Maintenance .....	1-1 - 3
Section B - Body and Framework .....	1-1 - 3
Section C - Electrics .....	1-1 - 4
Section E - Hydraulics .....	1-1 - 5
Section F - Transmission .....	1-1 - 6
Section G - Brakes .....	1-1 - 7
Section H - Steering .....	1-1 - 8
Section K - Engine .....	1-1 - 9
Section M - Electronic Data Systems .....	1-1 - 10
<b>Introduction to the Manual</b>	
Introduction .....	1-2 - 1
Scope .....	1-2 - 2
Personnel .....	1-2 - 2
Applications .....	1-2 - 2
Newest Data .....	1-2 - 2
Format .....	1-2 - 3
Left and Right Sides .....	1-2 - 4
Hydraulic Schematic Codes .....	1-2 - 5
Colour Codes .....	1-2 - 5
Electrical Device Codes .....	1-2 - 6
<b>Machine Identification</b>	
Introduction .....	1-3 - 1
Related Topics .....	1-3 - 2
Machine Identification Plate .....	1-3 - 3
Typical Product Identification Number (PIN) .....	1-3 - 3
Component Identification Plates .....	1-3 - 5
Typical Engine Identification Number .....	1-3 - 5
Transmission Identification Numbers .....	1-3 - 6
ROPS/FOPS Certification Plates .....	1-3 - 7
<b>Torque Settings</b>	
Introduction .....	1-4 - 1
Zinc Plated Fasteners and Dacromet Fasteners .....	1-4 - 2
Introduction .....	1-4 - 2
Bolts and Screws .....	1-4 - 2
Hydraulic Connections .....	1-4 - 6
'O' Ring Face Seal System .....	1-4 - 6
'Torque Stop' Hose System .....	1-4 - 9
'Positional Type' Hydraulic Adaptors .....	1-4 - 10
Fitting Procedure .....	1-4 - 10
<b>Service Tools</b>	
Introduction .....	1-5 - 1
Numerical List .....	1-5 - 2
Tool Detail Reference .....	1-5 - 5
Rivet Nuts .....	1-5 - 21
Fitting Procedure .....	1-5 - 22



<b>Contents</b>	<b>Page No.</b>
Slide Hammer Kit .....	1-5 - 23
Fitting Procedure .....	1-5 - 23
<b>Service Consumables</b>	
Introduction .....	1-6 - 1
Sealing and Retaining Compounds .....	1-6 - 2
<b>Fuel</b>	
Introduction .....	1-7 - 1
Related Topics .....	1-7 - 2
Acceptable and Unacceptable Fuels .....	1-7 - 3
Additives .....	1-7 - 4
Service Requirements for use of B20 Biodiesel .....	1-7 - 4
Fuel Types .....	1-7 - 5
Usage and Effects of Fuels .....	1-7 - 6
Sulphur Content .....	1-7 - 7
Effects of Fuel Contaminates .....	1-7 - 8

# Applications

## Introduction

This manual contains topics that relate to some or all JCB Loadall machines in the 5C group. There are several machine model codes in the family.	Machine Group	Model Code	Model Name
	5C	D	<b>506-36</b>
	5C	E	<b>507-42</b>
	5C	F	<b>509-42</b>
	5C	G	<b>510-56</b>
5C	H	<b>512-56</b>	
<b>Machine variants:</b> There are different machine variants within the same model name. This happens because of market requirements, or when the machine specification changes after a period of time.			
Use the applications tables to see which topics relate to which machine models and variants.			
<b>Important:</b> The machine model names are NOT referred to in the topics. You must refer to the applications tables for the applicable machine models			

⇒ [Tables \(□ 1-1-2\)](#)

⇒ [Section 1 - General Information \(□ 1-1-2\)](#)

⇒ [Section 2 - Care and Safety \(□ 1-1-2\)](#)

⇒ [Section 3 - Routine Maintenance \(□ 1-1-3\)](#)

⇒ [Section B - Body and Framework \(□ 1-1-3\)](#)

⇒ [Section C - Electrics \(□ 1-1-4\)](#)

⇒ [Section E - Hydraulics \(□ 1-1-5\)](#)

⇒ [Section F - Transmission \(□ 1-1-6\)](#)

⇒ [Section G - Brakes \(□ 1-1-7\)](#)

⇒ [Section H - Steering \(□ 1-1-8\)](#)

⇒ [Section K - Engine \(□ 1-1-9\)](#)

⇒ [Section M - Electronic Data Systems \(□ 1-1-10\)](#)

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**