Service Manual



515-40

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmissions

Section G - Brakes

Section H - Steering

Section K - Engine



Publication No. **9803/9900-3**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class



Section i - Front Cover

Notes:	

j-ii 9803/9900-3 j-ii

Section 1



General Information

Service Manual - 515-40

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmissions

Section G - Brakes

Section H - Steering

Section K - Engine



Publication No. **9803/9900-2**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class



Section 1 - General Information

Notes:		

1-0 9803/9900-2 **1-0**



Section 1 - General Information

Contents	Page No.
Introduction	
About This Publication	1-1
Identifying Your Machine	1-3
Standard Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	
Hydraulic Connections	1-11
Service Tools	
Numerical List	
Tool Detail Reference	1-18
Service Consumables	
Sealing and Retaining Compounds	1-35
Terms and Definitions	
Colour Coding	1-37
=	

1-i 1-i

Please Click Here To Download The Complete Manual Download Other Manuals If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com