

# Parts Manual



See "General Information"  
for New Parts Manual  
Features.

---

## **216B, 226B, 232B, 242B Skid Steer Loader**

---

BXM1-Up (Machine)  
MJH1-Up (Machine)  
RLL1-Up (Machine)  
SCH1-Up (Machine)  
CSD1-Up (Engine)  
GGA1-Up (Engine)

**Powered By 3024C Engine**

This Parts Manual is also available in .pdf Format on Compact Disc (CD-ROM) - Caterpillar Form SERP3770.

---

# Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

Delivery Date: \_\_\_\_\_

## Product Information

Model: \_\_\_\_\_

Product Identification Number: \_\_\_\_\_

Engine Serial Number: \_\_\_\_\_

Transmission Serial Number: \_\_\_\_\_

Generator Serial Number: \_\_\_\_\_

Attachment Serial Numbers: \_\_\_\_\_

Attachment Information: \_\_\_\_\_

Customer Equipment Number: \_\_\_\_\_

Dealer Equipment Number: \_\_\_\_\_

## Dealer Information

Name: \_\_\_\_\_ Branch: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Dealer Contact

Phone Number

Hours

Sales: \_\_\_\_\_

Parts: \_\_\_\_\_

Service: \_\_\_\_\_

# Informations produit et concessionnaire

Nota: Voir l'emplacement de la plaque signalétique du produit au chapitre "Informations produit" du guide d'utilisation et d'entretien.

Date de livraison: \_\_\_\_\_

## Informations produit

Modèle: \_\_\_\_\_

Numéro d'identification produit: \_\_\_\_\_

Numéro de série du moteur: \_\_\_\_\_

Numéro de série de la boîte de vitesses: \_\_\_\_\_

Numéro de série de l'alternateur: \_\_\_\_\_

Numéros de série d'équipement: \_\_\_\_\_

Informations sur l'équipement: \_\_\_\_\_

Numéro matériel client: \_\_\_\_\_

Numéro matériel concessionnaire: \_\_\_\_\_

## Informations concessionnaire

Nom: \_\_\_\_\_ Agence: \_\_\_\_\_

Adresse: \_\_\_\_\_

Contact concessionnaire

Numéro de téléphone

Heures

Ventes: \_\_\_\_\_

Pièces: \_\_\_\_\_

Service: \_\_\_\_\_

# Información del Producto/Distribuidor

Nota: Para saber la ubicación de las placas de identificación del producto, ver la sección “Información sobre identificación del producto” en el Manual de Operación y Mantenimiento.

Fecha de entrega: \_\_\_\_\_

## Información del producto

Modelo: \_\_\_\_\_

Número de identificación del producto: \_\_\_\_\_

Número de serie del motor: \_\_\_\_\_

Número de serie de la transmisión: \_\_\_\_\_

Número de serie del generador: \_\_\_\_\_

Números de serie de los accesorios: \_\_\_\_\_

Información sobre los accesorios: \_\_\_\_\_

Número del equipo del cliente: \_\_\_\_\_

Número del equipo del distribuidor: \_\_\_\_\_

## Información del distribuidor

Nombre: \_\_\_\_\_ Sucursal: \_\_\_\_\_

Dirección: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

	<u>Comunicación con el distribuidor</u>	<u>Número de teléfono</u>	<u>Horas</u>
Ventas:	_____	_____	_____
Piezas:	_____	_____	_____
Servicio:	_____	_____	_____

# Informações Sobre Produto e Revendedor

Nota: Para localizações da placa de identificação do produto, consulte a seção, "Informações Sobre Identificação do Produto" no Manual de Operação e Manutenção.

Data de Entrega: \_\_\_\_\_

## Informações Sobre o Produto

Modelo: \_\_\_\_\_

Número de Identificação do Produto: \_\_\_\_\_

Número de Série do Motor: \_\_\_\_\_

Número de Série da Transmissão: \_\_\_\_\_

Número de Série do Gerador: \_\_\_\_\_

Números de Série de Acessórios: \_\_\_\_\_

Informações Sobre Acessórios: \_\_\_\_\_

Número do Equipamento do Cliente: \_\_\_\_\_

Número do Equipamento do Revendedor: \_\_\_\_\_

## Informações Sobre o Revendedor

Nome: \_\_\_\_\_ Filial: \_\_\_\_\_

Endereço: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Contato do Revendedor

Telefone

Horas

Vendas: \_\_\_\_\_

Peças: \_\_\_\_\_

Serviço: \_\_\_\_\_

# Produkt- und Händlerinformation

Anmerkung: Für die Lage der Produkt-Identnummer und Seriennummern siehe Abschnitt "Produkt-Identinformation" im Betriebs- und Wartungshandbuch.

Lieferdatum: \_\_\_\_\_

## Produkt-Identinformation

Modell: \_\_\_\_\_

Produkt-Identnummer: \_\_\_\_\_

Seriennummer des Motors: \_\_\_\_\_

Seriennummer des Getriebes: \_\_\_\_\_

Seriennummer des Generators: \_\_\_\_\_

Seriennummern der Arbeitsgeräte: \_\_\_\_\_

Arbeitsgeräteinformation: \_\_\_\_\_

Kundennummer: \_\_\_\_\_

Händlernummer: \_\_\_\_\_

## Händlerinformation

Name: \_\_\_\_\_ Niederlassung: \_\_\_\_\_

Adresse: \_\_\_\_\_

Kontaktperson beim Händler

Telefon

Dienststunden

Verkauf: \_\_\_\_\_

Ersatzteile: \_\_\_\_\_

Service: \_\_\_\_\_

# MEMORANDA

# TABLE OF CONTENTS

Name	Page	Name	Page
<b>GENERAL INFORMATION</b> .....	A20	MUFFLER & MOUNTING GP .....	114
<b>REPAIR ALTERNATIVES</b> .....	A39	MUFFLER GP .....	116
<b>SUPPLEMENTAL COOLANT ADDITIVES</b> .....	A44	TURBOCHARGER GP .....	119
<b>MAINTENANCE PARTS</b> .....	A49	<b>FUEL SYSTEM</b> .....	123
<b>INDEX</b> .....	A71	CABLE GP-GOVERNOR CONTROL .....	123
<b>MACHINE ARRANGEMENT</b> .....	1	CONTROL GP-GOVERNOR .....	124
CHASSIS AR .....	1	FILTER GP-WATER SEP & FUEL .....	125
COMMON AR .....	1	GOVERNOR GP .....	126
CONVERSION AR-MACHINE .....	4	LINES GP-FUEL PRM & FILTER .....	132
<b>ENGINE ARRANGEMENT</b> .....	19	PUMP & MTG GP-FUEL TRANSFER .....	136
ENGINE AR .....	19	PUMP GP-FUEL INJECTION .....	137
ENGINE AR-PRIMARY .....	21	PUMP GP-FUEL PRM & PRIM FILTER .....	142
INSTALLATION AR-ENGINE .....	23	<b>ELECTRICAL AND STARTING SYSTEM</b> .....	143
<b>BASIC ENGINE</b> .....	27	ALTERNATOR GP-CHARGING .....	143
CAMSHAFT GP .....	27	BATTERY GP .....	145
COVER GP-VALVE MECHANISM .....	29	CONNECTION GP-ELECTRICAL .....	147
CRANKSHAFT GP .....	35	CONTROL GP-INTERLOCK .....	150
CYLINDER BLOCK GP .....	42	CONVERSION AR-NON-ROADING .....	151
CYLINDER HEAD GP .....	49	COVER GP-FUSE PANEL .....	152
DRAIN GP-ENGINE OIL .....	53	ELECTRONICS GP-IMPLEMENT .....	153
FLYWHEEL GP .....	54	FASTENER GP-WIRING HARNESS .....	154
GUARD GP-BELT .....	55	GLOW PLUG GP .....	155
HOUSING GP-FLYWHEEL .....	56	HEATER GP-JACKET WATER .....	156
HOUSING GP-FRONT .....	57	INSTALLATION GP-SECURITY .....	158
LIFTING GP-ENGINE .....	61	KIT-WORK TOOL CONTROL & WIRING .....	160
MOUNTING GP-ENGINE .....	63	KIT-WORK TOOL WIRING .....	162
MOUNTING GP-FAN .....	65	LAMP GP-FLOOD .....	164
PAN GP-OIL .....	66	LAMP GP-HEAD & SIGNAL .....	166
PISTON & ROD GP .....	74	LAMP GP-STOP & TAIL .....	168
PULLEY GP-CRANKSHAFT .....	77	LAMP GP-WARNING BEACON .....	170
PULLEY GP-WATER PUMP .....	78	LIGHTING GP-FLOOD .....	171
VALVE MECHANISM GP .....	80	LIGHTING GP-ROADING .....	173
<b>LUBRICATION SYSTEM</b> .....	83	LIGHTING GP-STOP & TAIL .....	177
FILTER GP-ENGINE OIL .....	83	LIGHTING GP-WARNING BEACON .....	178
<b>COOLING SYSTEM</b> .....	84	SENSOR GP-TEMP & PRESS .....	179
COOLER GP-FLTR BASE & ENG OIL .....	84	SERVICE GP-MACHINE .....	182
MOUNTING GP-RAD & OIL COOLER .....	85	STARTING MOTOR GP-ELECTRIC .....	183
PUMP GP-WATER .....	89	SWITCH GP-PRESSURE .....	186
RADIATOR & HYD OIL COOLER GP .....	98	WARNING GP-BACKUP .....	187
RADIATOR & OIL COOLER MTG GP .....	102	WIRING GP-AIR CONDITIONER .....	188
<b>AIR INLET AND EXHAUST SYSTEM</b> .....	108	WIRING GP-CHASSIS .....	189
AIR CLEANER GP .....	108	WIRING GP-ENGINE .....	192
LINES GP-AIR .....	110	WIRING GP-HORN .....	196
MANIFOLD GP-EXHAUST .....	112	WIRING GP-MACHINE .....	197
		WIRING GP-REAR LIGHTING .....	199
		WIRING GP-WORK TOOL .....	200
		<b>POWER TRAIN</b> .....	204
		AXLE GP .....	204
		CONTROL GP-PARKING BRAKE .....	207
		DRIVE GP-TANDEM .....	223
		FILTER & LINES GP-HYDRAULIC .....	225



# TABLE OF CONTENTS

Name	Page	Name	Page
FILTER GP-OIL . . . . .	229	LINES GP-LIFT CYLINDER . . . . .	418
LINES GP-HYDROSTATIC . . . . .	230	LINES GP-LOAD CONTROL VALVE . . . . .	430
MANIFOLD GP-RETURN . . . . .	234	LINES GP-PILOT . . . . .	434
MOTOR & MTG GP-HYDROSTATIC . . . . .	238	LINES GP-PUMP . . . . .	442
MOTOR GP-PISTON . . . . .	239	LINES GP-TILT CYLINDER . . . . .	450
MOUNTING GP-PUMP . . . . .	241	LINES GP-WORK TOOL . . . . .	480
POWER TRAIN AR . . . . .	242	MANIFOLD & MTG GP-CONTROL . . . . .	495
PUMP & MTG GP-HYDROSTATIC . . . . .	243	MANIFOLD GP-CONTROL . . . . .	498
PUMP GP-PISTON . . . . .	247	MOTOR & MTG GP-HYDRAULIC FAN . . . . .	501
TIRE & RIM GP . . . . .	251	MOTOR GP-GEAR . . . . .	505
VALVE & MTG GP-SOLENOID . . . . .	267	MOUNTING GP-CYLINDER . . . . .	509
VALVE GP-SOLENOID . . . . .	270	PLUG GP-PILOT VALVE . . . . .	512
WHEEL & TIRE AR . . . . .	271	PUMP & MTG GP-WORK TOOL . . . . .	513
		PUMP GP-GEAR . . . . .	517
<b>FRAME AND BODY . . . . .</b>	<b>279</b>	TANK & MTG GP-HYDRAULIC . . . . .	519
BUMPER GP . . . . .	279	TANK GP-HYDRAULIC . . . . .	520
CONVERSION AR-ROADING . . . . .	281	VALVE & LINES GP-COUPLER . . . . .	521
CONVERSION GP-ROADING . . . . .	292	VALVE & MTG GP-CONTROL . . . . .	536
COUNTERWEIGHT GP . . . . .	296	VALVE & MTG GP-DIVERTER . . . . .	540
ENCLOSURE GP-ENGINE . . . . .	301	VALVE & MTG GP-SOLENOID . . . . .	543
FRAME & MTG GP-MACHINE . . . . .	303	VALVE GP-CONTROL . . . . .	545
FRAME GP-BLADE . . . . .	308	VALVE GP-DIVERTER . . . . .	553
GUIDE GP-LINES . . . . .	309	VALVE GP-PILOT . . . . .	555
KIT-ROADING CONVERSION . . . . .	310	VALVE GP-RELIEF . . . . .	557
LIFTING GP-MACHINE . . . . .	311	VALVE GP-SOLENOID . . . . .	558
MIRROR & MTG GP-REAR VIEW . . . . .	315		
MOUNTING GP-REGISTRATION . . . . .	317	<b>WORK TOOLS . . . . .</b>	<b>562</b>
MOUNTING GP-ROADING LIGHTS . . . . .	319	ARM GP-MATERIAL HANDLING . . . . .	562
SUPPRESSION GP-SOUND . . . . .	321	BLADE AR . . . . .	563
		BLADE GP-ANGLING . . . . .	566
<b>HYDRAULIC SYSTEM . . . . .</b>	<b>322</b>	BUCKET AR-GRAPPLE . . . . .	570
ACCUMULATOR & MTG GP- HYDRAULIC . . . . .	322	BUCKET AR-MULTIPURPOSE . . . . .	572
ADAPTER GP-OIL LINE . . . . .	323	BUCKET GP-DIRT . . . . .	575
CONTROL GP-HANDLE . . . . .	324	BUCKET GP-GENERAL PURPOSE . . . . .	579
CONTROL GP-PILOT OPERATED HYD . . . . .	332	BUCKET GP-GRAPPLE . . . . .	585
CYLINDER & MTG GP-ANGLE BLADE . . . . .	352	BUCKET GP-LIGHT MATERIAL . . . . .	588
CYLINDER & MTG GP-LIFT ARM . . . . .	354	BUCKET GP-MULTIPURPOSE . . . . .	590
CYLINDER GP-BUCKET . . . . .	359	BUCKET GP-UTILITY . . . . .	593
CYLINDER GP-COUPLER . . . . .	360	CARRIAGE & FORK AR . . . . .	596
CYLINDER GP-GRAPPLE . . . . .	361	CONVERSION AR-QUICK COUPLER . . . . .	597
CYLINDER GP-HYDRAULIC . . . . .	363	CONVERSION GP-WORK TOOL . . . . .	603
CYLINDER GP-LIFT . . . . .	364	COUPLER AR-QUICK . . . . .	604
CYLINDER GP-TILT . . . . .	367	COUPLER GP-QUICK . . . . .	606
FITTING GP-HYDRAULIC . . . . .	369	COVER GP-LINES . . . . .	609
HANDLE GP-MODULAR . . . . .	372	CYLINDER & LINK GP-COUPLER . . . . .	610
HYDRAULIC AR . . . . .	374	EDGE GP-BIT & CUTTING . . . . .	612
KIT-HIGH FLOW CONVERSION . . . . .	382	EDGE GP-CUTTING . . . . .	613
KIT-QUICK COUPLER CONVERSION . . . . .	388	FORK AR-GRAPPLE . . . . .	617
LINES GP-BUCKET . . . . .	391	FORK GP-GRAPPLE . . . . .	619
LINES GP-CONNECTING . . . . .	396	FORK GP-PALLET . . . . .	622
LINES GP-GRAPPLE . . . . .	400	FORK GP-UTILITY . . . . .	623
LINES GP-HYDRAULIC FAN . . . . .	404	GRAPPLE & CYLINDER GP-UTILITY . . . . .	628
LINES GP-HYDRAULIC OIL COOLER . . . . .	416	GRAPPLE GP-UTILITY . . . . .	630
		HANDLE & PIN GP-COUPLER . . . . .	631
		HANDLE GP-COUPLER . . . . .	633

# TABLE OF CONTENTS

Name	Page	Name	Page
KIT-ROADING PLATE & MOUNTING . . . . .	635	PANEL AR-INSTRUMENT . . . . .	727
LINK GP-COUPLER . . . . .	636	PANEL GP-INSTRUMENT . . . . .	728
LOCK GP-QUICK COUPLER . . . . .	638	PANEL GP-SIDE . . . . .	732
PLATE GP-ROADING . . . . .	639	PEDAL GP-GOVERNOR . . . . .	734
PUMP GP-DIAPHRAGM . . . . .	641	PLATFORM GP-OPERATOR . . . . .	736
SPRING GP-BLADE . . . . .	643	SEAL GP-CAB . . . . .	738
STEP GP-MATERIAL HANDLING ARM . . . . .	644	SEAT BELT GP . . . . .	739
STRAINER GP-WATER . . . . .	645	SEAT GP . . . . .	747
TANK & MTG GP-WATER . . . . .	646	SPRING GP-GAS . . . . .	749
TANK GP-WATER . . . . .	653	SUSPENSION GP-SEAT . . . . .	750
TOOTH GP-UNI . . . . .	654	VISOR GP-CAB . . . . .	751
		WINDOW GP-CAB . . . . .	753
<b>OPERATOR STATION . . . . .</b>	<b>655</b>		
ACCUMULATOR GP-REFRIGERANT . . . . .	655	<b>SERVICE EQUIPMENT AND SUPPLIES . . . . .</b>	<b>760</b>
AIR CONDITIONER & MOUNTING GP . . . . .	657	FILM GP . . . . .	760
AIR CONDITIONER AR . . . . .	658	PLATE & FILM GP . . . . .	773
AIR CONDITIONER GP . . . . .	659		
ARMREST & MOUNTING GP . . . . .	661	<b>PART NUMBER INDEX . . . . .</b>	<b>B1</b>
ARMREST GP . . . . .	662		
BOX GP-STORAGE . . . . .	664		
CAB AR-ENCLOSED ROPS . . . . .	665		
CAB GP-ENCLOSED ROPS . . . . .	666		
COMPRESSOR & MOTOR GP-REFRIG . . . . .	667		
COMPRESSOR & MTG GP-REFRIG . . . . .	668		
CONDENSER & MTG GP-REFRIGERANT . . . . .	669		
COUPLING GP-DRIVE . . . . .	671		
COVER GP-CONSOLE . . . . .	673		
COVER GP-INSTRUMENT PANEL . . . . .	675		
DOOR & MTG GP-CAB . . . . .	676		
DOOR GP-CAB . . . . .	682		
DUCT & CONTROL GP . . . . .	687		
FRAME GP-WINDOW . . . . .	688		
GAUGE & WARNING GP . . . . .	690		
GUARD GP-ROPS/FOPS . . . . .	693		
HANDHOLD GP . . . . .	694		
HEATER & MTG GP-CAB . . . . .	695		
HEATER AR-CAB . . . . .	696		
HEATER GP-CAB . . . . .	697		
HOUSING AS-SIDE . . . . .	700		
INSTALLATION AR . . . . .	701		
INSTALLATION GP . . . . .	704		
KIT-CAB DOOR & MOUNTING . . . . .	706		
KIT-CAB SEAL . . . . .	708		
LEVER GP-GOVERNOR . . . . .	709		
LINER GP-CAB . . . . .	710		
LINER-CAB . . . . .	711		
LINES GP-AIR CONDITIONER . . . . .	712		
LINES GP-HEATER . . . . .	720		
LITERATURE GP . . . . .	721		
MIRROR GP-REAR VIEW . . . . .	722		
MODULE GP-WARNING INDICATOR . . . . .	723		
MOUNTING GP-ROPS . . . . .	726		

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**