

Parts Manual

TH220B Telehandler

S/N TBF00100 thru TBF00512



Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

Delivery Date: _____

Product Information

Model: _____

Product Identification Number: _____

Engine Serial Number: _____

Transmission Serial Number: _____

Generator Serial Number: _____

Attachment Serial Numbers: _____

Attachment Information: _____

Customer Equipment Number: _____

Dealer Equipment Number: _____

Dealer Information

Name: _____ Branch: _____

Address: _____

Dealer Contact

Phone Number

Hours

Sales: _____

Parts: _____

Service: _____

EFFECTIVITY PAGE

July 14, 2006 - A - Original issue of manual.

February 2, 2007- B - Revised Manual, added Tier III engine information (Section C).

July 11, 2008 - C - Revised Manual

October 27, 2010 - D - Revised ending Serial Number to TBF00512.

EFFECTIVITY PAGE

S/N TBF00224 TO TBF00512
TIER III ENGINE INFORMATION LOCATED IN SECTION C

This Page Intentionally Left Blank

TABLE OF CONTENTS

Name	Page	Name	Page
		FAN AR-SUCTION	70
		FAN GP-SUCTION	71
		LINES GP-COOLANT	72
		PUMP GP-WATER	78
		RADIATOR & MOUNTING GP	80
		RADIATOR GP	82
		RECOVERY GP-COOLANT	85
MAINTENANCE PARTS	A10		
INDEX	A13	AIR INLET AND EXHAUST SYSTEM	87
MACHINE ARRANGEMENT	1	AIR CLEANER GP	87
BOOM & CHASSIS AR	1	ELBOW GP-AIR INLET	89
CHASSIS AR	2	INDICATOR GP-AIR FILTER CHANGE	90
COMMON AR	2	LINES GP-AIR	91
CONVERSION AR-MACHINE	2	MUFFLER GP	94
		SHIELD GP-EXHAUST	95
ENGINE ARRANGEMENT	4	TURBOCHARGER GP	96
ENGINE & TRANSMISSION AR	4	FUEL SYSTEM	100
ENGINE AR-PRIMARY	9	LINES GP-FUEL	100
INSTALLATION AR-ENGINE	11	PUMP GP-FUEL INJECTION	102
		PUMP GP-FUEL TRANSFER & FILTER	114
BASIC ENGINE	13	TANK & MTG GP-FUEL	116
BELT GP-SERPENTINE	13	TANK GP-FUEL	119
BELT TENSIONER GP	15	ELECTRICAL AND STARTING SYSTEM	121
CAMSHAFT GP	16	ALTERNATOR GP-CHARGING	121
COVER GP-FRONT HOUSING	17	BATTERY & WIRING GP	124
COVER GP-VALVE MECHANISM	23	CONNECTION GP-ELECTRICAL	129
CRANKSHAFT GP	25	CONTROL & MTG GP-MACHINE	130
CYLINDER BLOCK GP	27	ELECTRONICS GP-MACHINE	131
CYLINDER HEAD GP	30	GLOW PLUG GP	133
DRAIN GP-ENGINE OIL	32	HEATER GP-JACKET WATER	134
DRIVE GP-FAN	34	INDICATOR GP-LOAD	138
FASTENER GP-PULLEY	36	INSTALLATION AR-SECURITY	139
FLYWHEEL GP	37	INSTALLATION GP-SECURITY	140
HOUSING GP-FLYWHEEL	39	LAMP GP-FLOOD	144
HOUSING GP-FRONT	42	LAMP GP-HEAD	145
LIFTING GP-ENGINE	44	LAMP GP-HEAD & SIGNAL	147
MOUNTING GP-ENGINE	45	LAMP GP-REGISTRATION PLATE	151
MOUNTING GP-ENGINE & TMSN	46	LAMP GP-STOP & TAIL	154
MOUNTING GP-FAN DRIVE	48	LAMP GP-WARNING BEACON	156
PAN GP-OIL	51	LIGHTING GP-FLOOD	157
PISTON & ROD GP	55	LIGHTING GP-FRONT	161
PLUG GP-ENGINE	56	LIGHTING GP-ROADING	163
VALVE MECHANISM GP	59	LIGHTING GP-SIGNAL	165
LUBRICATION SYSTEM	60	LIGHTING GP-WARNING	167
FILTER GP-ENGINE OIL	60	MOUNTING GP-LIGHTING	169
PUMP GP-ENGINE OIL	62	MOUNTING GP-WIRING	170
COOLING SYSTEM	63	PANEL GP-FUSE	171
CONNECTION GP-WATER	63	ROADING AR	173
COOLER GP-ENGINE OIL	65	SENSOR GP-POSITION	174
COOLER GP-FLTR BASE & ENG OIL	68	SENSOR GP-SPEED	175
COOLING AR-HIGH AMBIENT TEMP	69	SERVICE GP-MACHINE	176
FAN AR-REVERSIBLE	69	STARTING MOTOR GP-ELECTRIC	178
		SWITCH GP-AUXILIARY	179

TABLE OF CONTENTS


Name	Page	Name	Page
SWITCH GP-DIFFERENTIAL LOCK	180	ENCLOSURE GP-ENGINE	310
SWITCH GP-DISCONNECT	181	FENDER & MOUNTING GP	314
SWITCH GP-ROCKER	182	FRAME GP	315
		FRAME GP-LOADER.	318
WIRING GP-AIR CONDITIONER	186	GUARD GP-BOTTOM	319
WIRING GP-AUXILIARY	189	GUARD GP-ENGINE	320
WIRING GP-BOOM	190	HITCH AR	324
WIRING GP-CAB	196	HITCH GP	325
WIRING GP-CHASSIS	214	HITCH GP-TOWING	331
WIRING GP-COUPLER	218	HOOD GP	339
WIRING GP-ELECTRONIC CONTROL	221	PANEL GP-SOUND SUPPRESSION	343
WIRING GP-ENGINE	223	PIN GP-HITCH	346
WIRING GP-FAN	226	REFLECTOR GP	347
WIRING GP-TRAILER	229	BRAKING SYSTEM	350
WIRING GP-TRANSMISSION		CONTROL GP-PARKING BRAKE	350
CONTROL	230	CONTROL GP-SERVICE BRAKE	352
		CYLINDER GP-BRAKE	353
POWER TRAIN	231	LEVER GP-HAND CONTROL	356
AXLE & MOUNTING GP	231	LEVER AS	357
AXLE AR	233	LEVER GP-HAND CONTROL	359
AXLE GP-DRIVE & STEERING	234	LINES GP-SERVICE BRAKE	360
AXLE GP-FRONT	240	MOUNTING GP-CABLE	363
CLUTCH GP	243		
COUNTERSHAFT		STEERING SYSTEM	365
GP-TRANSMISSION	245	CYLINDER GP-STEERING	365
DIFFERENTIAL & BEVEL GEAR GP	246	KNOB GP-STEERING	366
DIFFERENTIAL GP	252	LINES GP-STEERING	367
DRIVE GP-FLEXIBLE COUPLING	254	STEERING COLUMN GP	370
FILTER & MTG GP-POWER TRAIN	255	STEERING GP-HYDRAULIC	376
FILTER GP-OIL	256		
FLANGE GP-WHEEL	257	HYDRAULIC SYSTEM	377
GEAR GP-BEVEL & PINION	258	COOLER & MTG GP-HYDRAULIC OIL	377
HOUSING & FLANGE GP-AXLE	259	COOLER GP-HYDRAULIC OIL	379
HOUSING GP-AXLE	263	CYLINDER & MTG GP-BOOM	380
LINES GP-DIFFERENTIAL LOCK	267	CYLINDER & MTG GP-CARRIAGE	382
LINES GP-TRANSMISSION OIL	268	CYLINDER & MTG	
PLANETARY GP-FINAL DRIVE	270	GP-COMPENSATING	384
POWER TRAIN AR	271	CYLINDER & MTG GP-COUPLER	385
SHAFT GP-DRIVE	271	CYLINDER & MTG GP-TELESCOPING	389
SHAFT GP-INPUT	274	CYLINDER & MTG GP-TILT	393
SHAFT GP-OUTPUT	275	CYLINDER & VALVE GP-BOOM	394
SHAFT GP-PUMP DRIVE	277	CYLINDER & VALVE GP-TELESCOPE	395
TIRE & RIM GP	278	CYLINDER & VALVE GP-TILT	399
TRANSMISSION AR	281	CYLINDER GP-BOOM	400
TRANSMISSION GP	282	CYLINDER GP-CARRIAGE	401
VALVE GP-TIRE	292	CYLINDER GP-COMPENSATING	402
WHEEL AR	293	CYLINDER GP-COUPLER	404
		CYLINDER GP-HITCH	405
FRAME AND BODY	296	CYLINDER GP-HYDRAULIC	406
BRACE GP-CYLINDER	296	CYLINDER GP-MULTIPURPOSE	
CONVERSION AR-ROADING	300	BUCKET	407
CONVERSION GP-ROADING	306	CYLINDER GP-TELESCOPING	409
COVER GP-ACCESS	308	CYLINDER GP-TILT	412
DOOR GP-ACCESS	309	DRAIN GP-ECOLOGY	413

TABLE OF CONTENTS

Name	Page	Name	Page
FITTING GP-HYDRAULIC	414	CARRIAGE GP-FORK	565
HYDRAULIC	415	CARRIAGE GP-ROTATING.	567
LINES GP-AUXILIARY HYDRAULIC	419	CARRIAGE GP-SIDESHIFT	570
LINES GP-BOOM	428	CLAM AS-MULTIPURPOSE BUCKET	571
LINES GP-CHASSIS.	433	COUPLER GP-QUICK	572
LINES GP-CONNECTING.	435	EDGE GP-CUTTING.	575
LINES GP-COUPLER	445	FORK GP-BLOCK	578
LINES GP-HYDRAULIC	446	FORK GP-GRAPPLE	579
LINES GP-HYDRAULIC FAN	448	FORK GP-PALLET	581
LINES GP-MULTIPURPOSE BUCKET.	449	GUARD GP-BUCKET	584
LINES GP-PUMP.	453	GUARD GP-FORK	587
LINES GP-TRAILER	458	HANDLER AR-BALE	589
MOTOR & MTG GP-HYDRAULIC FAN.	460	HANDLER GP-BALE	591
MOUNTING GP-CYLINDER	461	HOOK GP-LIFTING	593
PUMP & MTG GP-HYDRAULIC	462	HOPPER GP	594
PUMP & MTG GP-HYDRAULIC FAN	463	PLATE GP-CARRIAGE	595
PUMP GP-PISTON	465		
ROTATING GP-PUMP	466	OPERATOR STATION	596
TANK & MTG GP-HYDRAULIC.	467	ACCUMULATOR GP-REFRIGERANT	596
TANK GP-HYDRAULIC.	469	AIR CONDITIONER & MOUNTING GP	598
TRAY GP-SUPPORT.	471	AIR CONDITIONER AR	600
VALVE & MTG GP-CONTROL	473	AIR CONDITIONER GP.	601
KIT-HYDRAULIC	477	ARMREST GP	603
VALVE & MTG GP-DIVERTER	478	BOX GP-STORAGE	604
VALVE & MTG GP-MAIN CONTROL	481	CAB AR-ENCLOSED ROPS	605
VALVE AR-BANK 4	483	CAB AR-OPEN ROPS	607
VALVE GP-AUXILIARY	483	CAB GP-ENCLOSED ROPS	608
VALVE GP-BANK 4	484	CAB GP-OPEN ROPS	611
VALVE GP-COMBINATION.	487	COMPRESSOR GP-REFRIGERANT	613
VALVE GP-CONTROL.	488	CONDENSER & MTG GP	
VALVE GP-DIVERTER	491	REFRIGERANT.	616
VALVE GP-MANIFOLD	493	CONTROL GP-ACCELERATION	617
IMPLEMENTS	495	CONTR OL G P-A IR CONDI TIONER	618
BOOM AR	495	CONTROL GP-HANDLE	619
BOOM GP.	506	CONTROL GP-JOYSTICK.	620
JD HYDRAULIC COUPLER	539	CONTROL GP-TRANSMISSION.	622
INDICATOR GP-RADIUS & ANGLE	542	CONVERSION AR-AIR CONDITIONER	623
INSTALLATION AR-LOAD SNSR IND	543	COVER GP-CAB	624
LINKAGE GP-WORK TOOL	544	DOOR GP-CAB	625
STOP GP-BOOM.	545	DUCT GP-AIR	631
WORK TOOLS	546	GUARD GP-WINDOW.	634
ARM GP-MATERIAL HANDLING	546	HAMMER & MOUNTING GP.	635
BOOM GP-TRUSS	547	HEATER & MTG GP-CAB	636
BUCKET AR-GENERAL PURPOSE	548	HEATER GP-CAB	638
BUCKET AR-GRAPPLE	549	HORN GP-ELECTRIC	643
BUCKET AR-MULTIPURPOSE.	550	INSTALLATION GP-RADIO.	644
BUCKET AS-LIGHT MATERIAL	552	LINER GP-CAB	645
BUCKET GP-GRAPPLE.	555	LINES GP-AIR CONDITIONER	646
BUCKET GP-LIGHT MATERIAL	557	LINES GP-HEATER.	648
BUCKET GP-MATERIAL HANDLING	560	MIRROR GP	650
BUCKET GP-MULTIPURPOSE.	561	MIRROR GP-REAR VIEW.	651
BULLDOZER AS	562	MOTOR GP-WINDOWWIPER.	658
BUCKET AS.	563	MOUNTING GP-CAB	660
CARRIAGE AR-FORK	564		

TABLE OF CONTENTS

 Name	Page	Name	Page
PANEL GP-INSTRUMENT	661		
PANEL GP-SOUND SUPPRESSION	663		
SCREEN GP-SUN	664		
SEAT BELT GP	665		
SEAT GP	667		
SEAT GP-SUSPENSION	669		
TANK GP-WINDOW WASHER	671		
TRIM GP-CAB	672		
WINDOW GP-CAB	680		
WIPER & WASHER GP-WINDOW	681		
SERVICE EQUIPMENT AND SUPPLIES	685		
BRACKET GP-TRANSPORT	685		
CHART GP-LIFT/LOAD EXTENSION	686		
FILM GP	687		
GREASE GUN GP	694		
PARTS GP-MISCELLANEOUS	695		
PLATE & FILM GP	695		
PLATE GP-IDENTIFICATION	750		
PART NUMBER INDEX	B1		
TIER III	C1		



MAINTENANCE PARTS

DESCRIPTION	PART NUMBER	QTY	WHERE USED	PAGE
AIR INLET AND EXHAUST SYSTEM				
FILTER ELEMENT AS-AIR (PRIMARY)	206-5234	1	AIR CLEANER GP	88
FILTER ELEMENT AS-AIR (SECONDARY)	206-5235	1	AIR CLEANER GP	88
BASIC ENGINE				
BELT-SERPENTINE	236-3842	1	BELT GP-SERPENTINE	13
BELT-SERPENTINE (SERPENTINE)	257-5523	1	BELT GP-SERPENTINE	14
CAP AS (ENGINE OIL FILLER)	136-3608	1	COVER GP-VALVE MECHANISM	23
GASKET (VALVE COVER)	225-6451	1	COVER GP-VALVE MECHANISM	23
HOSE (CRANKCASE BREATHER)	198-9109	1	COVER GP-VALVE MECHANISM	23
PLUG-DRAIN (ENGINE OIL)	7C-0351	2	PAN GP-OIL	51
		2	PAN GP-OIL	53
COOLING SYSTEM				
BELT GP-SERPENTINE	236-3841	1	FAN AR-SUCTION	70
	266-6990	1	FAN AR-REVERSIBLE	69
CONNECTION GP-WATER (TEMPERATURE REGULATOR)	254-2269	1	CONNECTION GP-WATER	64
REGULATOR-WATER TEMPERATURE	225-6908	1	CONNECTION GP-WATER	63
ELECTRICAL AND STARTING SYSTEM				
BATTERY (12-VOLT, MAINTENANCE FREE)	3T-5760	2	BATTERY & WIRING GP	126
BATTERY (12-VOLT, 900-AMPERE)	9X-3404	1	BATTERY & WIRING GP	124
BELT-DRIVE	9X-8139	1	LAMP GP-WARNING BEACON	156
BLOCK-MINIFUSE	124-9636	2	WIRING GP-CAB	200
		2	WIRING GP-CAB	209
		2	WIRING GP-CAB	212
CIRCUIT BREAKER AS (120-AMPERE)	216-4970	1	WIRING GP-ENGINE	223
CIRCUIT BREAKER AS (135-AMPERE)	171-2213	1	ALTERNATOR GP-CHARGING	121
CIRCUIT BREAKER AS (60-AMPERE)	171-2208	1	WIRING GP-ENGINE	223
ELEMENT AS-JACKET WATER HEATER	219-3271	1	HEATER GP-JACKET WATER	136
ELEMENT AS-JACKET WATER HEATER (120-VOLT, 1000-WATT)	219-3273	1	HEATER GP-JACKET WATER	137
FUSE (10-AMPERE)	3K-8782	1	LAMP GP-WARNING BEACON	156
	113-8490	21	PANEL GP-FUSE	171
FUSE (15-AMPERE)	113-8491	7	PANEL GP-FUSE	171
FUSE (20-AMPERE)	113-8492	2	PANEL GP-FUSE	171
	232-6312	1	WIRING GP-ENGINE	223
FUSE (25-AMPERE)	113-8493	1	PANEL GP-FUSE	171
GASKET	111-7899	1	WIRING GP-CAB	197
GLOW PLUG (12-VOLT)	232-6662	4	GLOW PLUG GP	133
KEY AS-ELECTRONIC (SECURITY)	206-5162	2	ELECTRONICS GP-MACHINE	131
		1	INSTALLATION GP-SECURITY	142
		2	SERVICE GP-MACHINE	176

MAINTENANCE PARTS

DESCRIPTION	PART NUMBER	QTY	WHERE USED	PAGE
	206-5185	1	INSTALLATION GP-SECURITY	142
KEY (BATTERY DISCONNECT)	8H-5306	1	SWITCH GP-DISCONNECT	181
LAMP AS (RED, GREEN, LED, 12-VOLT)	165-5655	1	INSTALLATION GP-SECURITY	142
		1	INSTALLATION GP-SECURITY	143
LAMP GP-FLOOD (12-VOLT) (LH)	212-9348	1	LIGHTING GP-FLOOD	160
LAMP GP-FLOOD (12-VOLT) (RH)	212-9349	1	LIGHTING GP-FLOOD	160
LAMP GP-HEAD & SIGNAL (HIGH, LOW BEAM, LH)	295-3378	1	MOUNTING GP-LIGHTING	169
LAMP GP-HEAD & SIGNAL (HIGH, LOW BEAM, RH)	295-3377	1	MOUNTING GP-LIGHTING	169
LAMP GP-WARNING BEACON (MAGNETIC MOUNT)	185-7016	1	LAMP GP-WARNING BEACON	156
LAMP-HEAD	9W-3324	1	LAMP GP-HEAD & SIGNAL	147
		1	LAMP GP-HEAD & SIGNAL	148
		1	LAMP GP-HEAD & SIGNAL	149
		1	LAMP GP-HEAD & SIGNAL	150
LAMP (12-VOLT)	210-8754	1	WIRING GP-CAB	196
LAMP (12-VOLT, 10-WATT)	195-9712	1	LAMP GP-REGISTRATION PLATE	151
LAMP (12-VOLT, 21-WATT)	9W-3326	2	LAMP GP-STOP & TAIL	154
		2	LAMP GP-STOP & TAIL	155
	226-4560	1	LAMP GP-HEAD & SIGNAL	147
		1	LAMP GP-HEAD & SIGNAL	148
		1	LAMP GP-HEAD & SIGNAL	149
		1	LAMP GP-HEAD & SIGNAL	150
LAMP (12-VOLT, 5-WATT)	084-4348	1	LAMP GP-STOP & TAIL	154
		1	LAMP GP-STOP & TAIL	155
	226-4561	1	LAMP GP-HEAD & SIGNAL	147
		1	LAMP GP-HEAD & SIGNAL	148
		1	LAMP GP-HEAD & SIGNAL	149
		1	LAMP GP-HEAD & SIGNAL	150
LAMP (12-VOLT, 55-WATT)	9W-0607	1	LAMP GP-FLOOD	144
LAMP (12-VOLT, 55-WATT, HID)	9X-8118	1	LAMP GP-WARNING BEACON	156
LENS (AMBER) (DIRECTION)	209-3090	1	LAMP GP-STOP & TAIL	154
		1	LAMP GP-STOP & TAIL	155
LENS AS (HEADLIGHT)	228-6050	1	LAMP GP-HEAD & SIGNAL	149
		1	LAMP GP-HEAD & SIGNAL	150
LENS (RED) (FOG)	209-3092	1	LAMP GP-STOP & TAIL	155
LENS (RED) (STOP, TAIL)	209-3093	1	LAMP GP-STOP & TAIL	154
		1	LAMP GP-STOP & TAIL	155
LENS (WHITE) (REVERSE)	209-3091	1	LAMP GP-STOP & TAIL	154
LOCK-MINIFUSE	124-9637	2	WIRING GP-CAB	200
		2	WIRING GP-CAB	208
		2	WIRING GP-CAB	212
ENGINE ARRANGEMENT				
FILTER AS-ENGINE OIL	7W-2326	1	ENGINE AR-PRIMARY	9
		1	ENGINE AR-PRIMARY	10
FRAME AND BODY				
REFLECTOR	9R-1499	2	REFLECTOR GP	347

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com