

DX140LC

Shop Manual

K1034080E

Serial Number 5001 and Up

Table of Contents

Safety

Track Excavator Safety.....	SP000014
-----------------------------	----------

Specifications

Specification for DX140LC.....	SP001313
--------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Cabin.....	SP000943
Counterweight.....	SP000940
Fuel Tank.....	SP001320
Fuel Transfer Pump.....	SP000021
Swing Bearing.....	SP000022
Swing Reduction Gear.....	SP000921

Lower Structure and Chassis

Track Assembly.....	SP001321
---------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump).....	SP001326
---------------------------------	----------

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	SP001327
Accumulator.....	SP000028
Center Joint (Swivel).....	SP000029
Cylinders.....	SP000030

Swing Motor.....	SP000985
Travel Moter.....	SP001346
Main Pump.....	SP001329
Main Control Valve	SP001029
Remote Control Valve (Work Lever / Joystick)	SP000069
Travel Control Valve (with Damper).....	SP000070
Solenoid Valve Assembly	SP000445
Breaker EPPR Valve (Opt)	SP000192
Hydraulic Schematic (DX140LC).....	SP001330

Electrical System

Electrical System	SP001038
Electrical Schematic (DX140LC)	SP001357

Attachments

Boom and Arm.....	SP001331
Bucket.....	SP000939

Safety

Track Excavator Safety

Edition 1

MEMO

Table of Contents

Track Excavator Safety

Safety Precautions	5
Applicable Models	5
To the Operator of a Excavator	6
General Safety Essentials	10
Location of Safety Labels	11
Summary of Safety Precautions for Lifting in Digging Mode.....	12
Unauthorized Modifications	13
General Hazard Information	13
Before Starting Engine	23
Machine Operation	27
Maintenance	34
Battery	43
Towing	45
Shipping and Transportation	46
Lifting With Sling	46

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com