

DX235NLC

Shop Manual

950106-00303

Serial Number 50001 and Up

DX235LC

Serial Number 50001 and Up

Pub.No. 950106-00303



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Table of Contents

Safety

Track Excavator Safety	SP000014
------------------------------	----------

Specifications

Specification for DX235NLC	SP002177
----------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000016
Standard Torques	SP000813

Upper Structure

Cabin	SP000943
Counterweight.....	SP000940
Fuel Tank.....	SP001014
Fuel Transfer Pump	SP000021
Swing Bearing.....	SP001109
Swing Reduction Gear	SP000915

Lower Structure and Chassis

Track Assembly	SP000911
----------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump)	SP001069
----------------------------------	----------

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP002178
Accumulator.....	SP000028
Center Joint (Swivel).....	SP001620

Cylinders.....	SP000030
Swing Motor.....	SP001013
Travel Motor.....	SP001621
Gear Pump.....	SP000931
Main Control Valve.....	SP001024
Axial Piston Pump.....	SP001008
PTO Server.....	SP000933
Remote Control Valve (Work Lever / Joystick).....	SP001646
Travel Control Valve (with Damper).....	SP001647
Solenoid Valve Assembly.....	SP001622
Breaker EPPR Valve (Opt).....	SP000192
Hydraulic Schematic (DX225NLC/DX235NLC).....	SP001057

Electrical System

Electrica System.....	SP002182
Electrical Schematic (DX180LC/DX225LC/DX225NLC/DX235NLC)..	SP000936

Attachments

Boom and Arm.....	SP000937
Bucket.....	SP000939

Safety

Track Excavator Safety

Edition 1

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com