DX340LC

Shop Manual
K1009684E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety
Track Excavator SafetySP000014
Specifications
Specification for DX340LCSP000244
General Maintenance
General Maintenance Procedures
Standard TorquesSP000017
Upper Structure
Cabin
CounterweightSP000019
Fuel TankSP000277
Swing BearingSP000022
Swing Reduction Gear
Lower Structure and Chassis
Track Assembly
Air ConditionerSP000025
Engine and Drive Train
Drive Coupling (Main Pump)
Hydraulics
Hydraulic System Troubleshooting, Testing and Adjustment SP000276
AccumulatorSP000028
Center Joint (Swivel)
CylindersSP000030

Swing MotorSP000261	1
Travel MotorSP000253	3
Main PumpSP000278	3
Gear PumpSP000260)
Main Control Valve SP000034	1
Remote Control Valve (Work Lever / Joystick)SP000069)
Travel Control Valve (With Damper)SP000070)
Breaker EPPR Valve (Opt) SP000192	2
Hydraulic Schematic (DX340LC)SP000259)
Electrical System	
Electrical System	3
Electrical Schematic (DX300LC/340LC))
Attachments	
Boom and ArmSP000040)
BucketSP000041	1

Safety

Track Excavator Safety

Edition 1

Track Excavator Safety SP000014

Table of Contents

Track Excavator Safety

Safety Precautions	5
Applicable Models	5
To the Operator of a DOOSAN Daewoo Excar	
	ხ
General Safety Essentials	10
Location of Safety Labels	11
Summary of Safety Precautions for Lifting in Digging Mode	12
Digging Mode	12
Unauthorized Modifications	13
General Hazard Information	13
Before Starting Engine	22
Machine Operation	26
Maintenance	33
Battery	42
Towing	44
Shipping and Transportation	45
Lifting With Sling	45
-	

Please Click Here To Download The Complete Manual Download Other Manuals If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com