

DX420LC

Shop Manual

K1009096AE

Serial Number 5327 and Up

DX420LC

Serial Number 5327 and Up

Pub.No. K1009096AE



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Table of Contents

Safety

Track Excavator Safety	SP000907
------------------------------	----------

Specifications

Specification for DX420LC.....	SP001755
--------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000016
Standard Torques	SP000813

Upper Structure

Cabin	SP001737
Counterweight.....	SP001756
Fuel Tank.....	SP001757
Fuel Transfer Pump (Opt).....	SP000021
Swing Bearing.....	SP001856
Swing Reduction Gear.....	SP001740

Lower Structure and Chassis

Track Assembly	SP000263
----------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump).....	SP000026
---------------------------------	----------

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP001758
Accumulator	SP000028
Center Joint (Swivel).....	SP000181
Cylinders.....	SP000030

Swing Motor.....	SP000261
Travel Motor (With Gearbox)	SP000266
Main Pump.....	SP000186
Gear Pump (Fan Cooling Drive)	SP000208
Main Control Valve	SP000187
Remote Control Valve (Work Lever / Joystick)	SP000189
Travel Control Valve (With Damper).....	SP001743
Fan Motor (Vane Type).....	SP000209
Fan Cooling Flow In-Out Change Valve	SP000207
Solenoid Valve Assembly	SP001622
Breaker EPPR Valve (Opt)	SP000192
Hydraulic Schematic (DX420LC)	SP001769

Electrical System

Electrical System	SP001759
Electrical Schematic DX420LC	SP001857

Attachments

Boom and Arm.....	SP001851
Bucket.....	SP001852

Safety

Track Excavator Safety

Edition 1

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com