

**DX480LC**

**DX520LC**

Shop Manual

K1008703E

Serial Number 5001 and Up

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



# Table of Contents

## Safety

Track Excavator Safety .....	SP000142
------------------------------	----------

## Specifications

Specification for DX480LC/ 520LC .....	SP000143
--	----------

## General Maintenance

General Maintenance Procedures .....	SP000016
Standard Torques .....	SP000017

## Upper Structure

Cabin .....	SP000018
Counterweight.....	SP000153
Fuel Tank.....	SP000155
Swing Bearing.....	SP000158
Swing Reduction Gear.....	SP000160

## Lower Structure and Chassis

Track Assembly .....	SP000171
Air Conditioner .....	SP000025

## Engine and Drive Train

Drive Coupling (Main Pump).....	SP000026
---------------------------------	----------

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	SP000179
Accumulator.....	SP000028
Center Joint (Swivel).....	SP000181
Cylinders.....	SP000193

Swing Motor.....	SP000194
Travel Motor (With Gearbox) (A6V160HD).....	SP000185
Main Pump (Rexroth).....	SP000186
Control Valve (Kayaba Model KVMG-400-DA).....	SP000187
Remote Control Valve (Work Lever / Joystick) .....	SP000189
Travel Control Valve (With Damper).....	SP000070
Solenoid Valve Assembly .....	SP000191
Breaker EPPR Valve (Opt) .....	SP000192
Fan Motor (Vane Type).....	SP000209
Gear Pump (Fan Cooling Drive) .....	SP000208
Fan Cooling Flow In-Out Change Valve .....	SP000207
Hydraulic Schematic DX480LC/ 520LC.....	SP000212

## **Electrical System**

Electrical System .....	SP000197
Electrical Schematic DX480LC/ 520LC .....	SP000213

## **Attachments**

Boom and Arm.....	SP000205
Bucket.....	SP000206

# Safety



# Track Excavator Safety

Edition 1

---

**MEMO**

---



# Table of Contents

## Track Excavator Safety

Safety Precautions .....	5
Applicable Models .....	5
To the Operator of a <i>DOOSAN</i> Daewoo Excavator.....	6
General Safety Essentials .....	10
Location of Safety Labels .....	11
Summary of Safety Precautions for Lifting in Digging Mode .....	12
Unauthorized Modifications .....	13
General Hazard Information .....	13
Before Starting Engine .....	22
Machine Operation .....	26
Maintenance .....	33
Battery .....	42
Towing .....	44
Shipping and Transportation .....	45
Lifting With Sling.....	45

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**