

# **Mega 250-V**

Shop Manual

023-00050AE

S/N 1001 thru 2000 (Tier I)

S/N 2001 and Up (Tier II)

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



**Mega 250-V**

S/N 1001 thru 2000 (Tier I)  
S/N 2001 and Up (Tier II)

Pub.No. 023-00050AE



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**



# TABLE OF CONTENTS

## Safety

|                           |           |
|---------------------------|-----------|
| Wheel Loader Safety ..... | S0103010K |
|---------------------------|-----------|

## Specifications

|                                     |           |
|-------------------------------------|-----------|
| Specifications for Mega 250-V ..... | S0203110C |
|-------------------------------------|-----------|

## General Maintenance

|                                      |          |
|--------------------------------------|----------|
| General Maintenance Procedures ..... | S0302000 |
| Standard Torques .....               | S0309000 |

## Upper Structure

|                          |           |
|--------------------------|-----------|
| Counterweight.....       | S0403030K |
| Fuel Transfer Pump ..... | S0405500  |
| Hydraulic Oil Tank ..... | S0406060C |

## Lower Structure and Chassis

|                                        |           |
|----------------------------------------|-----------|
| Center Joint (Articulation Joint)..... | S0502050C |
|----------------------------------------|-----------|

## Engine and Drive Train

|                                                      |           |
|------------------------------------------------------|-----------|
| Axle (Volvo) .....                                   | S0602210C |
| Parking Brake Caliper (Volvo) .....                  | S0603000  |
| Air Conditioner .....                                | S0605050K |
| Transmission and Torque Converter (ZF 4WG-190) ..... | S0607120C |
| Transmission Error Codes (ZF) .....                  | S0607900C |

## Hydraulics

|                                          |           |
|------------------------------------------|-----------|
| Accumulator.....                         | S0703010K |
| Cylinders.....                           | S0705005K |
| Fan Drive Hydraulic Motor (Haldex) ..... | S0707110C |
| Main Pump (Denison T67CCA Series).....   | S0708500C |

|                                        |           |
|----------------------------------------|-----------|
| Brake Pedal Valve .....                | S0709270C |
| Main Control Valve (Toshiba) .....     | S0709456K |
| Pilot Control Valve .....              | S0709478C |
| Priority Valve.....                    | S0709650  |
| Power Steering Unit.....               | S0709705C |
| Unloader Valve .....                   | S0709860C |
| Hydraulic Schematic (Mega 250-V) ..... | S0793005C |

## **Electrical System**

|                                         |           |
|-----------------------------------------|-----------|
| Electrical System .....                 | S0802015C |
| Electrical Schematic (Mega 250-V) ..... | S0893005C |

## **Attachments**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**