

Mega 300-V

Shop Manual

023-00041AE

Serial Number 1001 and Up (Tier I & II)

December 2002

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Mega 300-V
Serial Number 1001 and Up (Tier I)
Pub.No. 023-00041AE



TABLE OF CONTENTS

Safety

Wheel Loader Safety	S0103010K
---------------------------	-----------

Specifications

Specifications for Mega 300-V	S0203080K
-------------------------------------	-----------

General Maintenance

General Maintenance Procedures	S0302000
Standard Torques	S0309000

Upper Structure

Counterweight.....	S0403030K
Fuel Transfer Pump	S0405500
Hydraulic Oil Tank	S0406050K

Lower Structure and Chassis

Center Joint (Articulation Joint).....	S0502030K
--	-----------

Engine and Drive Train

Front Axle (Volvo SLA 15/W).....	S0602180K
Rear Axle (Volvo SLA 12/W)	S0602190K
Parking Brake Caliper (Volvo)	S0603000
Air Conditioner	S0605050K
Transmission and Torque Converter (ZF 4WG-210).....	S0607090K
Transmission Error Codes (ZF)	S0607900C

Hydraulics

Accumulator.....	S0703000
Cylinders.....	S0705005K
Fan Drive Hydraulic Motor (Haldex)	S0707100K

Main Pump (Denison)	S0708485K
Brake Pedal Valve	S0709250K
Main Control Valve (Toshiba)	S0709456K
Pilot Control Valve	S0709477K
Priority Valve (Danfoss)	S0709651K
Power Steering Unit.....	S0709730K
Restriction Valve.....	S0709751K
Hydraulic Schematic (Mega 300-V)	S0793070K

Electrical System

Electrical System	S0802200K
Electrical Schematic (Mega 300-V)	S0893070K

Attachments

SAFETY

WHEEL LOADER SAFETY



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Mega 200-V (Tier I & II)	1001 and Up
Mega 250-V (Tier I)	1001 thru 2000
Mega 250-V (Tier II)	2001 and Up
Mega 300-V (Tier I)	1001 thru 2000
Mega 300-V (Tier II)	2001 and Up
Mega 400-V	1001 and Up
Mega 500-V (Tier I)	1001 thru 2000
Mega 500-V (Tier II)	2001 and Up

TABLE OF CONTENTS

To the Operator of a Daewoo Wheel Loader	3
General Safety Essentials	6
Location of Safety Labels	6
Unauthorized Modifications	6
General Hazard Information	7
Before Starting Engine	15
Machine Operation	18
Maintenance	25
Battery	33
Towing	35
Shipping and Transportation	36

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com