

# **Solar 210W-V**

Shop Manual

023-00064E

Serial Number 1001 and Up

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



**Solar 210W-V**

Serial Number 1001 and Up

Pub.No. 023-00064E



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**



# TABLE OF CONTENTS

## Safety

Wheel Excavator Safety .....	S0102025K
------------------------------	-----------

## Specifications

Specifications for Solar 210W-V .....	S0202045K
---------------------------------------	-----------

## General Maintenance

General Maintenance Procedures .....	S0302000
Standard Torques .....	S0309000

## Upper Structure

Cab .....	S0402040K
Counterweight.....	S0403015K
Fuel Tank.....	S0405075K
Fuel Transfer Pump .....	S0405500
Swing Bearing.....	S0407010
Swing Reduction Gearbox.....	S0408040

## Lower Structure and Chassis

Ram Lock Valve Operation.....	S0503000
-------------------------------	----------

## Engine and Drive Train

Front Axle .....	S0602100
Transmission (ZF 2HL-100).....	S0602110
Air-Conditioner .....	S0605060K
Drive Coupling (Main Pump).....	S0609000

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	S0702115K
Accumulator.....	S0703010K

Center Joint (Swivel).....	S0704070
Cylinders.....	S0705000
Swing Motor.....	S0707250
Travel Motor.....	S0707350
Main Pump (With Regulator, Steering Pump and Brake Pump).....	S0708430
Brake Supply Valve .....	S0709220
Counterbalance Valve .....	S0709300
Main Control Valve (Toshiba DX28) .....	S0709440
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Steering Valve .....	S0709710
Dozer Control Valve.....	S0709905K
Hydraulic Schematic (Solar 210W-V) .....	S0792101K

## **Electrical System**

Electrical System .....	S0802125K
Electrical Schematic (Solar 210W-V).....	S0892101K

## **Attachments**

Boom and Arm.....	S0902080
Bucket.....	S0904000

## **Publication Request for Proposed Revision**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**