

# Solar 290LC-V

Shop Manual

2023-7113AE

Serial Number 0001 and Up

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



**Solar 290LC-V**  
Serial Number 0001 and Up  
Pub.No. 2023-7113AE



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**



# TABLE OF CONTENTS

## Safety

Track Excavator Safety.....	S0102000
-----------------------------	----------

## Specifications

Specifications for Solar 290LC-V.....	S0202000
---------------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

## Upper Structure

Cab.....	S0402000
Counterweight.....	S0403000
Fuel Tank.....	S0405000
Fuel Transfer Pump.....	S0405500
Swing Bearing.....	S0407000
Swing Reduction Gearbox.....	S0408000

## Lower Structure and Chassis

Track Assembly.....	S0505000
---------------------	----------

## Engine and Drive Train

Air-Conditioner.....	S0605010
Drive Coupling (Main Pump).....	S0609000

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	S0702000
Accumulator.....	S0703000
Center Joint (Swivel).....	S0704000
Cylinders.....	S0705000

Swing Motor .....	S0707200
Travel Motor (With Gearbox) (Kawasaki DNB Series).....	S0707310
Main Pump (With Regulator) .....	S0708300
Main Control Valve .....	S0709400
Pilot Control Valve (Work Lever / Joystick).....	S0709450
Travel Control Valve .....	S0709800
Travel Control Valve (Jeil Hydraulics).....	S0709810
Hydraulic Schematic (Solar 290LC-V) .....	S0792000

## **Electrical System**

Electrical System .....	S0802000
Electrical Schematic (S290LC-V) .....	S0892000

## **Attachments**

Boom and Arm.....	S0902000
Bucket.....	S0904000

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**