

# **Solar 340LC-V**

Shop Manual

023-00051E

Serial Number 1001 and Up

May 2002

**Solar 340LC-V**  
Serial Number 1001 and Up

Pub.No. 023-00051E



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**

**Pub. No. 023-00051E**

# TABLE OF CONTENTS

## Safety

Track Excavator Safety.....	S0102000
-----------------------------	----------

## Specifications

Specifications for Solar 340LC-V.....	S0202110K
---------------------------------------	-----------

## General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

## Upper Structure

Cab.....	S0402040K
Counterweight.....	S0403050K
Fuel Tank.....	S0405130K
Fuel Transfer Pump.....	S0405500
Swing Bearing.....	S0407000
Swing Reduction Gearbox.....	S0408030

## Lower Structure and Chassis

Track Assembly.....	S0505000
---------------------	----------

## Engine and Drive Train

Air-Conditioner.....	S0605060K
Drive Coupling (Main Pump).....	S0609010K

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	S0702180K
Accumulator.....	S0703010K
Center Joint (Swivel).....	S0704030
Cylinders.....	S0705000

Swing Motor.....	S0707280
Travel Motor (with Gearbox).....	S0707345K
Main Pump (Rexroth).....	S0708355K
Main Control Valve (Kayaba).....	S0709401K
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Travel Control Valve (With Damper).....	S0709820K
Hydraulic Schematic (S340LC-V).....	S0792190K

## **Electrical System**

Electrical System.....	S0802220K
Electrical Schematic (S340LC-V).....	S0892190K

## **Attachments**

Boom and Arm.....	S0902040
Bucket.....	S0904005K

# **SAFETY**

# TRACK EXCAVATOR SAFETY



## CAUTION!

**Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.**

**Always use tools and equipment that is in good working order.**

**Use lifting and hoisting equipment capable of safely handling load.**

**Remember, that ultimately safety is your own personal responsibility.**

MODEL	SERIAL NUMBER RANGE
Solar 130LC-V	0001 and Up
Solar 170LC-V	1001 and Up
Solar 220LC-V	0001 and Up
Solar 220N-V	1001 and Up
Solar 250LC-V	1001 and Up
Solar 290LC-V	0001 and Up
Solar 300LC-V	1001 and Up
Solar 300LL	1001 and Up
Solar 330LC-V	1001 and Up
Solar 340LC-V	1001 and Up
Solar 400LC-V	1001 and Up
Solar 420LC-V	1001 and Up
Solar 450LC-V	1001 and Up
Solar 470LC-V	1001 and Up

# TABLE OF CONTENTS

To the Operator of a Daewoo Excavator..... 3

General Safety Essentials ..... 6

Location of Safety Labels ..... 6

Summary of Safety Precautions for Lifting in Digging Mode ..... 7

Unauthorized Modifications ..... 8

General Hazard Information ..... 8

Before Starting Engine ..... 16

Machine Operation ..... 19

Maintenance..... 26

Battery ..... 34

Towing ..... 36

Shipping and Transportation ..... 37

Lifting With Sling..... 37

# TO THE OPERATOR OF A DAEWOO EXCAVATOR



**DANGER!**

**Unsafe use of the excavator could lead to serious injury or death. Operating procedures, maintenance and equipment practices or traveling or shipping methods that do not follow the safety guidelines on the following pages could cause serious, potentially fatal injuries or extensive damage to the machine or nearby property.**

Please respect the importance of taking responsibility for your own safety, and that of other people who may be affected by your actions.

The safety information on the following pages is organized into the following sections:

1. "General Safety Essentials" on page 6
2. "Location of Safety Labels" on page 6
3. "Summary of Safety Precautions for Lifting in Digging Mode" on page 7
4. "Unauthorized Modifications" on page 8
5. "General Hazard Information" on page 8
6. "Before Starting Engine" on page 16
7. "Machine Operation" on page 19
8. "Maintenance" on page 26
9. "Battery" on page 34
10. "Towing" on page 36
11. "Shipping and Transportation" on page 37
12. "Lifting With Sling" on page 37





## **WARNING!**

**Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.**

**Operator and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.**

**Keep this manual in the storage compartment to the rear of the operator's seat, and have all personnel involved in working on the machine periodically read the manual.**

**Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.**

**The procedures and precautions given in this manual apply only to intended uses of the machine.**

**If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for any others. In no event should you or others engage in prohibited uses or actions as described in this manual.**

**Daewoo delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Daewoo or your Daewoo distributor before operating the machine.**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**