

DX140W/DX160W

Shop Manual

K1024899E

Serial Number 5001 and Up

DOOSAN reserves the right to improve its products continuously, delivering the best possible product to the marketplace. These improvements can be implemented at any time with no obligation to change materials previously sold. It is recommended that consumers periodically contact their distributors for most recent documentation on purchased equipment.

This documentation may include attachments and optional equipment not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

DX140W/DX160W

Serial Number 5001 and Up

Pub.No. K1024899E

Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Pub. No. K1024899E

Table of Contents

Safety

Wheel Excavator Safety	SP000909
------------------------------	----------

Specifications

Specification for DX140W/DX160W	SP000911
---------------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000016
Standard Torques	SP000813

Upper Structure

Cabin	SP000916
Counterweight.....	SP000917
Fuel Tank.....	SP000918
Fuel Transfer Pump.....	SP000021
Swing Bearing.....	SP000920
Swing Reduction Gear.....	SP000921

Lower Structure and Chassis

Ram Lock Valve.....	SP000923
Selector Valve.....	SP000926
Solenoid Valve.....	SP000928
Double Pilot Check Valve	SP000927
Front Axle	SP000929
Rear Axle.....	SP000930

Engine and Drivetrain

Transmission	SP000962
Drive Coupling (Main Pump).....	SP000963

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP000983
Accumulator	SP000984
Center Joint (Swivel)	SP000919
Cylinders	SP000030
Main Control Valve	SP001059
Swing Motor	SP000985
Travel Motor	SP000986
Counterbalance Valve	SP000991
Main Pump and PTO	SP000988
Gear Pump	SP000989
Service Brake Supply Valve	SP000990
Dozer Control Valve	SP000992
Steering Valve	SP000993
Accelerator Pedal Valve (Hydraulic)	SP000995
One Spool Valve	SP000996
Remote Control Valve (Work Lever / Joystick)	SP000069
Breaker EPPR Valve (Opt)	SP000192
Service Brake Pedal Valve	SP001006
Solenoid Valve Assembly	SP000997
Hydraulic Schematic	SP001002

Electrical System

Electrical System	SP000998
Electrical Schematic	SP001003

Attachments

Boom and Arm	SP001000
Bucket	SP001001

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com