

# **DX235LCR**

Shop Manual

950106-00081E

Serial Number 5001 and Up



**DX235LCR**

Serial Number 5001 and Up

Pub.No. 950106-00081E



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**



# Table of Contents

## Safety

Track Excavator Safety.....	SP002112
-----------------------------	----------

## Specifications

Specification for DX235LCR.....	SP002113
---------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

## Upper Structure

Cabin .....	SP001938
Counterweight.....	SP002114
Fuel Tank.....	SP002115
Fuel Transfer Pump.....	SP000021
Swing Bearing.....	SP000022

## Lower Structure and Chassis

Track Assembly .....	SP002116
----------------------	----------

## Engine and Drive Train

Drive Coupling (Main Pump).....	SP002117
---------------------------------	----------

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	SP002118
Accumulator.....	SP000028
Center Joint (Swivel).....	SP001620
Cylinders.....	SP002119

Swing Device .....	SP002120
Travel Motor.....	SP001621
Main Pump and PTO .....	SP000988
Gear Pump .....	SP000931
Main Control Valve .....	SP001024
Remote Control Valve (Work Lever / Joystick) .....	SP000069
Travel Control Valve (with Damper).....	SP002130
Solenoid Valve Assembly .....	SP001944
Breaker EPPR Valve (Opt) .....	SP000192
Hydraulic Schematic (DX235LCR) .....	SP002121

## **Electrical System**

Electrical System .....	SP002122
Electrical Schematic (DX235LCR).....	SP002123

## **Attachments**

Boom and Arm.....	SP002124
Bucket.....	SP000939

# Safety





# Track Excavator Safety

Edition 1

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**