

# Operation & Maintenance Manual

---

## LIFT TRUCKS

**D20S-5, D25S-5, D30S-5, D33S-5, D35C-5**

**G20E-5, G25E-5, G30E-5**

**GC20E-5, GC25E-5, GC30E-5, GC33E-5**

**G20P-5, G25P-5, G30P-5, G33P-5, G35C-5**

**GC20P-5, GC25P-5, GC30P-5, GC33P-5**

 **WARNING**

Do not start, operate or service this machine unless you have read and understood these instructions and received proper training.  
Unsafe or improper use of the machine may cause serious injury or death.  
Operators and maintenance personnel must read this manual and receive training before operating or maintaining the machine.  
This manual should be kept with the machine for reference and periodically reviewed by the machine operator and by all personnel who will come into contact with it.

The following warning is provided pursuant to California Health & Safety Code Sections 25247.5 et, seq,

 **WARNING**

**California Proposition 65**

Engine Exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**WASH HANDS AFTER HANDLING.**

# Table of Contents

## Information Section

Foreword .....	2
----------------	---

## Safety Section

Important Safety Information .....	4
Safety .....	5
Warning Signs and Labels .....	5
Parking brake .....	9
General Hazard Information .....	10
Operation Information .....	11
Maintenance Information .....	14
Operator Restraint System (If Equipped) .....	17
Avoiding Lift Truck Tipover .....	21
Safety Rules .....	23
How to Survive in a Tipover .....	28

## General Section

Specifications .....	30
Noise and Vibration .....	42
Capacity Chart (Without Sideshifter Pneumatic) ..	43
Capacity Chart (With Sideshifter Pneumatic) .....	47
Capacity Chart (Without Sideshifter cushion) .....	51
Capacity Chart (With Sideshifter cushion) .....	55
Serial Number .....	59
Operator's Warning and Identification Plate .....	62

## Operation Section

Operator's Station and Monitoring Systems .....	63
Seat Switch System (If Equipped) .....	67
Lift Truck Controls .....	69
Refueling .....	71
Before Starting the Engine .....	74
Starting the Engine .....	76
Dual Fuel System .....	79
Lift Truck Operation .....	82
Mono-Ped Control System (Option) .....	117
Auto Shift Controller ASC-100 (If Equipped) .....	118
Operating Techniques .....	121
Parking the Lift Truck .....	125
Lift Fork Adjustment .....	126
Storage Information .....	127
Transportation Hints .....	128
Towing Information .....	129

## Maintenance Section

Inspection, Maintenance and Repair of Lift Truck Forks .....	130
Tire Inflation Information .....	134
Torque Specifications .....	135
Cooling System Specifications .....	137
Fuel Specifications .....	139
Lubricant Information .....	141
Lubricant Viscosities and Refill Capacities .....	143
Maintenance Intervals .....	144
When Required .....	148
Every 10 Service Hours or Daily .....	155
First 50 - 100 Service Hours or a Week .....	161
First 250 Service Hours or a Month .....	166
Every 250 Service Hours or Monthly .....	167
Every 500 Service Hours or 3 Months .....	176
Every 1000 Service Hours or 6 Months .....	185
Every 1500 Service Hours or 9 Months .....	191
Every 2000 Service Hours or Yearly .....	194
Every 2500 Service Hours or 15 Months .....	201
Every 3000 Service Hours or 18 Months .....	204

## Index Section

Index .....	205
-------------	-----

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**