

DL160

Shop Manual

K1040197E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Wheel Loader Safety	SP001573
---------------------------	----------

Specifications

Specification for DL160.....	SP001574
------------------------------	----------

General Maintenance

General Maintenance Procedures	SP001055
Standard Torques	SP000813

Engine

QSB4.5 Engine	SP001671
---------------------	----------

Drive Train

Transmission and Torque Converter	SP001575
Transmission Error Codes (ZF)	SP001056
Axle.....	SP001576
Drive Shaft.....	SP001577

Brake

Service Brake	SP001578
Brake Supply Valve	SP001579
Parking Brake	SP001580
Brake Pedal Valve	SP001581
Accumulator	SP001582

Steering

Steering	SP001583
Emergency Steering	SP001086

Frame

Articulation Center	SP001610
Counterweight.....	SP000130

Tank

Oil Tank	SP001585
Fuel Tank.....	SP001586

Hydraulics

Cylinders.....	SP001587
Main Pump.....	SP001588
Brake & Pilot Pump.....	SP001591
Main Control Valve	SP001090
Cooling System.....	SP001589
Pilot System.....	SP001590
Hydraulic Schematic DL160	SP001612

Electrical System

Air Conditioner	SP001211
Electrical System	SP001592
Electrical Schematic DL160.....	SP001613

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com