

# **DL200**

# **DL200TC**

Shop Manual

K1024538E

Serial Number 5001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



# Table of Contents

## Safety

Wheel Loader Safety.....	SP000865
--------------------------	----------

## Specifications

Specification for DL200/ DL200TC.....	SP000914
---------------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP001055
Standard Torques .....	SP000813

## Drive Train

Transmission and Torque Converter.....	SP001011
Transmission Error Codes (ZF).....	SP001056
Axle.....	SP001018
Drive Shaft.....	SP001019

## Brake

Service Brake.....	SP001080
Brake Supply Valve.....	SP001081
Parking Brake .....	SP001082
Brake Pedal Valve.....	SP001083
Accumulator.....	SP001084

## Steering

Steering .....	SP001085
Cushion Valve.....	SP000328
Emergency Steering .....	SP001086

## Frame

Articulation Center .....	SP001087
Counterweight.....	SP000130

## **Tank**

Oil Tank.....	SP001088
Fuel Tank.....	SP001089

## **Hydraulics**

Cylinders.....	SP001027
Main Pump.....	SP001212
Main Control Valve.....	SP001090
Load Isolation System.....	SP001091
Cooling System.....	SP001092
Pilot System.....	SP001093
Hydraulic Schematic DL200.....	SP001094

## **Electrical System**

Air Conditioner .....	SP001211
Electrical System .....	SP001095
Electrical Schematic DL200/ DL250.....	SP000925

# Safety



# Wheel Loader Safety

Edition 1

---

## MEMO

---



# Table of Contents

## Wheel Loader Safety

Safety Precautions.....	5
Applicable Models.....	5
To the Operator of a Wheel Loader .....	6
General Safety Essentials.....	10
Location of Safety Labels.....	10
Unauthorized Modifications .....	11
General Hazard Information.....	11
Before Starting Engine.....	19
Machine Operation .....	23
Maintenance .....	31
Battery .....	40
Towing .....	42
Shipping and Transportation.....	43



# SAFETY PRECAUTIONS

---



## CAUTION!

---

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that are in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

---

## APPLICABLE MODELS

The contents of this section apply to the following models and serial number ranges.

MODEL	SERIAL NUMBER RANGE
DL200	5001 and Up
DL250	5001 and Up
DL300	5001 and Up
DL400	5001 and Up
DL500	5001 and Up

# TO THE OPERATOR OF A WHEEL LOADER

---



## **DANGER!**

---

**Unsafe use of the wheel loader could lead to serious injury or death. Operating procedures, maintenance and equipment practices or traveling or shipping methods that do not follow the safety guidelines on the following pages could cause serious, potentially fatal injuries or extensive damage to the machine or nearby property.**

---

Please respect the importance of taking responsibility for your own safety, and that other people who may be affected by your actions.

Safety information on the following pages is organized into the following topics.

1. "General Safety Essentials" on page 1-10.
2. "Location of Safety Labels" on page 1-10.
3. "Unauthorized Modifications" on page 1-11.
4. "General Hazard Information" on page 1-11.
5. "Before Starting Engine" on page 1-19.
6. "Machine Operation" on page 1-23.
7. "Maintenance" on page 1-31.
8. "Battery" on page 1-40.
9. "Towing" on page 1-42.
10. "Shipping and Transportation" on page 1-43.



## **WARNING!**

---

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Operator and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.

Keep this manual in the storage compartment to the rear of the operator's seat, and have all personnel involved in working on the machine periodically read the manual.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for any others. In no event should you or others engage in prohibited uses or actions as described in this manual.

*DOOSAN* delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult *DOOSAN* or your *DOOSAN* distributor before operating the machine.

---

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**