

# DL250

Shop Manual

K1023773E

Serial Number 5001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



# Table of Contents

## Safety

Wheel Loader Safety.....	SP000865
--------------------------	----------

## Specifications

Specification for DL250 .....	SP000866
-------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP000097
Standard Torques .....	SP000813

## Drive Train

Transmission and Torque Converter.....	SP000867
Transmission Error Codes (ZF).....	SP001056
Front Axle (ZF-MT-L 3085).....	SP000868
Rear Axle (ZF-MT-L 3075) .....	SP000869
Drive Shaft .....	SP000870

## Brake

Service Brake.....	SP000871
Brake Supply Valve.....	SP000872
Parking Brake .....	SP000873
Brake Pedal Valve.....	SP000874
Accumulator.....	SP000875

## Steering

Steering .....	SP000876
Cushion Valve.....	SP000328
Emergency Steering .....	SP000877

## **Frame**

Articulation Center .....	SP000878
Counterweight.....	SP000130

## **Tank**

Oil Tank.....	SP000879
Fuel Tank.....	SP000880

## **Hydraulics**

Cylinders.....	SP001027
Main Pump.....	SP001035
Main Control Valve.....	SP000881
Load Isolation System.....	SP000882
Cooling System.....	SP000883
Pilot System.....	SP000884
Hydraulic Schematic DL250.....	SP000886

## **Electrical System**

Air Conditioner .....	SP001211
Electrical System .....	SP000924
Electrical Schematic DL200/ DL250.....	SP000925

# Safety



# Wheel Loader Safety

Edition 1





# Table of Contents

## Wheel Loader Safety

Safety Precautions.....	5
Applicable Models.....	5
To the Operator of a Wheel Loader .....	6
General Safety Essentials.....	10
Location of Safety Labels.....	10
Unauthorized Modifications .....	11
General Hazard Information.....	11
Before Starting Engine.....	19
Machine Operation .....	23
Maintenance .....	31
Battery .....	40
Towing .....	42
Shipping and Transportation.....	43

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**