DL350

Shop Manual
K1046897E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Product Label

Instructions

Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine

Serial Number 5001 and Up

Table of Contents

Safety
Wheel Loader Safety SP001667
Specifications
Specification for DL350SP001801
General Maintenance
General Maintenance Procedures
Standard Torques
Drive Train
Transmission and Torque Converter
Transmission Error Codes (ZF)
Front Axle (ZF-MT-L 3095)
Rear Axle (ZF-MT-L 3095)
Drive Shaft
Brake
Service Brake
Brake Supply Valve
Parking Brake
Brake Pedal Valve
AccumulatorSP000223
Steering
Steering
Cushion ValveSP000328
Emergency Steering

Frame

Articulation Center)
CounterweightSP000130)
Tank	
Oil TankSP001880)
Fuel TankSP000227	•
Hydraulics	
Main Control ValveSP001810)
Load Isolation SystemSP001811	
Cooling SystemSP001812)
Pilot SystemSP000230)
Hydraulic Schematic (DL350)SP001813	;
Electrical System	
Air ConditionerSP000172	
Electrical System)
Electrical Schematic (DL350))

Safety

Wheel Loader Safety

Edition 1

Wheel Loader Safety SP001667

Please Click Here To Download The Complete Manual Download Other Manuals If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com