

# DL400

Shop Manual

K1010635E

Serial Number 5001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



# Table of Contents

## Safety

Wheel Loader Safety .....	SP000095
---------------------------	----------

## Specifications

Specification for DL400.....	SP000096
------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	SP000097
Standard Torques.....	SP000098

## Engine

QSL9 Engine .....	SP000204
-------------------	----------

## Drive Train

Transmission and Torque Converter (ZF 4WG-260-4).....	SP000099
Transmission Error Codes (ZF) .....	SP000100
Front Axle (ZF - MT-L 3105).....	SP000101
Rear Axle (ZF - MT-L 3095).....	SP000107
Drive Shaft.....	SP000119

## Brake

Service Brake .....	SP000120
Brake Supply Valve .....	SP000121
Parking Brake .....	SP000122
Brake Pedal Valve .....	SP000123
Accumulator.....	SP000124

## Steering

Steering Unit.....	SP000125
--------------------	----------

Flow Amplifier .....	SP000126
Cushion Valve.....	SP000127
Emergency Steering .....	SP000128

## **Frame**

Articulation Center .....	SP000129
Counterweight.....	SP000130

## **Tank**

Oil Tank .....	SP000131
Fuel Tank.....	SP000132

## **Hydraulics**

Main Control Valve .....	SP000144
Load Isolation System .....	SP000149
Cooling System.....	SP000154
Pilot System.....	SP000159
Hydraulic Schematic (DL400) .....	SP000168

## **Electrical System**

Air Conditioner .....	SP000172
Electrical System .....	SP000173
Electrical Schematic (DL400) .....	SP000235

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**