



Shop Manual

DX140LC-3 Excavator

Serial Number 1001 and Up
Serial Number 50001 and Up (Europe Only)



950106-00388E

April 2012

Original Instructions

Table of Contents

Safety

Track Excavator Maintenance Safety	SP002322
--	----------

Specifications

Specifications for DX140LC-3.....	SP002509
-----------------------------------	----------

General Maintenance

General Maintenance Instructions	SP002454
Standard Torques	SP002404

Upper Structure

Cabin	SP002324
Counterweight.....	SP002510
Fuel Tank.....	SP002511
Fuel Transfer Pump (Option)	SP002546
Swing Bearing.....	SP002329
Swing Reduction Gear.....	SP002526

Lower Structure and Chassis

Track Assembly	SP002512
----------------------	----------

Engine and Drivetrain

Engine Coolant Heater (Option)	SP002328
Drive Coupling (Main Pump).....	SP002515

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP002538
Accumulator.....	SP002455
Center Joint (Swivel).....	SP002456

Cylinders.....	SP002539
Swing Motor.....	SP002527
Travel Device.....	SP002516
Main Pump.....	SP002517
Gear Pump	SP002500
Main Control Valve	SP002528
Remote Control Valve (Work Lever / Joystick)	SP002395
Travel Control Valve (with Damper).....	SP002381
Solenoid Valve Assembly	SP002406
Breaker EPPR Valve (Option)	SP002458
Dozer Valve	SP002529
Hydraulic Schematic (DX140LC-3).....	SP002518

Electrical System

Electrical System	SP002337
Electrical Schematic	SP002508

Attachments

Boom and Arm.....	SP002513
Bucket.....	SP002506

Safety

Track Excavator Maintenance Safety

Edition 3

MEMO

Table of Contents

Track Excavator Maintenance Safety

Safety Instructions 5

Applicable Models 5

Safety Messages 6

Safety Decals 7

General 8

Transportation 20

Operation 22

Maintenance 39

Environment and Circumstances..... 56

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com