

DX15 / DX18

Shop Manual

K1043970AE

Serial Number 40001 and Up

Table of Contents

Safety

Track Excavator Safety.....	SP001521
-----------------------------	----------

Specifications

Specification for DX15/DX18	SP001522
-----------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Lower Structure and Chassis

Track Assembly	SP001523
----------------------	----------

Engine and Drive Train

Engine.....	SP001524
-------------	----------

Hydraulics

Center Joint (Swivel).....	SP001525
Cylinders.....	SP001526
Swing Motor.....	SP001527
Travel Motor (With Gear Box).....	SP001528
Pilot Control Valve (Work Lever / Joystick).....	SP001529
Main Pump.....	SP001530
Main Control Valve	SP001531
Solenoid Valve.....	SP001532
Hydraulic Schematic (DX15/DX18).....	SP001681

Electrical System

Electrical System SP001534
Electrical Schematic (DX15/DX18) SP001535

Attachments

Boom and Arm..... SP001536
Bucket..... SP001550

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com