

# **DX30Z**

Shop Manual

K1036951E

Serial Number 5001 and Up



# Table of Contents

## Safety

Track Excavator Safety.....	SP001061
-----------------------------	----------

## Specifications

Specification for DX30Z.....	SP001394
------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

## Upper Structure

Cabin.....	SP001063
Swing Bearing.....	SP001064

## Lower Structure and Chassis

Track Assembly.....	SP001395
---------------------	----------

## Engine and Drive Train

Engine.....	SP001254
Drive Coupling (Main Pump).....	SP001066

## Hydraulics

Accumulator.....	SP000028
Center Joint (Swivel).....	SP001067
Cylinders.....	SP001396
Swing Motor.....	SP001400
Travel Motor.....	SP001102
Main Pump.....	SP001433
Main Control Valve.....	SP001071

Remote Control Valve (Work Lever / Joystick) .....	SP001072
Travel Control Valve .....	SP000839
Pedal Valve.....	SP001073
Hydraulic Schematic (DX30Z) .....	SP001397

## **Electrical System**

Electrical System .....	SP001142
Electrical Schematic (DX27Z/DX30Z).....	SP001144

## **Attachments**

Working Attachments.....	SP001398
Bucket.....	SP001076

# Safety



# Track Excavator Safety

Edition 1

---

**MEMO**

---



# Table of Contents

## Track Excavator Safety

Safety Precautions .....	5
Applicable Models .....	5
To the Operator of a Excavator .....	6
General Safety Essentials .....	10
Location of Safety Labels .....	11
Summary of Safety Precautions for Lifting in Digging Mode .....	11
Unauthorized Modifications .....	13
General Hazard Information .....	13
Before Starting Engine .....	22
Machine Operation .....	26
Maintenance .....	33
Battery .....	41
Towing .....	43
Shipping and Transportation .....	44
Lifting With Sling .....	44

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**