

# **DX80R**

Shop Manual

K1044971E

Serial Number 50001 and Up



# Table of Contents

## Safety

Track Excavator Safety.....	SP001631
-----------------------------	----------

## Specifications

Specification for DX80R.....	SP001632
------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

## Upper Structure

Cabin .....	SP001623
Swing Bearing .....	SP001633

## Lower Structure and Chassis

Track Assembly .....	SP001634
----------------------	----------

## Engine and Drive Train

Engine.....	SP001434
Drive Coupling (Main Pump) .....	SP001635

## Hydraulics

Accumulator .....	SP000028
Center Joint (Swivel).....	SP001628
Cylinders.....	SP001636
Swing Motor.....	SP001637
Travel Motor.....	SP001638
Main Control Valve.....	SP001691
Main Pump.....	SP001648

Remote Control Valve (Work Lever / Joystick) .....	SP001649
Travel Control Valve.....	SP001650
Dozer Valve .....	SP001651
Pedal Valve.....	SP001652
Hydraulic Schematic .....	SP001694

## **Electrical System**

Electrical System .....	SP001687
Electrical Schematic (DX60R/DX80R) .....	SP001688

## **Attachments**

Boom and Arm.....	SP001653
Bucket.....	SP001643

SP001631

# Track Excavator Safety

Edition 1

---

**MEMO**

---

# Table of Contents

## Track Excavator Safety

Safety Precautions.....	5
Applicable Models .....	5
To the Operator of a Excavator .....	6
General Safety Essentials.....	10
Location of Safety Labels .....	11
Summary of Safety Precautions for Lifting in Digging Mode.....	11
Unauthorized Modifications.....	13
General Hazard Information .....	13
Before Starting Engine .....	23
Machine Operation.....	27
Maintenance .....	35
Battery .....	46
Towing .....	48
Shipping and Transportation .....	49
Lifting With Sling .....	49

---

**MEMO**

---



# SAFETY PRECAUTIONS

---



---

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that are in good working order.

Use lifting and hoisting equipment capable of safely handling the load.

Remember that ultimate safety is your own responsibility.

---

## APPLICABLE MODELS

The contents of this section apply to the following models and serial number ranges.

<b>MODEL</b>	<b>SERIAL NUMBER RANGE</b>
DX80R	50001 and Up

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**