

DX27Z

Shop Manual

K1028288E

Serial Number 5001 and Up

Table of Contents

Safety

Track Excavator Safety	SP001061
------------------------------	----------

Specifications

Specification for DX27Z	SP001106
-------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000016
Standard Torques	SP000813

Upper Structure

Cabin	SP001063
Swing Bearing.....	SP001064

Lower Structure and Chassis

Track Assembly	SP001099
----------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump)	SP001066
----------------------------------	----------

Hydraulics

Accumulator.....	SP000028
Center Joint (Swivel).....	SP001067
Cylinders.....	SP001100
Swing Motor.....	SP001101
Travel Motor.....	SP001102
Main Pump.....	SP001103
Main Control Valve.....	SP001071
Remote Control Valve (Work Lever / Joystick)	SP001072

Travel Control Valve.....	SP000839
Pedal Valve.....	SP001073
Hydraulic Schematic (DX27Z).....	SP001104

Electrical System

Electrical System	SP001142
Electrical Schematic (DX27Z)	SP001144

Attachments

Working Attachments.....	SP001105
Bucket.....	SP001076

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com