

PARTS MANUAL

YARD MASTER

**HR45-EC, HR48-EC
(A228)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	SINGLE FIXED CABIN
3	ENGINE(S)
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	BOOM
11	ATTACHMENTS
12	OPTIONS
13	NUMERICAL INDEX

This Parts Manual is divided into 13 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR CONDITIONER	12-4
AIR FILTER.....	3-8
ANTI-TIPPING SWITCH.....	7-18
B	
BATTERY.....	4-28
BOOM CABLE SUPPORT	
HR-48-EC	10-32
BOOM HEAD.....	10-28
BRAKE ACCUMULATOR	8-14
BRAKE CIRCUIT	
S/N A228-01501↔S/N A228-01504	8-2
S/N A228-1505⇒.....	8-4
BRAKE FILTER	8-13
BRAKE OIL TANK	8-15
BRAKE PRESSURE SENSOR	8-12
BRAKE VALVE	
S/N A228-01501↔S/N A228-01509	8-10
S/N A228-01510⇒.....	8-11
BUMPERS.....	11-6
C	
CABIN	
S/N A228-01501↔S/N A228-01509	2-8
S/N A228-01510⇒.....	2-12
CABIN DOOR	
S/N A228-01501↔S/N A228-01509	2-22
S/N A228-01510⇒.....	2-24
CABIN SUPPORT	
S/N A228-01501↔S/N A228-01509	2-2
S/N A228-01510⇒.....	2-4
CLUTCH	
FORWARD AND SECOND.....	5-16
REVERSE AND FIRST.....	5-12
THIRD.....	5-20
CONSOLE	
RIGHT HAND	
S/N A228-01501↔S/N A228-01509	4-16
S/N A228-01510⇒.....	4-18
CONTROL VALVE ATTACHING PARTS.....	9-16
COOLING	3-10
COOLING BRAKE OIL.....	9-4
COOLING HYDRAULIC OIL.....	9-2
COUNTERWEIGHT	1-8
COWLING	1-7
D	
DAMPENING CYLINDER.....	10-43
DAMPENING CYLINDER ATTACHING PARTS	10-38
DASHBOARD	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
D (continued)	
RIGHT HAND	
S/N A228-01501↔S/N A228-01509	4-20
DASHBOARD CONTROL	
S/N A228-01501↔S/N A228-01509	4-12
DASHBOARD FRAME	
S/N A228-01501↔S/N A228-01509	2-18
S/N A228-01510⇒	2-20
DECALS	12-8
DERRICKING CYLINDER	10-42
DERRICKING CYLINDER ASSEMBLY	10-36
DERRICKING CYLINDER WITH BEMA	10-40
DIFFERENTIAL	6-4
DIPSTICK TUBE	5-39
DRIVE AXLE	6-2
E	
ELECTRIC CONTROL	5-44
ELECTRICAL CIRCUIT	
HR-45-EC	10-12
HR-48-EC	10-20
ELECTRO VALVE ASSEMBLY	9-18
ELECTRO VALVE ATTACHING PARTS	9-20
ELECTRO VALVE PARK BRAKE	
S/N A228-01510⇒	9-24
END BOOM	
HR-45-EC	10-14
HR-48-EC	10-24
END BOOM CABLE SUPPORT	
HR-48-EC	
S/N A228-01501↔S/N A228-01509	10-30
ENGINE ATTACHING PARTS	3-4
ENGINE WIRE HARNESS	3-2
EXHAUST	3-7
EXTENSION CYLINDER AND ATTACHING PARTS	11-24
F	
FIRE EXTINGUISHER	12-3
FLOOR PLATES	2-6
FRAME	1-2
FUEL CIRCUIT	3-13
FUEL TANK	3-12
FUSE PLATE	
S/N A228-01501↔S/N A228-01509	4-24
S/N A228-01510⇒	4-26
H	
HAND PUMP	7-6
S/N A228-01510⇒	7-8
HEATER	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
H (continued)	
S/N A228-01501↔S/N A228-01509	2-42
HOOD AND FENDERS	1-4
HORN	4-8
HYDRAULIC BLOCK LIFTING	9-26
HYDRAULIC CIRCUIT	
HR-45-EC	10-6
HR-48-EC	10-2
HYDRAULIC CIRCUIT CONVERTER	5-2
HYDRAULIC FILTER	9-27
HYDRAULIC LIFTING JACK	12-6
HYDRAULIC LINES	5-40
HYDRAULIC OIL TANK	9-30
HYDRAULIC SPREADER CONNECTION	
HR-48-EC	11-12
HYDRAULIC SPREADER CONNECTIONS	
HR-45-EC	11-10
HYDRAULIC STEERING CIRCUIT	7-11
HYDRAULIC TANK CIRCUIT	9-28
HYDRAULIC TUBING	
HR-48-EC	10-10
I	
INCHING VALVE	5-34
INDICATOR LIGHT ASSEMBLY	11-35
INDUCTION TRANSMITTER	5-38
INPUT SHAFT	5-8
INSTRUMENT PANEL	
S/N A228-01510⇒	4-14
INTERMEDIATE BOOM	
HR-48-EC	10-22
J	
JOYSTICK	
S/N A228-01501↔S/N A228-01509	2-35
S/N A228-01510⇒	2-36
JOYSTICK ATTACHING PARTS	
S/N A228-01501↔S/N A228-01509	2-34
L	
LEAK OIL CIRCUIT	9-8
LIFTING CIRCUIT	9-10
LIGHTS	4-6
LINERS	
INTERIOR COVERS	
S/N A228-01510⇒	2-16
S/N A228-01501↔S/N A228-01509	2-15

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
M	
MAIN BOOM.....	10-26
MAIN BOOM CABLE SUPPORT	
HR-45-EC	10-16
MAIN FRAME.....	11-2
MAIN VALVE.....	11-20
O	
OUTPUT SHAFT	5-23
P	
PARK BRAKE	5-42
PARK BRAKE CIRCUIT	8-18
PARK BRAKE CYLINDER.....	8-8
PARK BRAKE LEVER	8-21
PARK BRAKE PRESSURE VALVE	8-22
PEDALS	
S/N A228-01501↔S/N A228-01509	2-38
S/N A228-01510⇒.....	2-40
PENDULAR TWIST LOCK	
S/N A228-01501↔S/N A228-01509	11-26
S/N A228-01510⇒.....	11-28
PLANETARY DRIVE.....	6-6
POWER TAKE-OFF.....	5-24
POWER TAKE-OFF COVER	5-25
PRESSURE REGULATOR.....	5-31
PRESSURE SWITCH.....	9-6
R	
REAR WINDOW	
S/N A228-01501↔S/N A228-01509	2-26
S/N A228-01510⇒.....	2-28
RELAY PLATE	
S/N A228-01501↔S/N A228-01509	4-21
S/N A228-01510⇒.....	4-22
RETURN CIRCUIT	9-14
ROTATOR ASSEMBLY	11-22
ROTATOR MOTOR	11-14
ROTATOR VALVE	11-18
S	
SEAT	
S/N A228-01510⇒.....	2-32
SEAT ASSEMBLY	
S/N A228-01501↔S/N A228-01509	2-30
SERVICE BRAKE.....	8-6
SIDE-SHIFT CYLINDER	11-16
SPEED SENSOR	5-36
STEERING AXLE	7-14
STEERING AXLE ASSEMBLY	7-12
STEERING COLUMN.....	7-2

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
S (continued)	
S/N A228-01510⇒.....	7-4
STEERING CYLINDER.....	7-10
STOP ASSEMBLY.....	11-8
T	
TELESCOPING ATTACHING PARTS	
HR-45-EC.....	10-18
HR-48-EC.....	10-34
TIE ROD PIN.....	7-16
TIRE AND WHEEL.....	12-2
TRANSMISSION ATTACHING PARTS.....	5-4
TRANSMISSION CONNECTING PARTS.....	5-11
TRANSMISSION FILTER.....	5-32
TRANSMISSION HOUSING.....	5-10
TRANSMISSION VALVE.....	5-28
TRANSMISSION VALVE ATTACHING PARTS.....	5-26
TWIST LOCK	
S/N A228-01501⇔S/N A228-01509.....	11-30
S/N A228-01510⇒.....	11-32
TWIST LOCK CYLINDER.....	11-34
U	
UNIVERSAL SHAFT.....	6-8
V	
VENTILATION	
S/N A228-01510⇒.....	2-44
W	
WEAR PADS.....	11-4
WIRE HARNESS	
MAIN	
S/N A228-01501⇔S/N A228-01509.....	4-2
S/N A228-01510⇒.....	4-4
S/N A228-01510⇒.....	1-10
WIRING ROOF PLATE	
S/N A228-01501⇔S/N A228-01509.....	4-9
S/N A228-01510⇒.....	4-10

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com