


PARTS MANUAL

**ELECTRIC
N45XMXR, N30XMXDR
(A264)**

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

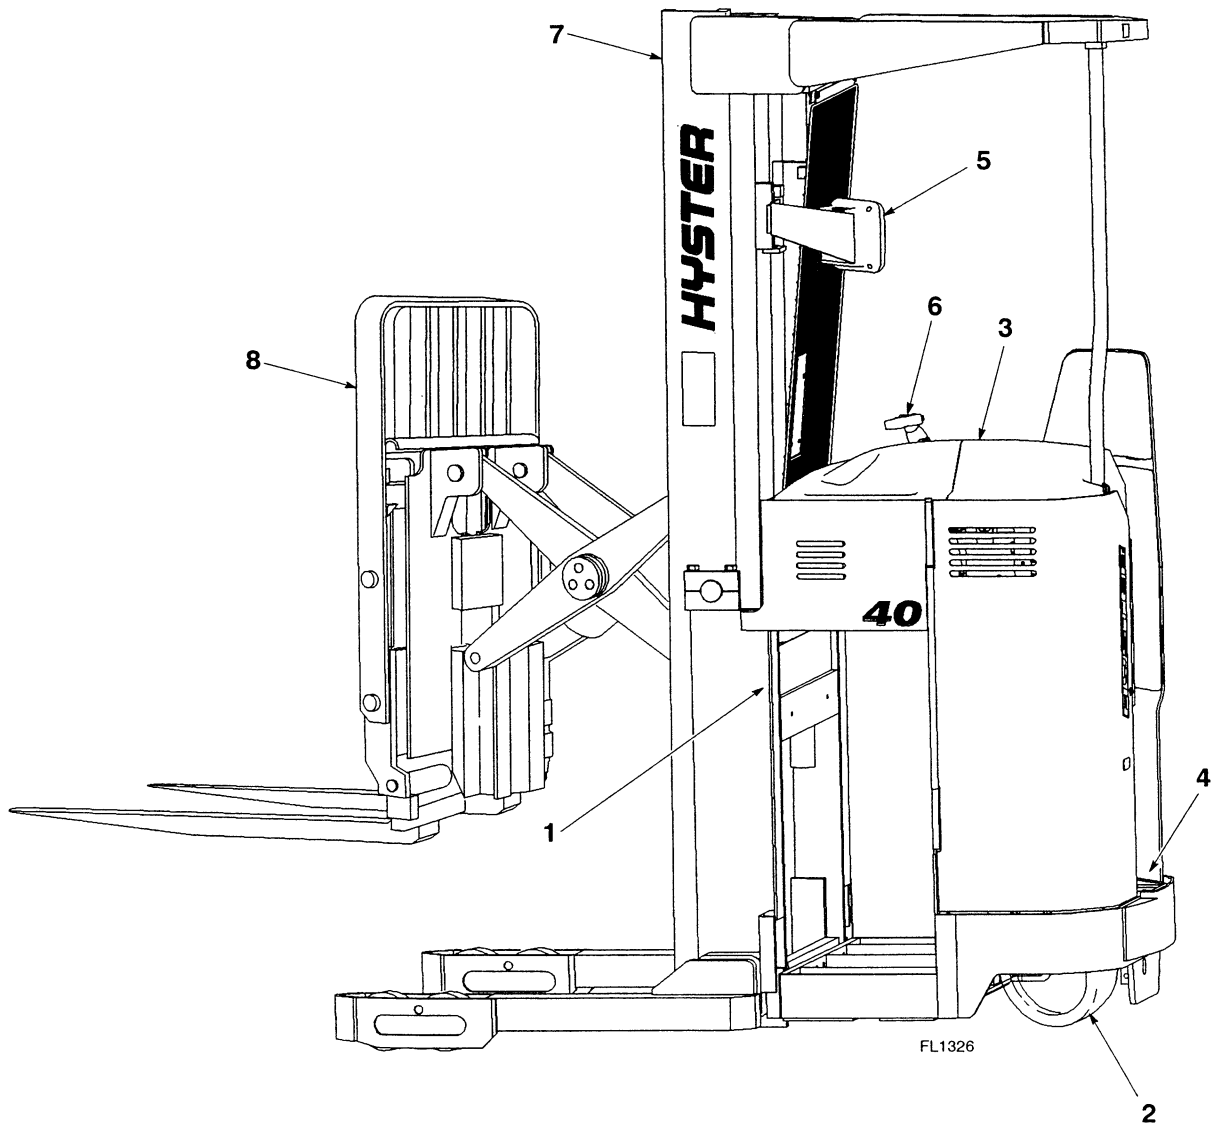

REF.	DIVISION	PAGE
1	Frame	1
2	Drive Unit	11
3	Steering	17
4	Brake System	25
5	Electrical	39
6	Hydraulic	53
7	Mast - Three Stage Full Free-Lift (FFL)	67
8	Carriage	85
	Options	101
	Numerical Index	116

TABLE OF CONTENTS

DESCRIPTION	PAGE NO.
AMBER REVOLVING LIGHT (Figure 69)	110
AUXILIARY CARRIAGE ITA-II(A) (Figure 59)	100
BACKREST AND FORKS ITA-II(A) (Figure 60) HOOK TYPE	101
BACKREST AND FORKS (Figure 61) SHAFT TYPE	102
BACKUP ALARM (Figure 68) FIRST USED ON S/N PENDING PER ECN 83286	109
BACKUP ALARM (Figure 67) LAST USED ON S/N PENDING PER ECN 83286	108
BATTERY CONNECTOR (Figure 32)	50
BATTERY RETENTION (Figure 2)	4
BATTERY TRAY (Figure 66)	107
BOLT-ON LOAD WHEELS (Figure 65)	106
BRAKE ACTUATOR ASSEMBLY (Figure 22)	36
BRAKE ASSEMBLY (Figure 15)	26
BRAKE PEDAL ASSEMBLY FIRST USED ON S/N PENDING ECN 83348 (Figure 18)	30
BRAKE PEDAL ASSEMBLY LAST USED ON S/N PENDING ECN 83348 (Figure 17)	28
BRAKE RESERVOIR TANK ASSEMBLY (Figure 16)	27
CARRIAGE - INNER FRAME (Figure 55)	94
CARRIAGE - OUTER FRAME - SIDESHIFTER (Figure 51)	86
CARRIAGE - OUTER FRAME - SIDESHIFTER ITA-II (Figure 52)	88
CARRIAGE - OUTER FRAME - STANDARD (Figure 50)	84
CARRIAGE - SCISSOR - 24 IN REACH (Figure 53)	90
CARRIAGE - SCISSOR - 42 IN REACH (Figure 54)	92
CASTER AND BRAKE ASSEMBLY LAST USED ON S/N PENDING ECN 833348 (Figure 20)	32
CASTER ASSEMBLY FIRST USED ON S/N PENDING ECN 833348 (Figure 21)	34

TABLE OF CONTENTS

DESCRIPTION	PAGE NO.
CHAINS, PINS, AND ANCHORS (Figure 43)	74
CONTACTOR PANEL - E (Figure 24)	40
CONTROL HANDLE (Figure 30)	48
CONTROL HANDLE ARRANGEMENT (Figure 29)	46
CONTROL HANDLE MECHANISM (Figure 31)	49
CONTROL VALVE ASSEMBLY (Figure 35)	56
DECAL AND PLATE LOCATION (Figure 5)	8
DRIVE UNIT (Figure 7)	14
ELECTRICAL ARRANGEMENT (Figure 23)	38
ELECTRICAL COMPONENTS (Figure 28)	45
FLOOR PAD AND OPERATOR SENSING SWITCH (Figure 4)	6
FREE LIFT CYLINDER (Figure 47)	80
FREE LIFT CYLINDER TALL MAST (Figure 48)	81
HEADER HOSE (Figure 41)	68
HEADLIGHTS (Figure 62)	103
HOOD AND COVERS (Figure 1)	2
HYDRAULIC CONTROL VALVE AND FITTINGS (Figure 34)	54
HYDRAULIC MOTOR (Figure 39)	62
HYDRAULIC PUMP (Figure 38)	60
HYDRAULIC PUMP AND MOTOR (Figure 37)	59
HYDRAULIC SYSTEM (Figure 33)	52
HYDRAULIC TANK ASSEMBLY (Figure 36)	58
INTEGRAL SIDESHIFTER CYLINDER (Figure 58) 24 IN AND 42 IN REACH	98
LIFT CONTACTOR (Figure 27)	44
LIFT LIMIT SWITCH (Figure 49)	82

TABLE OF CONTENTS

DESCRIPTION	PAGE NO.
LIGHT AND FAN ASSEMBLY (Figure 63)	104
MAIN CYLINDER ARRANGEMENT (Figure 44)	76
MAIN LIFT CYLINDER (Figure 45)	77
MAIN LIFT CYLINDER TALL MAST (Figure 46)	78
MAIN FREE-LIFT (Figure 42)	72
MASTER DRIVE UNIT (Figure 6)	12
MASTER CYLINDER (Figure 19)	31
MASTS - OUTER, INTERMEDIATE, AND INNER (Figure 40)	66
OPERATOR GUARD (Figure 3)	5
PMC HEATER (Figure 70)	112
POWER STEER ARRANGEMENT (Figure 9)	18
POWER STEER CONTACTOR (Figure 25)	42
REACH CYLINDER (Figure 56) 24 IN AND 42 IN REACH	96
STEER AND AUXILIARY MOTOR STANDARD - E CONSTRUCTION (Figure 13)	23
STEER AND AUXILIARY PUMP AND MOTOR (Figure 12)	22
STEER AND AUXILIARY PUMP (Figure 14)	24
STEER CONTROL UNIT (Figure 10)	20
STEER MOTOR (Figure 11)	21
TANDEM LOAD WHEELS (Figure 64)	105
TILT CYLINDER (Figure 57)	97
TRACTION CONTACTOR (Figure 26)	43
TRACTION MOTOR (Figure 8)	16

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This Parts Manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys, symbols, and footnotes.

Page 2
SERIAL CODE E138
HYSTER
TABLE OF CONTENTS

DESCRIPTION	PAGE
Accelerator	58-59
Accumulator	44
Auto-Clutch	24-25
Auto-Steering	42-43
Brake	
Brake-Push Lever Actuated	
Brake-Push Sole Actuated	
Carriage Edge-Shift	
Carriage Vista Two-Stage Full Free Lift	
Carriage Vista Three-Stage Full Free Lift	

Page 9
SERIAL CODE E138
HYSTER
MOTOR-TRACTION (Figure 4)
LAST USED ON PENDING S/N PER ECN 96020

KEY
A: 24 Volt-N30-40XMR, N25XMDR, N50XMA
B: 36 Volt-N40XMR, N25XMDR, N50XMA
C: 36 Volt-N45XMR, N30XMDR

REF.	PART NO.	NAME OF PART	QTY.	REF.	PART NO.
			A B C		
	+2015434	Motor	1	9	+203204
	\$2015436	Motor	1	9	\$203201
	+2015435	Motor	1	10	3287
	+2015437	Motor	1	11	3607
	+2014599	Motor	1	12	2014
	\$2014572	Motor	1	12	2037
	+2032087	Cover-CE	1	12	+201
1	+2032089	Cover-CE	1	12	\$201
1	+2032088	Cover-CE	1	13	+34
2	\$2032090	Cover-CE	1	13	\$20
2	2032085	Yoke/Bearing Support	1	14	13
3	2012888	Brush	4	15	24
4	360937	Yoke/Holder	1	16	
5	328760	Spring-Brush	8	17	
6	360938	Connector	1	18	
7	+2032039	Field	1	19	
9	\$2032042	Field	1		
9	2032040	Field	1		

©1995 HYSTER COMPANY See Service Manual for service procedures

Page 180
SERIAL CODE E138
HYSTER
INDEX-NUMERICAL

PART NO.	FIGURE	REF. NO.	PART NO.	FIGURE	REF. NO.	PART NO.	FIGURE	REF. NO.	PART NO.	FIGURE	REF. NO.
368507	48	1	370158	42	11	373158	11	14	372605	91	34
368508	48	1	370250	43	11	372607	82	34	372608	22	3
368509	47	2	370251	1	7	372611	82	34	372617	22	3
368615	48	1	370252	1	7	372620	70	1	372613	43	4
368616	54	1	370254	1	7	372621	66	1	372614	43	4
368618	30	2	370255	1	7	372622	66	1	372615	26	6
368619	47	2	370257	1	7	372624	66	1	372617	42	11
368842	48	8	370258	1	7	372624	66	1	372617	43	4
368843	43	3									
368848	39	3									

Page 1
SERIAL CODE E138
HYSTER
ILLUSTRATED CONTENTS

REF.	DIVISION	PAGE
1	Frame	1
2	Master Drive Unit	22
3	Steering	35
4	Brake System	44
5	Electrical	56
6	Hydraulic	56
7	Mast-Vista Two Stage	67
8	Mast-Vista Three Stage	72
9	Carriage	82
10	Options	96

©1995 HYSTER COMPANY See Service Manual for service procedures 121/95

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com