

# **PARTS MANUAL**

---

**C60XT2, C80XT2  
(A499)**

CUSTOMER EDITION

---

***HYSTER***



**SECTIONS**

<b>1</b>	<b>FRAME/DRIVE UNIT</b>
<b>2</b>	<b>ELECTRICAL SYSTEM</b>
<b>3</b>	<b>STEER HANDLE/BRAKE SYSTEM</b>
<b>4</b>	<b>LIFT LINKAGE AND FORKS</b>
<b>5</b>	<b>HYDRAULIC SYSTEM</b>
<b>6</b>	<b>OPTIONS</b>
<b>7</b>	<b>NUMERICAL INDEX</b>

This Parts Manual is divided into 7 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.



**TABLE OF CONTENTS**

DESCRIPTION	PAGE
<b>B</b>	
BATTERY RETENTION.....	1-10
BATTERY TRAY .....	1-12
BRAKE SHOE AND LINKAGE .....	3-18
<b>C</b>	
CASTER	
ARTICULATING .....	1-20
SPRING LOADED	
S/N PENDING PER ECN 83872-02⇒ .....	1-16
⇒S/N PENDING PER ECN 83872-02 .....	1-14
CONTACTOR	
FORWARD/REVERSE	
"EE" .....	2-12
⇒S/N A499N-01554W .....	2-8
S/N A499N-01555W⇒ .....	2-10
CONTACTOR PANEL .....	2-4
"EE" CONSTRUCTION.....	2-6
CONTROL HANDLE	
⇒S/N A499N-01554W .....	3-10
CONTROL HEAD	
⇒S/N A499N-01554W .....	3-12
CONTROL HEAD AND HANDLE	
S/N A499N-01555W⇒.....	3-14
<b>D</b>	
DECAL AND PLATE LOCATION	
⇒S/N A499N-01554W .....	1-2
S/N A499N-01555W⇒ .....	1-4
<b>E</b>	
ELECTRICAL .....	2-2
<b>F</b>	
FOOT SWITCH	
FOURTH SPEED.....	1-6
<b>H</b>	
HOOD AND COVERS .....	1-8
HOURLY METER/BATTERY GAUGE.....	2-14
HYDRAULIC .....	5-2
HYDRAULIC MOTOR.....	5-9
HYDRAULIC PUMP AND MOTOR.....	5-6
<b>L</b>	
LIFT CYLINDER	
S/N PENDING PER ECN 83175⇒ .....	5-5
⇒S/N PENDING PER ECN 83175 .....	5-4
LIFT LINKAGE.....	4-2
LOAD BACKREST .....	4-11
LOAD WHEEL	

**TABLE OF CONTENTS (Continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
<b>L (continued)</b>	
DUAL .....	4-8
SINGLE .....	4-10
TANDEM .....	4-6
<b>M</b>	
MASTER DRIVE UNIT	
⇒S/N A499N-01554W .....	1-22
S/N A499N-01555W⇒ .....	1-26
<b>O</b>	
OPERATOR PAD .....	1-32
3 1/2-INCH THICK .....	6-3
WITH REMOTE BUTTONS .....	6-4
OPERATOR TRAY .....	6-2
<b>S</b>	
STATIC STRAP .....	1-18
STEER TOWER AND BRAKE LINKAGE	
⇒S/N A499N-01554W .....	3-2
S/N A499N-01555W⇒ .....	3-6
<b>T</b>	
TRACTION MOTOR .....	1-30

**ABBREVIATIONS QUICK REFERENCE SHEET**

Listed below are abbreviations used in parts manuals to denote the following expressions:

<b>TERM</b>	<b>DEFINITION</b>	<b>TERM</b>	<b>DEFINITION</b>
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**