

PARTS MANUAL

RIDER

B60Z (A230)

B80Z (A233)

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME/DRIVE UNIT	
2	ELECTRICAL SYSTEM	
3	STEER HANDLE/BRAKE SYSTEM	
4	LIFT LINKAGE AND FORKS	
5	HYDRAULIC SYSTEM	
6	OPTIONS	
7	NUMERICAL INDEX	

This Parts Manual is divided into 7 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AUXILLIARY CONTROL BOX	3-12
B	
BATTERY DISCONNECT	1-8
BATTERY RETENTION.....	1-6
BATTERY ROLLER OPTION	6-7
C	
CASTER ASSEMBLY	
A230	
⇒ D/B 10/2001	4-6
A233 - ALL	
D/B 10/2001 ⇒	4-8
CONTROL HANDLE ARM ASSEMBLY.....	3-6
CONTROL HANDLE ASSEMBLY.....	3-10
CONTROL HANDLE SWIVEL ASSEMBLY	3-8
CONTROL PANEL ASSEMBLY	
A233 - ALL	
A230	
D/B 10/2001 ⇒	2-4
⇒ D/B 10/2001 A230.....	2-2
CONVENIENCE TRAY OPTION	6-12
COVERS	1-2
D	
DECAL AND PLATE LOCATION.....	1-7
DOUBLE PALLET FORK OPTION	
A233	
13.4 IN. BATTERY BOX	6-4
DRIVE UNIT ASSEMBLY	
A233 - ALL	
A230	
D/B 10/2001 ⇒	1-12
⇒ D/B 09/2001	1-10
E	
ELECTRIC BRAKE	
A230	
⇒ D/B 10/2001	3-2
D/B 10/2001 ⇒	3-4
A233.....	3-5
F	
FORK WELDMENT AND PULL ROD OPTIONS	6-2
G	
GENERAL TRUCK	
DRIVE END	1-4

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
H	
HEAVY DUTY CASTER OPTION	6-8
HYDRAULIC ASSEMBLY	
A230.....	5-2
A233.....	5-4
HYDRAULIC POWER UNIT	
A230.....	5-6
A233.....	5-8
L	
LIFT CYLINDER ASSEMBLY	5-10
LIFT LINKAGE.....	4-2
LOAD BACKREST OPTION.....	6-6
LOAD WHEEL	
DUAL OPTION.....	6-11
SINGLE	
FOUR BEARING OPTION	6-10
TWO BEARING	4-5
Q	
QUICK PICK OPTION	6-5
T	
TRACTION MOTOR	
A230	
⇒ D/B 10/2001	2-6
D/B 10/2001 ⇒	2-8
A233.....	2-10

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com