

PARTS MANUAL


**CHALLENGER
H60-70-80-90C**

(C005)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

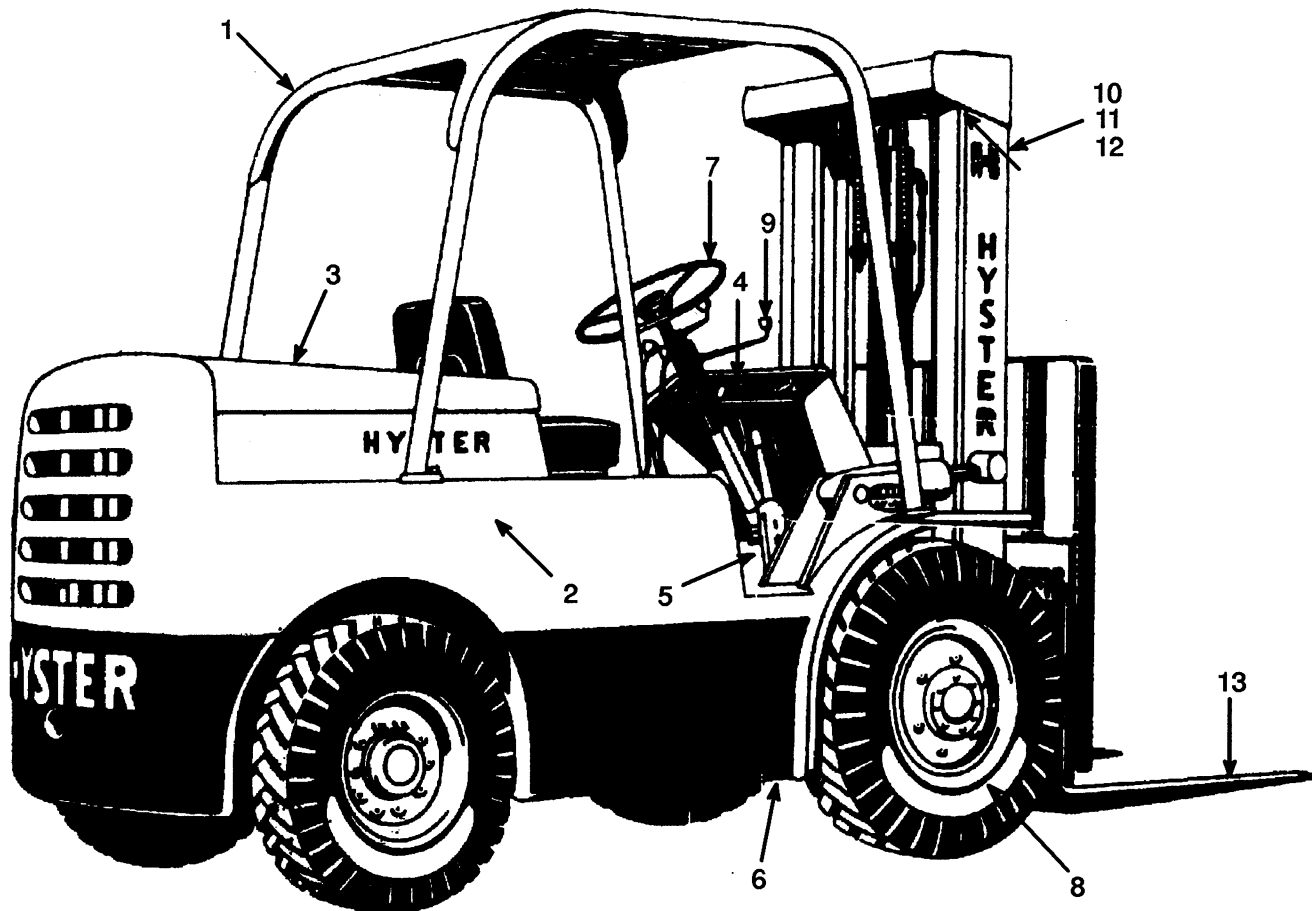

REF	SECTION	PAGE
1	FRAME	Page 3
2	ENGINE	Page 23
3	FUEL SYSTEM	Page 111
4	ELECTRICAL	Page 173
5	CLUTCH	Page 247
6	TRANSMISSION	Page 265
7	STEERING	Page 315
8	BRAKE	Page 343
9	HYDRAULIC SYSTEM	Page 359
10	STANDARD MAST	Page 417
11	THREE-STAGE MAST	Page 429
12	FREE-LIFT MAST	Page 457
13	OPTIONAL EQUIPMENT	Page 485
	NUMERICAL INDEX	Page 525

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
A	
AIR FILTER (Figure 90) GASOLINE & LPG	Page 164
AIR FILTER (Figure 91) DIESEL LAST USED ON S/N C5D-12709, C5E-4649, C5S-2823 AND C5T-6749	Page 166
AIR FILTER (Figure 92) DIESEL LAST USED ON S/N C5A-3796, USED ON C5D-12710 TO C5D-15209, C5E-4650 TO C5E-5769, C5H-1550 TO C5H-1749, C5S-2824 TO C5S-3197 AND C5T-6750 TO C5T-7064	Page 168
AIR FILTER (Figure 93) DIESEL USED ON S/N C5D-15210 TO C5D-22618, C5S-3198 TO C5S-3837 AND C5T-7065 TO C5T-8057, FIRST USED ON C5E-5770 AND C5H-1750	Page 169
AIR FILTER (Figure 94) DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 170
ALTERNATOR (Figure 123) LAST USED ON S/N C5D-20351 (GASOLINE & LPG OC), C5D-20613 (GASOLINE & LPG PS), C5D-20226 (DIESEL OC), OR C5D-20615 (DIESEL PS); C5E-20617 (GASOLINE & LPG), C5E-10563 (DIESEL); C5S-3707 (DIESEL); C5T-7729 (GASOLINE OC), C5T-7763 (LPG OC), C5T-7752 (DIESEL OC), C5T-7739 (GASOLINE PS) OR C5T-7759 (DIESEL PS)	Page 238
ALTERNATOR (Figure 124) FIRST USED ON S/N C5D-20352 (GASOLINE & LPG OC), C5D-20614 (GASOLINE & LPG PS), C5D-20227 (DIESEL OC), OR C5D-20616 (DIESEL PS); C5E-20618 (GASOLINE & LPG), C5E-10564 (DIESEL); C5S-3708 (DIESEL); C5T-7730 (GASOLINE OC), C5T-7764 (LPG OC), C5T-7753 (DIESEL OC), C5T-7740 (GASOLINE PS) OR C5T-7760 (DIESEL PS)	Page 240
ALTERNATOR (Figure 125) POST-PRODUCTION KIT 1323659	Page 242
ALTERNATOR (Figure 126) TYPES GS, LPS & DS	Page 244
AUXILIARY THROTTLE (Figure 258) DRY CLUTCH & OIL CLUTCH	Page 522

TABLE OF CONTENTS

DESCRIPTION	PAGE
B	
BLOCK FORKS (Figure 250) HOOK TYPE	Page 510
BOOM (Figure 260)	Page 524
BRAKE (Figure 176) LAST USED ON S/N C5A-2180, C5D-8004, C5S-2289, C5T-6184 & C5Y-1731	Page 354
BRAKE (Figure 177) FIRST USED ON S/N C5A-2181, C5D-8005, C5S-2290, C5T-6185 & C5Y-1732	Page 356
BRAKE LINKAGE (Figure 171) POWERSHIFT	Page 344
BRAKE LINKAGE (Figure 172) DRY AND OIL CLUTCH	Page 346
C	
CAMSHAFT & VALVES (Figure 36) GASOLINE & LPG	Page 62
CARBURETOR (Figure 68) GASOLINE LAST USED ON S/N C5A-2268, C5D-7521, C5E-3120, C5S-2177, C5T-6148 AND C5Y-1741	Page 122
CARBURETOR (Figure 69) GASOLINE FIRST USED ON S/N C5A-2269, C5D-7522, C5E-3121, C5S-2178, C5T-6149 AND C5Y-1742	Page 124
CARBURETOR (Figure 70) LPG LAST USED ON S/N C5D-12747, C5E-5776, C5S-2938 AND C5T-6838	Page 126
CARBURETOR (Figure 71) LPG FIRST USED ON S/N C5D-12748, C5E-5777, C5S-2939 AND C5T-6839	Page 128
CARRIAGE (Figure 206) PIN TYPE STANDARD MAST 48 INCH AND 60 INCH	Page 426
CARRIAGE (Figure 208) HOOK TYPE STANDARD MAST	Page 428

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CARRIAGE (Figure 219) HOOK TYPE THREE-STAGE MAST 116000 SERIES MASTS	Page 450
CARRIAGE (Figure 220) HOOK TYPE THREE-STAGE MAST 126000, 187000, 206000 & 283000 SERIES MASTS	Page 452
CARRIAGE (Figure 221) PIN TYPE THREE-STAGE MAST	Page 454
CARRIAGE (Figure 231) HOOK TYPE FREE-LIFT MAST 76000 SERIES MASTS	Page 476
CARRIAGE (Figure 232) HOOK-TYPE FREE-LIFT MAST 126000, 187000, 225000, 252000 & 283000 SERIES MASTS	Page 478
CARRIAGE (Figure 233) PIN TYPE FREE-LIFT MAST 48 INCH AND 60 INCH	Page 480
CARRIAGE (Figure 234) PIN TYPE FREE-LIFT MAST 61-7/8 INCH AND 62 INCH CARRIAGE	Page 482
CARRIAGE(Figure 207) PIN TYPE STANDARD MAST 62 INCH	Page 427
CHARGE PUMP (Figure 135) OIL CLUTCH LAST USED ON S/N C5A-2028, C5D-5108, C5E-2837 (GASOLINE & LPG), C5E-2958 (DIESEL), C5S-1963 & C5Y-1627 ...	Page 264
CLUTCH BOOSTER (Figure 134) LAST USED ON S/N C5A-3380, C5D-11561, C5E-4295, C5S-2382 & C5T-6540	Page 262
CLUTCH LINKAGE (Figure 129) DRY CLUTCH	Page 252

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CLUTCH LINKAGE (Figure 130) OIL CLUTCH LAST USED ON S/N C5D-1971, C5E-1504, C5S-1615 & C5Y-1541 ..	Page 254
CLUTCH LINKAGE (Figure 131) OIL CLUTCH USED ON S/N C5A-1501 TO C5A-3380, C5D-1972 TO C5D-11561, C5E-1505 TO C5E-4295, C5S-1616 TO C5S-2832 & C5T-1501 TO C5T-6540 FIRST USED ON S/N C5Y-1542	Page 256
CLUTCH LINKAGE (Figure 132) OIL CLUTCH FIRST USED ON S/N C5A-3381, C5D-11562, C5E-4296, C5H-1501, C5S-2833 & C5T-6541	Page 258
COLD START SYSTEM (Figure 62) DIESEL	Page 106
CONTROL VALVE (Figure 190)	Page 396
CONTROL VALVE (Figure 191)	Page 398
CONVERTER HOUSING (Figure 138) POWERSHIFT	Page 272
COOLING (Figure 29) GASOLINE & LPG: NON-EUROPE DRY CLUTCH AND OIL CLUTCH	Page 46
COOLING (Figure 30) GASOLINE & LPG: NON-EUROPE POWERSHIFT	Page 48
COOLING (Figure 31) GASOLINE & LPG: EUROPE OIL CLUTCH	Page 50
COOLING (Figure 32) GASOLINE & LPG: EUROPE POWERSHIFT	Page 52
COOLING (Figure 45) DIESEL DRY AND OIL CLUTCH	Page 78
COOLING (Figure 46) DIESEL POWERSHIFT	Page 80

TABLE OF CONTENTS

DESCRIPTION	PAGE
C (Continued)	
COOLING GASOLINE & LPG: EUROPE OIL CLUTCH	Page 51
COUNTERWEIGHT (Figure 5) H60C & H70C	Page 10
COUNTERWEIGHT (Figure 6) H80C & H90C	Page 12
CRANKSHAFT/PISTONS/FLYWHEEL (Figure 35) GASOLINE & LPG	Page 58
CRANKSHAFT/PISTONS/FLYWHEEL (Figure 51) DIESEL LAST USED ON S/N C5D-14871, C5E-5690 (OC), C5E-5675 (PS), C5H-1635, C5S-3126 AND C5T-6988	Page 90
CRANKSHAFT/PISTONS/FLYWHEEL (Figure 52) DIESEL FIRST USED ON S/N C5D-14872, C5E-5691 (OC), C5E-5676 (PS), C5H-1636, C5S-3127 AND C5T-6989	Page 92
CYLINDER BLOCK (Figure 34) GASOLINE & LPG	Page 56
CYLINDER BLOCK (Figure 47) 4.203 DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 82
CYLINDER BLOCK (Figure 48) 4.203.2 DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 84
CYLINDER HEAD (Figure 49) 4.203 DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 86
CYLINDER HEAD (Figure 50) 4.203.2 DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 88
D	
DIFFERENTIAL & CARRIER (Figure 148) LAST USED ON S/N C5D-13320 (GASOLINE & LPG OC), C5D-13319 (GASOLINE & LPG PS), C5D-13400 (DIESEL OC), C5D-13398 (DIESEL PS), C5E-5417, C5S-3131 (OC), C5S-3038 (PS), C5T-6873 (GASOLINE & LPG) & C5T-6855 (DIESEL)	Page 294

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
D (Continued)	
DIFFERENTIAL & CARRIER (Figure 149) USED ON S/N C5D-13322 TO C5D-16324 (GASOLINE & LPG OC), C5D-13321 TO C5D-16352 (GASOLINE & LPG PS), C5D-13401 TO C5D-16335 (DIESEL OC), C5D-13399 TO C5D-16333 (DIESEL PS), C5E-5418 TO C5E-7360 (OC) OR C5E-7229 (PS), C5S-3132 TO C5S-3339 (OC), C5S-3039 TO C5S-3361 (PS), C5T-6874 (GASOLINE & LPG) OR C5T-6856 (DIESEL) TO C5T-7198	Page 296
DIFFERENTIAL & CARRIER (Figure 150) USED ON S/N C5D-16325 TO C5D-21211 (GASOLINE & LPG OC), C5D-16353 TO C5D-21161 (GASOLINE & LPG PS), C5D-16336 TO C5D-21184 (DIESEL OC), C5D-16334 TO C5D-21331 (DIESEL PS), C5E-7361 TO C5E-11014 (DIESEL OC) OR C5E-11074 (GASOLINE & LPG OC), C5E-7230 TO C5E-10967 (GASOLINE & LPG PS) OR C5E-10778 (DIESEL PS), C5H-1501 TO C5H-2111, C5S-3340 TO C5S-3736 (OC), C5S-3362 TO C5S-3783 (PS), C5T-7199 TO C5T-7837 (GASOLINE & LPG OC) OR C5T-7882 (GASOLINE & LPG PS) OR C5T-7865 (DIESEL OC) OR C5T-7892 (DIESEL PS)	Page 298
DIFFERENTIAL & CARRIER (Figure 151) FIRST USED ON S/N C5D-21212 (GASOLINE & LPG OC), C5D-21162 (GASOLINE & LPG PS), C5D-21185 (DIESEL OC), C5D-21332 (DIESEL PS), C5E-11015 (DIESEL OC), C5E-11075 (GASOLINE & LPG OC), C5E-10968 (GASOLINE & LPG PS), C5E-10779 (DIESEL PS), C5H-2112, C5S-3737 (OC), C5S-3784 (PS), C5T-7838 (GASOLINE & LPG OC), C5T-7883 (GASOLINE & LPG PS), C5T-7866 (DIESEL OC) & C5T-7893 (DIESEL PS)	Page 300
DISTRIBUTOR (Figure 112) F-226 GASOLINE & LPG ENGINES LAST USED ON S/N C5D-21672, C5E-10728, C5H-2012, C5S-3636 & C5T-7606	Page 214
DISTRIBUTOR (Figure 113) F227 GASOLINE & LPG ENGINES LAST USED ON S/N C5D-21672, C5E-10728, C5H-2012, C5S-3636 & C5T-7606	Page 216
DISTRIBUTOR (Figure 114) GASOLINE & LPG ENGINES FIRST USED ON S/N C5D-21673, C5E-10729, C5H-2013, C5S-3637 & C5T-7607	Page 218
DRAG LINK & TIE ROD (Figure 170)	Page 342
DRIVE AXLE (Figure 152)	Page 302
DRIVE SHAFT (Figure 153)	Page 304
DRY CLUTCH (Figure 128)	Page 251

TABLE OF CONTENTS

DESCRIPTION	PAGE
E	
ELECTRICAL SYSTEM (Figure 100) DIESEL ENGINE WITH ALTERNATOR LAST USED ON S/N C5D-11823, C5H-1506, C5S-2825 & C5T-6582 .	Page 188
ELECTRICAL SYSTEM (Figure 101) DIESEL ENGINE WITH ALTERNATOR USED ON S/N C5D-11824 TO C5D-20226 (OC) OR C5D-20615 (PS), C5S-2826 TO C5S-3707, AND C5T-6583 TO C5T-7752 (OC) OR C5T-7759 (PS) FIRST USED ON S/N C5H-1507	Page 192
ELECTRICAL SYSTEM (Figure 102) DIESEL ENGINE WITH ALTERNATOR FIRST USED ON S/N C5D-20227 (OC) OR C5D-20616 (PS), C5S-3708, AND C5T-7753 (OC) OR C5T-7760 (PS)	Page 194
ELECTRICAL SYSTEM (Figure 103) GASOLINE & LPG ENGINE WITH ALTERNATOR: EUROPE LAST USED ON S/N C5A-3494 & C5E-4383	Page 196
ELECTRICAL SYSTEM (Figure 104) GASOLINE & LPG ENGINE WITH ALTERNATOR: EUROPE FIRST USED ON S/N C5A-3495 & C5E-4384	Page 198
ELECTRICAL SYSTEM (Figure 105) DIESEL ENGINE WITH ALTERNATOR: EUROPE	Page 200
ELECTRICAL SYSTEM (Figure 95) GASOLINE & LPG ENGINES WITH GENERATOR	Page 176
ELECTRICAL SYSTEM (Figure 96) GASOLINE & LPG ENGINES WITH ALTERNATOR LAST USED ON S/N C5D-11823, C5H-1506, C5S-2825 & C5T-6582 .	Page 180
ELECTRICAL SYSTEM (Figure 97) GASOLINE AND LPG ENGINES WITH ALTERNATOR USED ON S/N C5D-11824 TO C5D-20351 (OC) OR C5D-20613 (PS), C5H-1507 TO C5H-2047, C5S-2826 TO C5S-3718, AND C5T-6583 TO C5T-7729 (GASOLINE OC) OR C5T-7763 (LPG OC) OR C5T-7739 (PS)	Page 182
ELECTRICAL SYSTEM (Figure 98) GASOLINE & LPG ENGINES WITH ALTERNATOR FIRST USED ON S/N C5D-20352 (OC) OR C5D-20614 (PS), C5H-2048, C5S-3719, AND C5T-7730 (GASOLINE OC) OR C5T-7764 (LPG OC) OR C5T-7740 (PS)	Page 184
ELECTRICAL SYSTEM (Figure 99) DIESEL ENGINE WITH GENERATOR	Page 186
ENGINE & TRANSMISSION MOUNTS (Figure 14) GASOLINE AND LPG DRY AND OIL CLUTCH	Page 27

TABLE OF CONTENTS

DESCRIPTION	PAGE
E (Continued)	
ENGINE & TRANSMISSION MOUNTS (Figure 15) GASOLINE & LPG POWERSHIFT LAST USED ON S/N C5D-21141, C5E-10658, C5H-2019, C5S-3672 AND C5T-7918	Page 28
ENGINE & TRANSMISSION MOUNTS (Figure 16) GASOLINE & LPG POWERSHIFT FIRST USED ON S/N C5D-21142, C5E-10659, C5H-2020, C5S-3673 AND C5T-7919	Page 29
ENGINE & TRANSMISSION MOUNTS (Figure 17) DIESEL: DRY AND OIL CLUTCH LAST USED ON S/N C5A-2161, C5D-8078, C5E-3065, C5S-2253 AND C5T-6180	Page 30
ENGINE & TRANSMISSION MOUNTS (Figure 18) DIESEL: OIL CLUTCH USED ON S/N C5A-2162 & UP, C5D-8079 TO C5D-12595, C5E-3066 TO C5E-4592, C5S-2254 TO C5S-2909 AND C5T-6181 TO C5T-6749	Page 32
ENGINE & TRANSMISSION MOUNTS (Figure 19) DIESEL: OIL CLUTCH FIRST USED ON S/N C5D-12596, C5E-4593, C5H-2686, C5S-2910 AND C5T-6750	Page 34
ENGINE & TRANSMISSION MOUNTS (Figure 20) DIESEL LAST USED ON S/N C5A-2161, C5D-8078, C5E-3065, C5S-2253 AND C5T-6180	Page 35
ENGINE & TRANSMISSION MOUNTS (Figure 21) DIESEL: POWERSHIFT USED ON S/N C5A-2162 & UP, C5D-8079 TO C5D-12595, C5E-3066 TO C5E-4592, C5S-2254 TO C5S-2909 AND C5T-6181 TO C5T-6749	Page 36
ENGINE & TRANSMISSION MOUNTS (Figure 22) DIESEL: POWERSHIFT FIRST USED ON S/N C5D-12596, C5E-4593, C5H-2686, C5S-2910 AND C5T-6750	Page 38
EXHAUST (Figure 23) GASOLINE	Page 40
EXHAUST (Figure 24) STEVEDORING: TYPE GS AND LPS	Page 41
EXHAUST (Figure 25) TYPE DS LAST USED ON S/N C5D-15209	Page 42

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
E (Continued)	
EXHAUST (Figure 26) H60-80C: TYPE DS FIRST USED ON S/N C5D-15210	Page 43
EXHAUST (Figure 27) DIESEL, OVERHEAD LAST USED ON S/N C5D-15209, C5E-5769, C5H-1744, C5S-3197 AND C5T-7064	Page 44
EXHAUST (Figure 28) DIESEL, OVERHEAD FIRST USED ON S/N C5D-15210, C5E-5770, C5H-1745, C5S-3198 AND C5T-7065	Page 45
F	
FIRE EXTINGUISHER (Figure 259)	Page 523
FLYWHEEL HOUSING/ADAPTER PLATE (Figure 44) GASOLINE & LPG	Page 76
FLYWHEEL HOUSING/ADAPTER PLATE (Figure 63) DIESEL	Page 108
FORK EXTENSION (Figure 253)	Page 513
FORKS (Figure 246) HOOK TYPE	Page 506
FORKS (Figure 247) PIN TYPE	Page 507
FORKS (Figure 248) BLOCK TYPE 48 INCH CARRIAGE	Page 508
FORKS (Figure 249) BLOCK TYPE 62 INCH CARRIAGE	Page 509
FORWARD/REVERSE CLUTCH (Figure 146) POWERSHIFT	Page 290
FRAME & FLOORPLATES (Figure 2)	Page 4
FREE-LIFT (Figure 215) THREE-STAGE MAST 206700 & 283000 SERIES MASTS	Page 442

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
F (Continued)	
FREE-LIFT (Figure 225) FREE-LIFT MAST 76000 SERIES MASTS	Page 464
FREE-LIFT (Figure 226) FREE-LIFT MAST 126000 & 187000 SERIES MASTS	Page 466
FREE-LIFT (Figure 227) FREE-LIFT MAST 225000, 252000 & 283000 SERIES MASTS	Page 468
FUEL FILTER (Figure 73) 4.203 DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 132
FUEL FILTER (Figure 74) 4.203.2 DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 134
FUEL INJECTION (Figure 75) 4.203 DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 136
FUEL INJECTION (Figure 76) 4.203.2 DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 138
FUEL INJECTION PUMP (Figure 79) 4.203 DIESEL LAST USED ON ENGINE S/N 2615267	Page 144
FUEL INJECTION PUMP (Figure 80) 4.203 DIESEL USED ON ENGINE S/N 2615268 TO TRUCK S/N C5D-22618, C5S-3837 AND C5T-8057	Page 148
FUEL INJECTION PUMP (Figure 81) 4.203.2 DIESEL FIRST USED ON TRUCK S/N C5D-22619, C5S-3838 AND C5T-8058	Page 152
FUEL PUMP (Figure 72) GASOLINE	Page 130
FUEL SYSTEM (Figure 64) DIESEL	Page 114
FUEL SYSTEM (Figure 65) GASOLINE	Page 116

TABLE OF CONTENTS

DESCRIPTION	PAGE
F (Continued)	
FUEL SYSTEM (Figure 66) LPG: LAST USED ON S/N C5D-12747, C5E-5776, C5S-2938 AND C5T-6838	Page 118
FUEL SYSTEM (Figure 67) LPG FIRST USED ON S/N C5D-12748, C5E-5777, C5S-2939 AND C5T-6839	Page 120
G	
GEAR COVER/GOVERNOR (Figure 42) GASOLINE & LPG	Page 72
GENERATOR (Figure 121) OIL CLUTCH LAST USED ON S/N C5D-5108, C5S-1963 & C5Y-1627	Page 234
GENERATOR (Figure 122) OIL CLUTCH FIRST USED ON S/N C5D-5109, C5S-1964 & C5Y-1628	Page 236
H	
HEADER HOSE (Figure 255) STANDARD MAST	Page 516
HEADER HOSE (Figure 256) FREE-LIFT & THREE-STAGE MASTS	Page 518
HIGH/LOW CLUTCH (Figure 145) POWERSHIFT	Page 288
HOOD (Figure 3) STANDARD	Page 6
HOOD (Figure 4) STEVEDORING	Page 8
HYDRAULIC (Figure 179) STANDARD MAST ONE SPEED LIFT VALVE LAST USED ON S/N C5A-3730, C5D-11136, C5E-3817, C5S-2765 & C5T-6490	Page 362
HYDRAULIC (Figure 180) STANDARD MAST ONE SPEED LIFT VALVE FIRST USED ON S/N C5A-3731, C5D-11137, C5E-3818, C5H-1501, C5S-2766 & C5T-6491	Page 366

TABLE OF CONTENTS

DESCRIPTION	PAGE
H (Continued)	
HYDRAULIC (Figure 181) STANDARD MAST TWO SPEED LIFT VALVE LAST USED ON S/N C5A-3730, C5D-11136, C5E-3817, C5S-2765 & C5T-6490	Page 370
HYDRAULIC (Figure 182) STANDARD MAST TWO SPEED LIFT VALVE FIRST USED ON S/N C5A-3731, C5D-11137, C5E-3818, C5S-2766 & C5T-6491	Page 374
HYDRAULIC (Figure 183) FREE-LIFT AND THREE-STAGE MASTS LAST USED ON S/N C5A-3730, C5D-11136, C5E-3817, C5S-2765 & C5T-6490	Page 378
HYDRAULIC (Figure 184) FREE-LIFT AND THREE-STAGE MASTS FIRST USED ON S/N C5A-3731, C5D-1137, C5E-3818, C5S-2766 & C5T-6491	Page 382
HYDRAULIC OIL FILTER (Figure 194)	Page 404
HYDRAULIC PUMP (Figure 192) GASOLINE & LPG	Page 400
HYDRAULIC PUMP (Figure 193) DIESEL	Page 402
HYDRAULIC TANK (Figure 185)	Page 386
I	
INNER & OUTER MASTS (Figure 202) STANDARD MAST 121000, 131000 & 291000 SERIES MASTS	Page 418
INNER & OUTER MASTS (Figure 222) FREE-LIFT MAST 76000 SERIES MASTS	Page 458
INNER & OUTER MASTS (Figure 223) FREE-LIFT MAST 126000, 187000 & 225000 SERIES MASTS	Page 460
INNER & OUTER MASTS (Figure 224) FREE-LIFT MAST 252000 & 283000 SERIES MASTS	Page 462

TABLE OF CONTENTS

DESCRIPTION	PAGE
I (Continued)	
INSTRUMENT PANEL (Figure 106) GASOLINE & LPG LAST USED ON S/N C5D-19090, C5H-1977, C5S-3633 & C5T-7531 .	Page 202
INSTRUMENT PANEL (Figure 107) GASOLINE & LPG FIRST USED ON S/N C5D-19091, C5H-1978, C5S-3634 & C5T-7532	Page 204
INSTRUMENT PANEL (Figure 108) DIESEL LAST USED ON S/N C5D-19098, C5E-9735, C5H-1977, C5S-3633 & C5T-7531	Page 206
INSTRUMENT PANEL (Figure 109) DIESEL FIRST USED ON S/N C5D-19099, C5E-9736, C5H-1978, C5S-3634 & C5T-7532	Page 208
INSTRUMENT PANEL (Figure 110) GASOLINE & LPG: EUROPE LAST USED ON S/N C5E-9730	Page 210
INSTRUMENT PANEL (Figure 111) GASOLINE & LPG: EUROPE FIRST USED ON S/N C5E-9731	Page 212
K	
KNOBS (Figure 13)	Page 21
L	
LABELS & PAINT (Figure 12)	Page 19
LIFT CYLINDER (Figure 205) STANDARD MAST 291000 SERIES MASTS (EUROPE)	Page 424
LIFT CYLINDER (Figure 216) THREE-STAGE MAST 116000 SERIES MASTS	Page 444
LIFT CYLINDER (Figure 217) THREE-STAGE MAST 126000 & 187000 SERIES MASTS	Page 446
LIFT CYLINDER (Figure 218) THREE-STAGE MAST 206700 & 283000 SERIES MASTS	Page 448

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
L (Continued)	
LIFT CYLINDER (Figure 228) FREE-LIFT MAST 76000 SERIES MAST	Page 470
LIFT CYLINDER (Figure 229) FREE-LIFT MAST 126000 & 187000 SERIES MASTS	Page 472
LIFT CYLINDER (Figure 230) FREE-LIFT MAST 225000, 252000 & 283000 SERIES MASTS	Page 474
LIFT CYLINDER (Figure 204) STANDARD MAST 121000 131000 SERIES MASTS	Page 422
LIFT (Figure 203) STANDARD MAST 121000, 131000 & 291000 SERIES MASTS	Page 420
LIFT (Figure 212) THREE-STAGE MAST 116000 SERIES MASTS	Page 436
LIFT (Figure 213) THREE-STAGE MAST 126000 & 187000 SERIES MASTS	Page 438
LIFT (Figure 214) THREE-STAGE MAST MAIN LIFT CYLINDER 206700 & 283000 SERIES MASTS	Page 440
LIFT PUMP (Figure 77) 4.203 DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 140
LIFT PUMP (Figure 78) 4.203.2 DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 142
LIGHTS (Figure 257)	Page 520
LOAD BACKREST EXTENSION (Figure 252)	Page 512
LOCK-OFF VALVE (Figure 85) LAST USED ON S/N C5D-12747, C5E-5776, C5S-2938 AND C5T-6838	Page 158

TABLE OF CONTENTS

DESCRIPTION	PAGE
L (Continued)	
LOCK-OFF VALVE (Figure 86) USED ON S/N C5D-12748 TO C5D-18143, C5E-3777 TO C5E-9746 AND LAST USED ON C5S-2939 AND C5T-7752	Page 159
LOCK-OFF VALVE (Figure 87) FIRST USED ON S/N C5D-18144, C5E-9747 AND C5T-7753	Page 160
LPG CONVERTER (Figure 88) FIRST USED ON S/N C5D-12748, C5E-5777, C5S-2939 AND C5T-6839	Page 161
LPG FILTER (Figure 82) LAST USED ON S/N C5D-12747, C5E-5776, C5S-2938 AND C5T-6838	Page 155
LPG VAPORIZER (Figure 83) LAST USED ON S/N C5D-2816	Page 156
LPG VAPORIZER (Figure 84) USED ON S/N C5D-2817 TO C5D-12747, FIRST USED ON C5E-5776, C5S-2938 AND C5T-6838	Page 157
LUBE OIL PLUMBING (Figure 59) DIESEL	Page 103
M	
MANIFOLDS (Figure 43) GASOLINE & LPG	Page 74
MANIFOLDS (Figure 60) DIESEL LAST USED ON S/N C5D-22618, C5S-3837 AND C5T-8057	Page 104
MANIFOLDS (Figure 61) DIESEL FIRST USED ON S/N C5D-22619, C5S-3838 AND C5T-8058	Page 105
MASTER CYLINDER (Figure 173) LAST USED ON S/N C5D-14151, C5E-5398, C5H-1630, C5S-2988 & C5T-6796	Page 348
MASTER CYLINDER (Figure 174) USED ON S/N C5D-14152 TO C5D-18623, C5E-5399 TO C5E-9751, C5H-1631 TO C5H-1987 (OC) OR C5H-1967 (PS), C5S-2989 TO C5S-3678 (OC) OR C5S-3644 (PS) & C5T-6797 TO C5T-7538 (DIESEL OC) OR C5T-7557 (GASOLINE & LPG OC) OR C5T-7552 (PS)	Page 350
MASTER CYLINDER (Figure 175) FIRST USED ON S/N C5D-18624, C5E-9752, C5H-1988 (OC) OR C5H-1968 (PS), C5S-3679 (OC) OR C5S-3645 (PS) & C5T-7539 (DIESEL OC) OR C5T-7558 (GASOLINE & LPG OC) OR C5T-7553 (PS)	Page 352

TABLE OF CONTENTS

DESCRIPTION	PAGE
N	
NON-SUSPENSION SEAT (Figure 7) LAST USED ON S/N C5D-12766: DIESEL, LAST USED ON S/N C5D-12915: GASOLINE C5E-4807, C5H-1550, C5S-2885 & C5T-6717	Page 14
NON-SUSPENSION SEAT (BOSTROM) (FIGURE 9) FIRST USED ON S/N C5D-12767: DIESEL, FIRST USED ON S/N C5D-12916: GASOLINE C5E-4808, C5H-1551, C5S-2886 & C5T-6718	Page 16
NON-SUSPENSION SEAT (SEARS) (Figure 8) FIRST USED ON S/N C5D-12767: DIESEL, FIRST USED ON S/N C5D-12916: GASOLINE C5E-4808, C5H-1551, C5S-2886 & C5T-6718	Page 15
O	
OIL CLUTCH (Figure 127)	Page 248
OIL FILTER (Figure 39) GASOLINE & LPG LAST USED ON S/N C5A-3597, C5D-11378, C5E-4628 AND C5T-6553	Page 68
OIL FILTER (Figure 40) GASOLINE & LPG USED ON S/N C5A-3598 AND UP, C5D-11379 TO C5D-20351 (OIL CLUTCH) AND C5D-20613 (POWERSHIFT), C5E-4629 TO C5E-20617, UP TO C5H-2047, UP TO C5S-3718, AND C5T-6554 TO C5T-7729 (OIL CLUTCH) AND C5T-7739 (POWERSHIFT)	Page 69
OIL FILTER (Figure 41) GASOLINE & LPG FIRST USED ON S/N C5D-20352 (OIL CLUTCH) AND C5D-20614 (POWERSHIFT), C5E-20618, C5H-2048, AND C5T-7730 (OIL CLUTCH) AND C5T-7740 (POWERSHIFT)	Page 70
OIL FILTER (Figure 57) DIESEL LAST USED ON ENGINE S/N 203U70864	Page 101
OIL FILTER (Figure 58) DIESEL FIRST USED ON ENGINE S/N 203U70865	Page 102
OIL PAN (Figure 37) GASOLINE & LPG	Page 64
OIL PAN (Figure 55) DIESEL	Page 98

TABLE OF CONTENTS

DESCRIPTION	PAGE
O (Continued)	
OIL PUMP (Figure 38) GASOLINE & LPG	Page 66
OUTER, INTERMEDIATE & INNER MASTS (Figure 209) THREE-STAGE 116000 SERIES MASTS	Page 430
OUTER, INTERMEDIATE & INNER MASTS (Figure 210) THREE-STAGE MAST 126000 & 187000 SERIES MASTS	Page 432
OUTER, INTERMEDIATE & INNER MASTS (Figure 211) THREE-STAGE MAST 206700 & 283000 SERIES MASTS	Page 434
OVERHEAD GUARD (Figure 11)	Page 18
P	
PARK BRAKE (Figure 178)	Page 358
PLANETARY CARRIAGE (Figure 144)	Page 286
PUBLICATIONS (Figure 1)	Page 1
PUMP DRIVE SHAFT (Figure 195) DIESEL	Page 405
PUMP DRIVE SHAFT (Figure 196) DIESEL IDENTIFY BY PART NUMBER	Page 406
S	
SCOOP (Figure 254)	Page 514
SHIFT LINKAGE (Figure 136) DRY AND OIL CLUTCH	Page 268
SHIFT LINKAGE (Figure 137) POWERSHIFT	Page 270
SIDESHIFT CARRIAGE (Figure 242) STANDARD MAST	Page 496
SIDESHIFT CARRIAGE (Figure 243) FREE-LIFT MAST	Page 498

TABLE OF CONTENTS

DESCRIPTION	PAGE
S (Continued)	
SIDESHIFT CARRIAGE (Figure 244) THREE-STAGE MAST	Page 502
SIDESHIFT CYLINDER (Figure 245)	Page 505
SPEED REDUCER (Figure 147) DRY AND OIL CLUTCH	Page 292
STARTER (Figure 115) GASOLINE & LPG ENGINES LAST USED ON S/N C5D-18083 (OC) OR C5D-18060 (PS), C5E-9422 (OC) OR C5E-9286 (PS), C5H-1906, C5S-3550, C5T-7453 (OC) OR C5T-7454 (PS)	Page 220
STARTER (Figure 116) GASOLINE & LPG ENGINES USED ON S/N C5D-18084 (OC) TO C5D-23291 (OC) OR C5D-18061 (PS) TO C5D-23278 (PS), C5T-7454 (OC) TO C5T-8178 (OC) FIRST USED ON C5E-9423 (OC) OR C5E-9287 (PS), C5H-1907, C5S-3551 AND C5T-7455 (PS)	Page 222
STARTER (Figure 117) GASOLINE & LPG ENGINES FIRST USED ON S/N C5D-23292 (OC) OR C5D-23279 (PS), C5T-8179 (OC)	Page 224
STARTER (Figure 118) DIESEL ENGINE LAST USED ON S/N C5E-1590	Page 226
STARTER (Figure 119) DIESEL ENGINE USED ON C5D-1501 TO C5D-23780 (OC) OR C5D-23822 (PS) & C5T-1501 TO C5T-8250, FIRST USED ON S/N C5E-1591	Page 230
STARTER (Figure 120) DIESEL ENGINE: OPTIONAL FIRST USED ON S/N C5D-23781 (OC), C5D-23823 (PS), C5E-1591 & C5T-8251	Page 232
STEERING AXLE (Figure 169)	Page 340
STEERING CYLINDER (Figure 167) LAST USED ON S/N C5D-2609 & C5E-1660	Page 336
STEERING CYLINDER (Figure 168) FIRST USED ON S/N C5D-2610 & C5E-1661	Page 338
STEERING (Figure 161) LAST USED ON S/N C5D-21139, C5H-2078 (GASOLINE & LPG), C5H-2080 (DIESEL), C5S-3781, C5T-7827 (GASOLINE & LPG), C5T-7863 (DIESEL) & C5T-7826 (STEVEDORING)	Page 322

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
S (Continued)	
STEERING (Figure 162) FIRST USED ON S/N C5D-21140, C5H-2079 (GASOLINE & LPG), C5H-2081 (DIESEL), C5S-3782, C5T-7828 (GASOLINE & LPG), C5T-7864 (DIESEL) & C5T-7827 (STEVEDORING)	Page 326
STEERING GEAR (Figure 158) FIRST USED ON S/N C5A-1501, USED ON S/N C5D-1501 TO C5D-2195, C5D-2476 TO C5D-21139, FIRST USED ON S/N C5E-1501, LAST USED ON S/N C5H-2078 (GASOLINE & LPG) OR C5H-2080 (DIESEL), C5S-3781, C5T-7827 (GASOLINE & LPG) OR C5T-7863 (DIESEL) OR C5T-76826 (STEVEDORING)	Page 316
STEERING GEAR (Figure 159) USED ON S/N C5D-2196 THRU C5D-2475	Page 318
STEERING GEAR (Figure 160) HYDRAGUIDE FIRST USED ON S/N C5D-21140, C5H-2079 (GASOLINE & LPG), C5H-2081 (DIESEL), C5S-3782, C5T-7828 (GASOLINE & LPG), C5T-7864 (DIESEL) C5T-7827 (STEVEDORING)	Page 320
STEERING PUMP (Figure 163) GASOLINE & LPG LAST USED ON S/N C5A-2981, C5D-11154, C5E-4110, C5H-1517, C5S-2760 & C5T-6593	Page 328
STEERING PUMP (Figure 164) GASOLINE & LPG FIRST USED ON S/N C5A-2982, C5D-11155, C5E-4111, C5H-1518, C5S-2761 & C5T-6594	Page 330
STEERING PUMP (Figure 165) DIESEL LAST USED ON S/N C5A-3285, C5D-11023, C5E-4110 & C5S-2771 .	Page 332
STEERING PUMP (Figure 166) DIESEL FIRST USED ON S/N C5A-3286, C5D-11024, C5E-4111 & C5S-2772	Page 334
SUSPENSION SEAT (Figure 10) First Used On S/N C5D-12767: Diesel, First Used On S/N C5D-12916: Gasoline C5E-4808, C5H-1551, C5S-2886 & C5T-6718 .	Page 17
T	
THROTTLE LINKAGE (Figure 89)	Page 162
TILT CONTROL VALVE (Figure 197) LAST USED ON S/N C5D-20162, C5E-10042, C5S-3648 & C5T-7675	Page 407
TILT CONTROL VALVE (Figure 198) FIRST USED ON S/N C5D-20163, C5E-10043, C5S-3649 & C5T-7676	Page 408

TABLE OF CONTENTS

DESCRIPTION	PAGE
T (Continued)	
TILT CYLINDER (Figure 200) LAST USED ON S/N C5D-19012, C5E-9467, C5H-1962, C5S-3585 & C5T-7529	Page 412
TILT CYLINDER (Figure 201) FIRST USED ON S/N C5D-19013, C5E-9468, C5H-1963, C5S-3586 & C5T-7530	Page 414
TIMING GEAR (Figure 53) DIESEL	Page 94
TIRE & WHEEL (Figure 240) PNEUMATIC STEERING WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 493
TIRE & WHEEL (Figure 241) SOLID STEERING WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 494
TIRE & WHEEL (Figure 235) PNEUMATIC SINGLE DRIVE WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 488
TIRE & WHEEL (Figure 236) SOLID SINGLE DRIVE WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 489
TIRE & WHEEL (Figure 237) 7.50 X15 PNEUMATIC DUAL DRIVE WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 490
TIRE & WHEEL (Figure 238) 8.25 X15 PNEUMATIC DUAL DRIVE WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 491
TIRE & WHEEL (Figure 239) SOLID DUAL DRIVE WHEELS IDENTIFY WHEELS BY PART NUMBER STAMPED IN WHEELS	Page 492
TORQUE CONVERTER (Figure 139) GASOLINE & LPG FIRST USED ON S/N C5D-13556, C5E-5452, C5H-1601, C5S-2974 & C5T-1610	Page 274
TOWING HOOK (Figure 251)	Page 511
TRANSMISSION ATTACHING PARTS (Figure 143) POWERSHIFT	Page 284

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
T (Continued)	
TRANSMISSION CONTROL VALVE (Figure 154) POWERSHIFT LAST USED ON TRANSMISSION S/N T7L-12271	Page 306
TRANSMISSION CONTROL VALVE (Figure 155) POWERSHIFT FIRST USED ON TRANSMISSION S/N T7L-12272	Page 308
TRANSMISSION (Figure 140) DRY AND OIL CLUTCH	Page 276
TRANSMISSION (Figure 141) POWERSHIFT LAST USED ON S/N C5D-13555, C5E-5451, C5H-1600, C5S-2973 & C5T-6809	Page 280
TRANSMISSION (Figure 142) POWERSHIFT GASOLINE & LPG FIRST USED ON S/N C5D-13556, C5E-5452, C5H-1601, C5S-2974 & C5T-6810	Page 282
TRANSMISSION OIL FILTER (Figure 156) POWERSHIFT LAST USED ON TRANSMISSION S/N T7L-1824	Page 310
TRANSMISSION OIL FILTER (Figure 157) POWERSHIFT FIRST USED ON TRANSMISSION S/N T7L-1825	Page 312
TWO SPEED VALVE (Figure 199) FIRST USED ON S/N C5A-3719, C5D-12464, C5E-4534, C5H-1551, C5S-2825 & C5T-6757	Page 410
V	
VACUUM BOOSTER (Figure 133) OIL CLUTCH LAST USED ON S/N C5D-1971, C5E-1504, C5S-1615 & C5Y-1541 ..	Page 260
VALVE ATTACHING PARTS (Figure 186) TWO FUNCTION	Page 388
VALVE ATTACHING PARTS (Figure 187) THREE FUNCTION LAST USED ON S/N C5D-15776, C5E-7699, C5H-1718, C5S-3401 & C5T-7206	Page 390
VALVE ATTACHING PARTS (Figure 188) THREE FUNCTION FIRST USED ON S/N C5D-15777, C5E-7700, C5H-1719, C5S-3402 & C5T-7207	Page 392

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
V (Continued)	
VALVE ATTACHING PARTS (Figure 189) FOUR FUNCTION	Page 394
VALVE COVER (Figure 54) DIESEL	Page 96
W	
WATER PUMP (Figure 33) GASOLINE & LPG	Page 54
WATER PUMP (Figure 56) DIESEL	Page 100

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com