


PARTS MANUAL

**ELECTRIC
E70-80-100-120XL
E100XLS
(C98)**

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

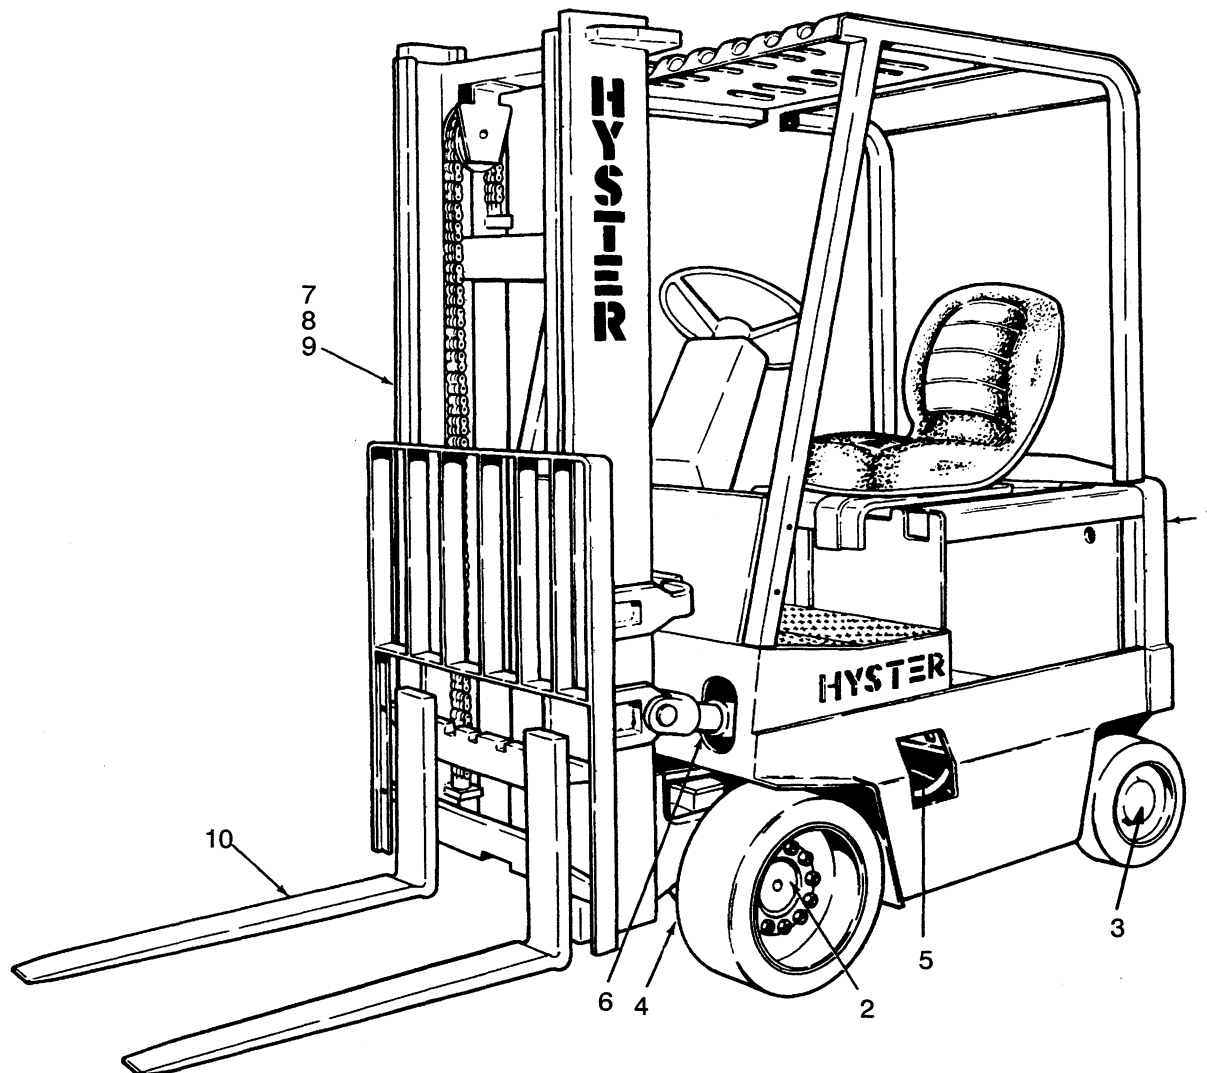

REF	SECTION	PAGE
1	Frame	1
2	Drive Axle	25
3	Steering System	37
4	Brake And Accelerator	55
5	Electrical System	75
6	Hydraulic System	127
7	Two Stage Limited Free-Lift Mast	161
8	Three Stage Full Free-Lift Mast	183
9	Two Stage Full Free-Lift Mast	215
10	Options	247
11	Numerical Index	273

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
A	
ACCELERATOR LINKAGE	Page 70
ACCELERATOR PEDAL	Page 72
ACCUMULATOR FIRST USED ON S/N C98V-3544	Page 267
ACCUMULATOR LAST USED ON S/N C98V-3543	Page 266
B	
BACKUP ALARM	Page 254
BATTERY CONNECTOR	Page 125
BRAKE AND BACK-UP LIGHTS (12V) FIRST USED ON DATE BREAK 12/96	Page 252
BRAKE ASSEMBLY FIRST USED ON S/N C98V-3090	Page 62
BRAKE ASSEMBLY LAST USED ON S/N C98V-3089	Page 60
BRAKE LINKAGE	Page 56
C	
CARRIAGE ASSEMBLY TWO STAGE LIMITED FREE-LIFT	Page 178
CARRIAGE THREE STAGE FULL FREE-LIFT E100XL ATTACHMENT	Page 209
CARRIAGE THREE STAGE FULL FREE-LIFT	Page 208
CARRIAGE TWO STAGE FULL FREE-LIFT E100XL ATTACHMENT	Page 241

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
C (continued)	
CARRIAGE TWO STAGE FULL FREE-LIFT	Page 240
CONTACTOR PANEL FIRST USED ON S/N C98V-4666	Page 104
CONTACTOR PANEL WITH FIELD WEAKENING LAST USED ON S/N C98V-4665	Page 100
CONTACTOR PANEL WITHOUT FIELD WEAKENING LAST USED ON S/N C98V-4665	Page 102
CONTACTOR FIELD WEAKENING	Page 119
CONTACTOR FORWARD AND REVERSE	Page 116
CONTACTOR ON DEMAND STEERING	Page 120
CONTROL PANEL EV-100 TRACTION WITH 11.0 IN. MOTOR CONTACTOR HYDRAULIC WITH DUAL PUMP AND MOTOR	Page 88
CONTROL PANEL EV-100 TRACTION WITH 11.0 IN. MOTOR CONTACTOR HYDRAULIC WITH SINGLE PUMP AND MOTOR	Page 90
CONTROL PANEL EV-100 TRACTION WITH 11.0 IN. MOTOR SCR HYDRAULIC	Page 92
CONTROL PANEL EV-200 TRACTION WITH 13.0 IN. MOTOR CONTACTOR HYDRAULIC WITH DUAL PUMP AND MOTOR	Page 96
CONTROL PANEL EV-200 TRACTION WITH 13.0 IN. MOTOR CONTACTOR HYDRAULIC WITH SINGLE PUMP AND MOTOR	Page 98

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
C (continued)	
CONTROL PANEL EV-200 TRACTION WITH 13.0 IN. MOTOR SCR HYDRAULIC	Page 94
COUNTERWEIGHT	Page 21
D	
DASH DISPLAY LAST USED ON C98V-2313	Page 121
DASH DISPLAY LED DISPLAY FIRST USED ON S/N C98V-4666	Page 124
DASH DISPLAY LED DISPLAY USED ON C98V-2314 THRU S/N C98V-4665	Page 123
DASH DISPLAY USED ON S/N C98V-2314 THRU S/N C98V-4665	Page 122
DRIVE AXLE	Page 26
DRIVE LIGHTS (12V) FIRST USED ON DATE BREAK 12/96	Page 250
E	
ELECTRICAL FIRST USED ON S/N C98V-4666	Page 84
ELECTRICAL LAST USED ON S/N C98V-2058	Page 78
ELECTRICAL USED ON S/N C98V-2059 THRU S/N C98V-4665	Page 80

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
F	
FLOORPLATES AND COVERS FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649)	Page 16
FLOORPLATES AND COVERS LAST USED ON S/N C98V-5638 (INC 5645,5649; EXC 5305)	Page 14
FORK THREE STAGE FULL FREE-LIFT HOOK TYPE: IDENTIFY BY PART NUMBER	Page 212
FORK TWO STAGE FULL FREE-LIFT HOOK TYPE: IDENTIFY BY PART NUMBER	Page 244
FORK TWO STAGE LIMITED FREE-LIFT HOOK TYPE: IDENTIFY BY PART NUMBER	Page 180
FREE LIFT CYLINDER THREE STAGE FULL FREE-LIFT	Page 202
FREE LIFT CYLINDER TWO STAGE FULL FREE-LIFT	Page 236
FREE LIFT THREE STAGE FULL FREE-LIFT	Page 192
FREE LIFT TWO STAGE FULL FREE-LIFT	Page 224
H	
HEADER HOSE THREE STAGE FULL FREE-LIFT	Page 204
HEADER HOSE TWO STAGE FULL FREE-LIFT 8° BACK TILT	Page 270
HEADER HOSE TWO STAGE FULL FREE-LIFT	Page 238
HEADER HOSE TWO STAGE LIMITED FREE-LIFT 8° BACK TILT	Page 268

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
H (continued)	
HEADER HOSE TWO STAGE LIMITED FREE-LIFT	Page 174
HOOD FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649)	Page 19
HOOD LAST USED ON S/N C98V-5638 (INC 5645,5649; EXC 5305)	Page 18
HYDRAULIC CONTROL HAND LEVERS	Page 150
HYDRAULIC FILTER	Page 146
HYDRAULIC LINKAGE CONTROL VALVE	Page 148
HYDRAULIC MOTOR OPEN CONSTRUCTION WITHOUT BRUSH WEAR INDICATORS STANDARD 36V/48V IDENTIFY BY PART NUMBER	Page 140
HYDRAULIC MOTOR PREMIUM 36V/48V IDENTIFY BY PART NUMBER	Page 142
HYDRAULIC MOTOR PREMIUM 36V/48V IDENTIFY BY PART NUMBER	Page 144
HYDRAULIC PUMP FIRST USED ON DATE BREAK 04/98	Page 138
HYDRAULIC PUMP LAST USED ON DATE BREAK 04/98	Page 136
HYDRAULIC VALVE FIVE FUNCTION	Page 158
HYDRAULIC VALVE FOUR FUNCTION	Page 156
HYDRAULIC VALVE THREE FUNCTION	Page 154
HYDRAULIC VALVE TWO FUNCTION	Page 152

TABLE OF CONTENTS

DESCRIPTION **PAGE NO.**

H (continued)

HYDRAULICS
E70-120XL
DUAL PUMPS AND MOTORS Page 132

HYDRAULICS
E70-80XL, E100XLS
SINGLE PUMP AND MOTOR Page 130

I

INNER MAST
THREE STAGE FULL FREE-LIFT Page 188

INNER MAST
TWO STAGE FULL FREE-LIFT Page 218

INNER MAST
TWO STAGE LIMITED FREE-LIFT Page 164

INTERMEDIATE MAST
THREE STAGE FULL FREE-LIFT Page 186

L

LABELS Page 22

LIFT CYLINDER
TWO STAGE LIMITED FREE-LIFT
E100-120XL Page 172

LIFT CYLINDER
TWO STAGE LIMITED FREE-LIFT
E70-80XL, E100XLS
FIRST USED ON S/N A510A-6445, A510E-2154, AND A510V-1776 .. Page 170

LIFT CYLINDER
TWO STAGE LIMITED FREE-LIFT
E70-80XL, E100XLS
LAST USED ON S/N A510A-6444, A510E-2153, AND A510V-1775 ... Page 168

LIGHTS
LAST USED ON DATE BREAK 12/96 Page 248

LOAD BACKREST EXTENSION
THREE STAGE FULL FREE-LIFT Page 210

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
L (continued)	
LOAD BACKREST EXTENSION TWO STAGE FULL FREE-LIFT	Page 243
LOAD BACKREST EXTENSION TWO STAGE LIMITED FREE-LIFT	Page 179
M	
MAIN LIFT CYLINDER THREE STAGE FULL FREE-LIFT FIRST USED ON S/N A511E-2201	Page 198
MAIN LIFT CYLINDER THREE STAGE FULL FREE-LIFT LAST USED ON S/N A511E-2200	Page 196
MAIN LIFT CYLINDER TWO STAGE FULL FREE-LIFT FIRST USED ON S/N PENDING PER ECN 85020-76	Page 232
MAIN LIFT CYLINDER TWO STAGE FULL FREE-LIFT LAST USED ON S/N A512D-1645 (E70-80XL, E100XLS)(119.0 IN.) LAST USED ON S/N A512D-1666 (E70-80XL, E100XLS)(143.5 IN.) LAST USED ON S/N A512E-1659 (E100-120XL)(108.5 IN.) LAST USED ON S/N A512E-1950 (E100-120XL)(133.5 IN.)	Page 226
MAIN LIFT CYLINDER TWO STAGE FULL FREE-LIFT USED ON S/N A512D-1646 (E70-80XL, E100XLS)(119.0 IN.) THRU S/N PENDING PER ECN 85020-76 USED ON S/N A512D-1667 (E70-80XL, E100XLS)(143.5 IN.) THRU S/N PENDING PER ECN 85020-76 USED ON S/N A512E-1660 (E100-120XL)(108.5 IN.) THRU S/N PENDING PER ECN 85020-76 USED ON S/N A512E-1951 (E100-120XL)(133.5 IN.) THRU S/N PENDING PER ECN 85020-76	Page 228
MAIN LIFT THREE STAGE FULL FREE-LIFT	Page 190
MAIN LIFT TWO STAGE FULL FREE-LIFT	Page 222
MAIN LIFT TWO STAGE LIMITED FREE-LIFT	Page 166
MAST INSTALLATION THREE STAGE FULL FREE-LIFT	Page 206

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
M (continued)	
MAST INSTALLATION TWO STAGE FULL FREE-LIFT	Page 220
MAST INSTALLATION TWO STAGE LIMITED FREE-LIFT	Page 176
MASTER CYLINDER	Page 58
N	
NON-SUSPENSION SEAT FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649) SEARS	Page 12
NON-SUSPENSION SEAT LAST USED ON S/N C98V-5638 (INC 5645,5649; EXC 5305) SEARS	Page 10
O	
OUTER MAST THREE STAGE FULL FREE-LIFT	Page 184
OUTER MAST TWO STAGE FULL FREE-LIFT	Page 216
OUTER MAST TWO STAGE LIMITED FREE-LIFT	Page 162
OVERHEAD GUARD	Page 20
P	
PARK BRAKE LINKAGE WITH SEAT BRAKE	Page 66
PARK BRAKE	Page 64
PUMP CONTACTOR CONTACTOR HYDRAULIC	Page 118

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
P (continued)	
PUMP PANEL FIRST USED ON S/N C98V-4666	Page 114
PUMP PANEL LAST USED ON S/N C98V-4665	Page 112
S	
SCR CONTROL E70-120XL WITH 13.0 IN. MOTOR FIRST USED ON S/N C98V-4666	Page 108
SCR CONTROL E70-120XL WITH 13.0 IN. MOTOR LAST USED ON S/N C98V-4665	Page 106
SEAT BRAKE 11.0 IN. MOTOR	Page 68
SEAT BRAKE 13.0 IN. MOTOR	Page 69
SIDESHIFT CARRIAGE HOOK TYPE THREE STAGE FULL FREE-LIFT LAST USED ON DATE BREAK 09/92	Page 258
SIDESHIFT CARRIAGE HOOK TYPE TWO STAGE FULL FREE-LIFT LAST USED ON DATE BREAK 09/92	Page 260
SIDESHIFT CARRIAGE HOOK TYPE TWO STAGE LIMITED FREE-LIFT, THREE STAGE FULL FREE-LIFT, TWO STAGE FULL FREE-LIFT SERIES 1356000,1360000 AND 1371000 FIRST USED ON DATE BREAK 09/92	Page 262
SIDESHIFT CARRIAGE HOOK TYPE TWO STAGE LIMITED FREE-LIFT LAST USED ON DATE BREAK 09/92	Page 256
SIDESHIFT CYLINDER HOOK TYPE FIRST USED ON DATE BREAK 09/92	Page 265

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
S (continued)	
SIDESHIFT CYLINDER HOOK TYPE LAST USED ON DATE BREAK 09/92	Page 264
STEERING AXLE	Page 46
STEERING COLUMN FIRST USED ON S/N C98V-5910	Page 42
STEERING COLUMN LAST USED ON S/N C98V-5909	Page 38
STEERING CONTROL UNIT FIRST USED ON S/N C98V-3462	Page 49
STEERING CONTROL UNIT LAST USED ON S/N C98V-3461	Page 48
STEERING CYLINDER	Page 50
STEERING LINES	Page 44
STEERING MOTOR (1 HP) IDENTIFY BY PART NUMBER	Page 52
STEERING MOTOR (1.25 HP) FIRST USED ON DATE BREAK 10/95 IDENTIFY BY PART NUMBER	Page 54
STEERING MOTOR (1.25 HP) LAST USED ON DATE BREAK 10/95 IDENTIFY BY PART NUMBER	Page 53
STEERING PUMP	Page 51
SUSPENSION SEAT FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649) GRAMMER	Page 8
SUSPENSION SEAT FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649) SEARS	Page 4

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
S (continued)	
SUSPENSION SEAT LAST USED ON S/N C98V-5638 (INC 5645,5649; EXC 5305) GRAMMER	Page 6
SUSPENSION SEAT LAST USED ON S/N C98V-5638 (INC 5645,5649; EXC 5305) SEARS	Page 2
T	
TILT CYLINDER	Page 160
TIRE AND WHEEL	Page 255
TRACTION MOTOR (11.0 IN.) E70-80XL, E100XLS FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649)	Page 32
TRACTION MOTOR (11.0 IN.) E70-80XL, E100XLS LAST USED ON DATE BREAK 09/98	Page 30
TRACTION MOTOR (11.0 IN.) E70-80XL, E100XLS USED ON DATE BREAK 09/98 THRU S/N C98V-5638 (INC 5645,5649; EXC 5305)	Page 31
TRACTION MOTOR (13.0 IN.) E70-120XL FIRST USED ON S/N C98V-5639 (INC 5305; EXC 5645,5649)	Page 35
TRACTION MOTOR (13.0 IN.) E70-120XL LAST USED ON DATE BREAK 09/98	Page 33
TRACTION MOTOR (13.0 IN.) E70-120XL USED ON DATE BREAK 09/98 THRU S/N C98V-5638 (INC 5645,5649; EXC 5305)	Page 34
TRACTION PANEL E70-80XL WITH 11.0 IN. MOTOR	Page 110
TRANSMISSION ASSEMBLY	Page 28

ABBREVIATIONS QUICK REFERENCE SHEET

Listed Below Are Abbreviations Used In Parts Manuals To Denote The Following Expressions:

2-STG	Two Stage Mast
3-STG	Three Stage Mast
4-STG	Four Stage Mast
Amp	Amperes
AR	As Required
BCS	Box Car Special
BWI	Brush Wear Indicator
CE	Commutator End
CRE	Corrosive Environment
dbA	Decibel "A" Scale
DE	Drive End
EC or ECH	Empty Container Handler Europe Empty Container Handler U.S.
EC-3 ECH-3	Empty Container Handler-3 High Stacking
EC-4 ECH-4	Empty Container Handler-4 High Stacking
EC-5 ECH-5	Empty Container Handler-5 High Stacking
EC-6 ECH-6	Empty Container Handler-6 High Stacking
EC-7 ECH-7	Empty Container Handler-7 High Stacking
ECM	Electronic Control Module
ECN	Engineering Change Notice
EEPROM	Electrically Erasable Programable Read Only Memory
EPROM	Electrically Programable Read Only Memory
EXC	Excludes
FFL	Full Free Lift
FLT	Fork Lift Truck
FRE	Freezer Environment
HP	Horsepower
in.	inches
INC	Includes
LFL	Limited Free Lift
LPG	Liquified Petroleum Gas
MAP	Manifold Absolute Pressure
mm	millimeters

MSTS	Microprocessor Spark Timing System
NC	Normally Closed
NFL	No Free Lift
NI	Not Illustrated
NO	Normally Open
NPT	National Pipe Threads
NS	Neutral Start
O/S	Oversize
OC	Oil Clutch Transmission
PS	Powershift Transmission
PTO	Power Take Off
RPM	Revolutions per Minute
S/N	Serial Number
SFL	Semi-Free Lift
TMM	Truck Management Module
Type D	UL Type D, Diesel-Powered Safety Rating
Type DS	UL Type DS, Diesel-Powered Safety Rating
Type E	UL Type E, Battery Powered Safety Rating
Type EE	UL Type EE, Battery-Powered Safety Rating
Type ES	UL Type ES, Battery-Powered Safety Rating
Type G	UL Type G, Gasoline-Powered Safety Rating
Type GS	UL Type GS, Gasoline-Powered Safety Rating
Type LP	UL Type LP, LP Gas-Powered Safety Rating
Type LPS	UL Type LPS, LP Gas-Powered Safety Rating
U/S	Undersize
UL	Underwriters Laboratory
UK	United Kingdom
U.S.	United States
V	Volts
Xmsn	Transmission

HOW TO FIND THE DESIRED PART NUMBER**WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:**

1. Determine the function and application of the part required. Turn to the illustrated index page immediately behind the front cover. Choose the general area of reference most likely to include the part.
2. Find the page number for the reference number you choose and turn to that page. Use the division index to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Master Index immediately following the Illustrated Index.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the numerical index at the back of the manual to find the part number. Turn to the figure listed and locate the part as indicated by the reference number.

GENERAL:

The assembly breakdowns include part numbers, description, quantities required, keys and footnotes to help in selecting the correct parts.

 
6. Keys are used to show effective serial numbers for two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C" or "D" and the corresponding quantity column to find the required parts.
7. Indented descriptions under "Name of Part" are used to indicate assemblies and sub-parts of assemblies. In the example, *LOAD ROLLER* (Item 2) is a subpart of the major assembly *CARRIAGE*.
8. Quantities shown are for one assembly. The quantities of the subpart *LOAD ROLLER* are indicated as six and six. This means six per *CARRIAGE* assembly.
9. Engineering change notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local dealer for Hyster lift trucks for serial number information listed by ECN number.
10. Additional fork lengths are available. Contact your dealer for Hyster lift trucks.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS



- (1) & (2) The first letter and three numbers indicate the truck model code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number series indicates the serial number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957 and 1980. The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

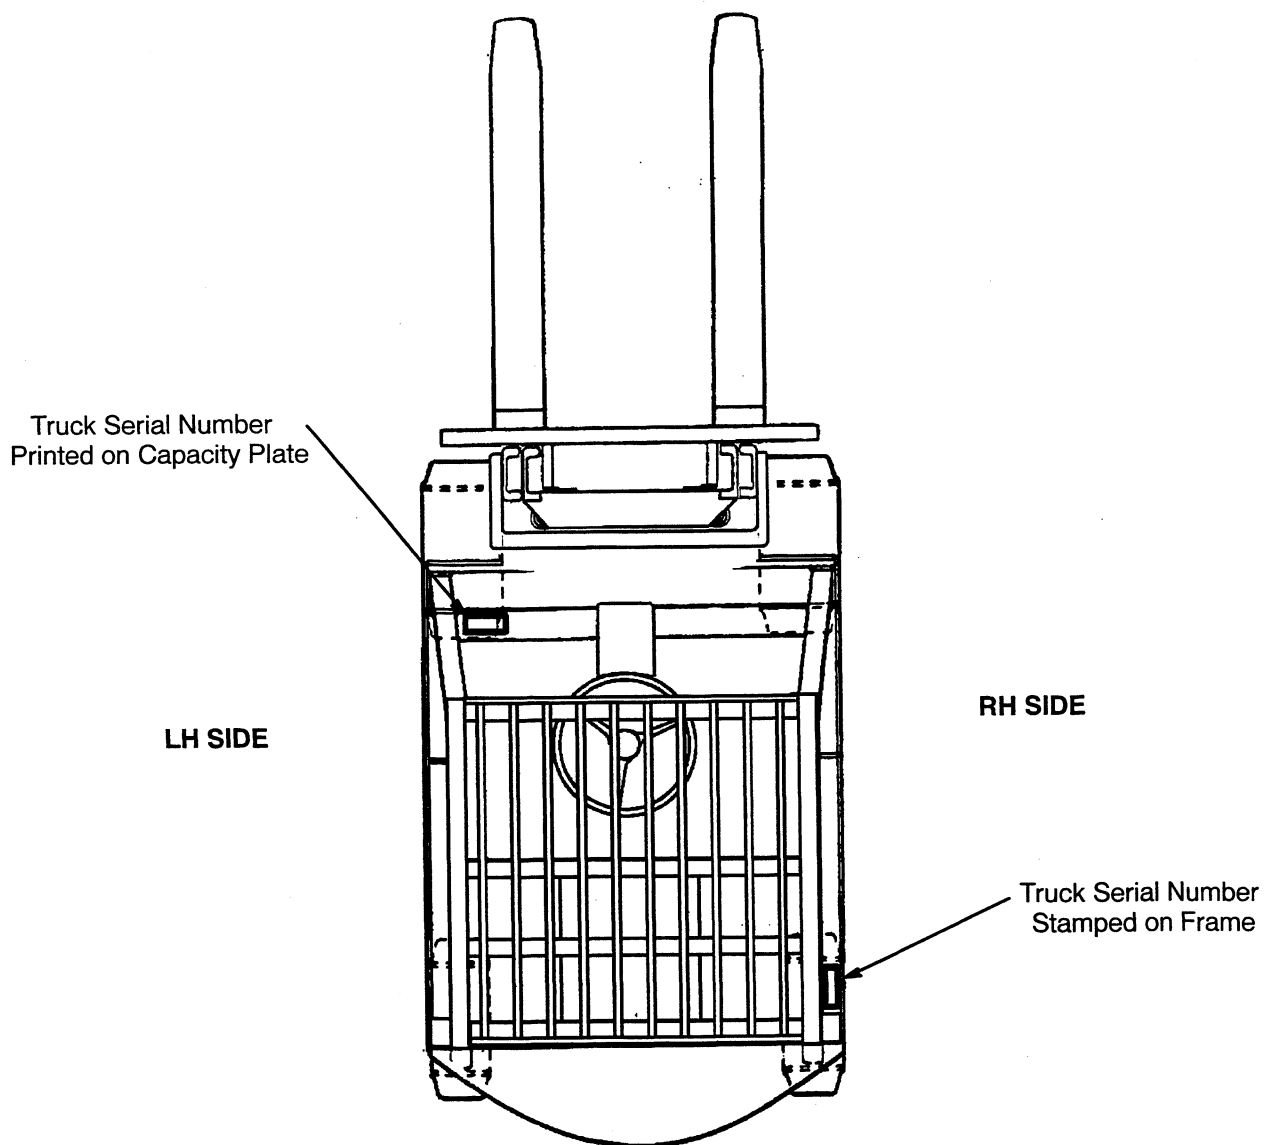

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com