

PARTS MANUAL


**ELECTRIC
E25-30-35XL
E1.25-1.50-1.75XL**

(C114)

CUSTOMER EDITION

HYSTER

INDEX-ILLUSTRATED

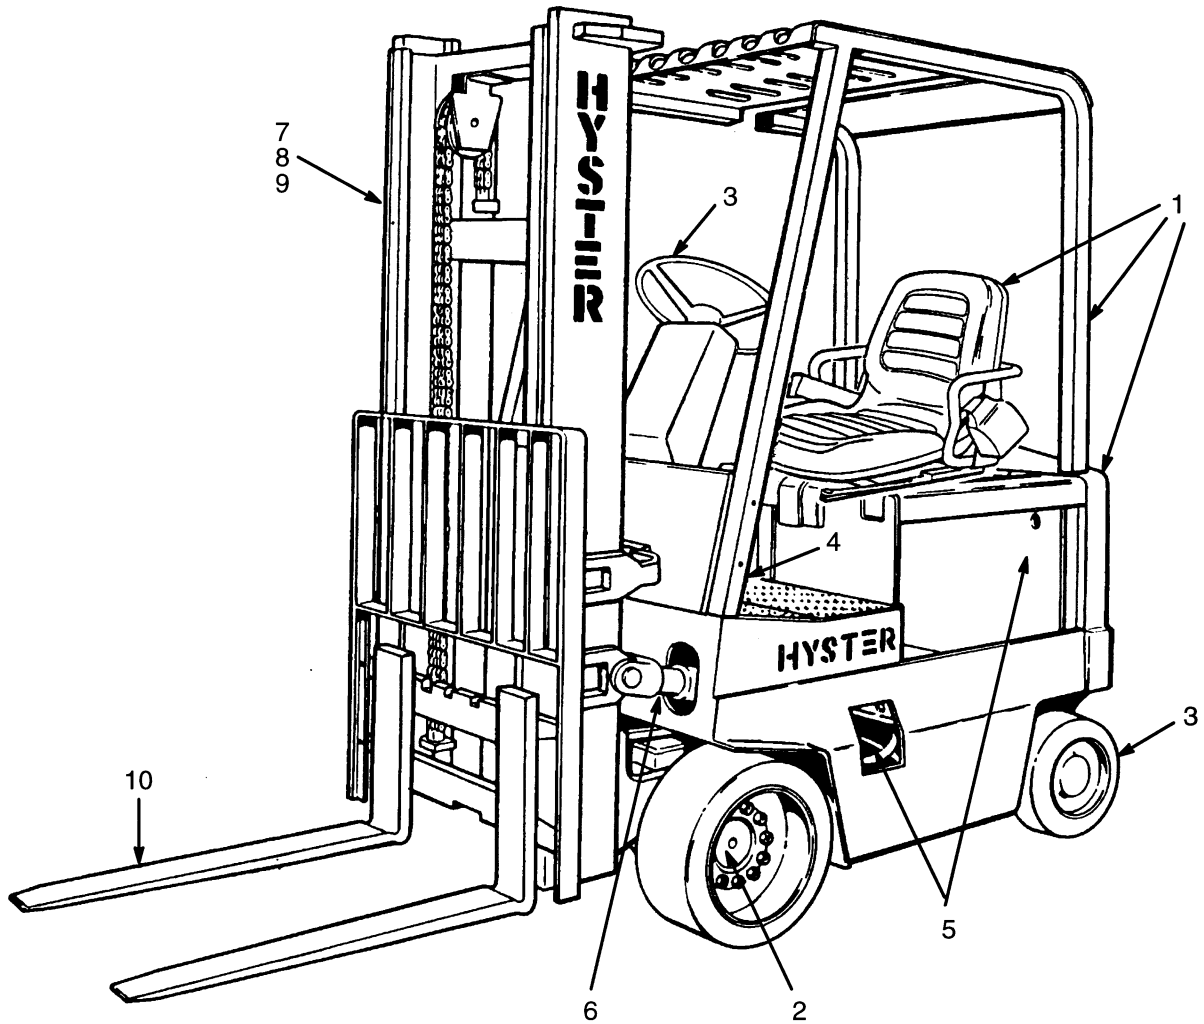

REF	SECTION	PAGE
1	FRAME	5
2	DRIVE AXLE	19
3	STEERING	27
4	BRAKE	45
5	ELECTRICAL	65
6	HYDRAULIC	119
7	TWO STAGE LIMITED FREE LIFT MAST	141
8	THREE STAGE FULL FREE LIFT MAST	151
9	TWO STAGE FULL FREE LIFT MAST	165
10	OPTIONAL EQUIPMENT	177
11	NUMERICAL INDEX	203

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
A	
ACCELERATOR PEDAL	Page 62
ACCELERATOR	Page 60
B	
BACKUP ALARM EV-100LX CONTROLLER	Page 200
BATTERY CONNECTOR	Page 94
BRAKE LINKAGE WITH TRACTION CONTROL SWITCH	Page 46
BRAKE LINKAGE WITHOUT TRACTION CONTROL SWITCH	Page 48
BRAKE	Page 52
C	
CARRIAGE SIDE-SHIFT	Page 182
CARRIAGE SIDE-SHIFT	Page 183
CARRIAGE THREE STAGE FULL FREE LIFT	Page 164
CARRIAGE TWO STAGE FULL FREE LIFT	Page 176
CARRIAGE TWO STAGE LIMITED FREE LIFT	Page 149
CONTACTOR (1A/PUMP) LAST USED ON S/N C114V-2693 STANDARD U.S.	Page 106
CONTACTOR (1A/RB) FIRST USED ON S/N C114A-2671, C114V-2694 CONTACTOR HYDRAULIC SCR HYDRAULIC	Page 108
CONTACTOR (1A/RB) LAST USED ON S/N C114A-2670, C114V-2693 PREMIUM	Page 104

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CONTACTOR PANEL (EV100) FIRST USED ON S/N C114A-2671, C114V-2694 WITH REGENERATIVE BRAKING	Page 114
CONTACTOR PANEL (EV100) FIRST USED ON S/N C114A-2671, C114V-2694 WITHOUT REGENERATIVE BRAKING	Page 111
CONTACTOR PANEL (EV100LX) FIRST USED ON S/N C114A-3895, C114V-4470 WITH REGENERATIVE BRAKING	Page 116
CONTACTOR PANEL (EV100LX) FIRST USED ON S/N C114A-3895, C114V-4470 WITHOUT REGENERATIVE BRAKING	Page 112
CONTACTOR ON-DEMAND POWER STEERING	Page 118
CONTROL PANEL FIRST USED ON S/N C114A-2671, C114V-2694 CONTACTOR HYDRAULIC WITHOUT REGENERATIVE BRAKING	Page 80
CONTROL PANEL LAST USED ON C114A-2670, C114V-2693 PREMIUM U.S.	Page 72
CONTROL PANEL LAST USED ON S/N C114A-2670, C114V-2693 NON U.S. STANDARD	Page 76
CONTROL PANEL LAST USED ON S/N C114A-2670, C114V-2693 STANDARD U.S.	Page 70
CONTROL PANEL LAST USED S/N C114A-2670, C114V-2693 NON U.S. PREMIUM	Page 77
CONTROL VALVE THREE FUNCTION	Page 136

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CONTROL VALVE LINKAGE	Page 132
CONTROL VALVE FOUR FUNCTION	Page 138
CONTROL VALVE TWO FUNCTION	Page 134
COUNTERWEIGHT	Page 17
CYLINDER SIDE-SHIFT	Page 184
CYLINDER SIDE-SHIFT	Page 185
CYLINDER TWO STAGE LIMITED FREE LIFT	Page 148
D	
DRIVE AXLE	Page 20
E	
ELECTRICAL FIRST USED C114A-2671, C114V-2694 SCR HYDRAULIC	Page 82
ELECTRICAL FIRST USED ON S/N C114A-2671, C114V-2694 CONTACTOR HYDRAULIC	Page 78
ELECTRICAL LAST USED ON S/N C114A-2670, C114V-2693 NON U.S.	Page 74
ELECTRICAL LAST USED ON S/N C114A-2670, C114V-2693 U.S.	Page 68
F	
FIRE EXTINGUISHER	Page 196
FLOOR PLATES AND COVERS	Page 8

TABLE OF CONTENTS

DESCRIPTION	PAGE
F (Continued)	
FORK	Page 197
FORWARD/REVERSE CONTACTOR FIRST USED ON S/N C114A-2671, C114V-2694 CONTACTOR HYDRAULIC AND SCR HYDRAULIC	Page 102
FORWARD/REVERSE CONTACTOR LAST USED ON S/N C114A-2670 NON U.S.	Page 101
FORWARD/REVERSE CONTACTOR LAST USED ON S/N C114V-2693 STANDARD/PREMIUM U.S.	Page 100
FREE-LIFT CYLINDER THREE STAGE FULL FREE LIFT	Page 163
FREE-LIFT CYLINDER TWO STAGE FULL FREE LIFT	Page 175
FREE-LIFT THREE STAGE FULL FREE LIFT	Page 160
FREE-LIFT TWO STAGE FULL FREE LIFT	Page 172
H	
HAND PUMP IDENTIFY BY PART NUMBER OPTIONAL	Page 33
HAND PUMP IDENTIFY BY PART NUMBER	Page 32
HEADER HOSES THREE STAGE FULL FREE LIFT	Page 188
HEADER HOSES TWO STAGE FULL FREE LIFT	Page 190
HEADER HOSES TWO STAGE LIMITED FREE LIFT	Page 186
HOOD LIFT-OFF	Page 13

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
H (Continued)	
HOOD TRUCK MOUNTED	Page 12
HYDRAULIC MOTOR 6.5 INCH MOTOR IDENTIFY BY PART NUMBER	Page 125
HYDRAULIC MOTOR 6.5 INCH MOTOR OPTIONAL	Page 126
HYDRAULIC MOTOR 7.5 INCH MOTOR IDENTIFY BY PART NUMBER	Page 127
HYDRAULIC MOTOR 7.5 INCH MOTOR OPTIONAL	Page 128
HYDRAULIC PUMP IDENTIFY BY PART NUMBER	Page 124
HYDRAULIC TANK	Page 129
HYDRAULIC	Page 120
I	
INNER MAST THREE STAGE FULL FREE LIFT	Page 156
INNER MAST TWO STAGE FULL FREE LIFT	Page 168
INNER MAST TWO STAGE LIMITED FREE LIFT	Page 144
INSTRUMENTS BATTERY GAUGE WITH LIFT INTERRUPT AND BWI	Page 91
INSTRUMENTS L.E.D. DISPLAY	Page 93
INSTRUMENTS PANEL ARRANGEMENT	Page 90

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
I (Continued)	
INSTRUMENTS	Page 92
INTERMEDIATE MAST THREE STAGE FULL FREE LIFT	Page 154
L	
LABELS AND PAINT	Page 6
LIFT TWO STAGE LIMITED FREE LIFT	Page 146
LIGHTS 36/48 VOLT LAST USED ON S/N C114V-1975	Page 192
LIGHTS FIRST USED ON S/N C114V-1976	Page 194
LOAD BACKREST EXTENSION	Page 18
M	
MAIN CYLINDER THREE STAGE FULL FREE LIFT	Page 162
MAIN CYLINDER TWO STAGE FULL FREE LIFT	Page 174
MAIN LIFT TWO STAGE FULL FREE LIFT	Page 170
MAIN LIFT THREE STAGE FULL FREE LIFT	Page 158
MASTER CYLINDER	Page 50
MOUNT PUMP AND MOTOR	Page 122
O	
OUTER MAST THREE STAGE FULL FREE LIFT	Page 152

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
O (Continued)	
OUTER MAST TWO STAGE FULL FREE LIFT	Page 166
OUTER MAST TWO STAGE LIMITED FREE LIFT	Page 142
OVERHEAD GUARD GRID STYLE RAISED HEIGHT	Page 11
OVERHEAD GUARD	Page 10
P	
PARKING BRAKE LINKAGE SEAT ACTUATED	Page 56
PARKING BRAKE LEVER ACTUATED	Page 54
PARKING BRAKE SEAT ACTUATED	Page 58
PUMP CONTACTOR FIRST USED ON S/N C114A-2671, C114V-2694 CONTACTOR HYDRAULIC	Page 110
PUMP CONTACTOR LAST USED ON S/N C114A-2670 NON U.S.	Page 109
PUMP PANEL FIRST USED ON S/N C114A-2671, C114V-2694 SCR HYDRAULIC	Page 98
PUMP PANEL LAST USED ON S/N C114V-2693 PREMIUM U.S.	Page 96
PUMP PANEL LAST USED S/N C114A-2670 NON U.S. PREMIUM	Page 97

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
S	
SEAT AND ATTACHING PARTS	Page 14
SEAT	Page 16
STEERING AXLE	Page 42
STEERING COLUMN	Page 28
STEERING CYLINDER	Page 36
STEERING LINES	Page 34
STEERING MOTOR OPTIONAL USED ON S/N C114A-3778, C114V-4470 THRU S/N C114A-5022, C114V-7126	Page 39
STEERING MOTOR USED ON S/N C114A-5023, C114V-7127 ⇒ S/N PENDING PER ECN 72365	Page 40
STEERING MOTOR WITHOUT BRUSH WEAR INDICATOR FIRST USED ON S/N PENDING PER ECN 72365	Page 41
STEERING MOTOR	Page 38
STEERING PUMP	Page 37
STROBE LIGHT MEDIUM INTENSITY	Page 198
T	
TILT CYLINDER	Page 130
TIRE AND WHEEL CUSHION DRIVE	Page 178
TIRE AND WHEEL PNEUMATIC DRIVE	Page 181
TIRE AND WHEEL PNEUMATIC STEERING	Page 180

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
T (Continued)	
TRACTION MOTOR NON U.S.	Page 26
TRACTION MOTOR WITH BWI CONNECTION U.S.	Page 25
TRACTION MOTOR WITHOUT BWI CONNECTION U.S.	Page 24
TRACTION PANEL FIRST USED ON S/N C114A-2671, C114V-2694 SCR HYDRAULIC	Page 86
TRACTION PANEL LAST USED S/N C114A-2670, C114V-2693	Page 84
TRACTION PANEL	Page 88
TRANSMISSION AND DIFFERENTIAL	Page 22

NOTES

ABBREVIATIONS QUICK REFERENCE SHEET

Listed Below Are Abbreviations Used In Parts Manuals To Denote The Following Expressions:

2-STG	Two Stage Mast
3-STG	Three Stage Mast
4-STG	Four Stage Mast
Amp	Amperes
AR	As Required
BCS	Box Car Special
BWI	Brush Wear Indicator
CE	Commutator End
CRE	Corrosive Environment
dbA	Decibel "A" Scale
DE	Drive End
EC or ECH	Empty Container Handler Europe Empty Container Handler U.S.
EC-3 ECH-3	Empty Container Handler-3 High Stacking
EC-4 ECH-4	Empty Container Handler-4 High Stacking
EC-5 ECH-5	Empty Container Handler-5 High Stacking
EC-6 ECH-6	Empty Container Handler-6 High Stacking
EC-7 ECH-7	Empty Container Handler-7 High Stacking
ECM	Electronic Control Module
ECN	Engineering Change Notice
EEPROM	Electrically Erasable Programable Read Only Memory
EPROM	Electrically Programable Read Only Memory
FFL	Full Free Lift
FLT	Fork Lift Truck
FRE	Freezer Environment
in.	inches
LFL	Limited Free Lift
LPG	Liquid Petroleum Gas
MAP	Manifold Absolute Pressure
mm	millimeters
MSTS	Microprocessor Spark Timing System

NC	Normally Closed
NDE	Not Drive End (Commutator End)
NFL	No Free Lift
NI	Not Illustrated
NO	Normally Open
NPT	National Pipe Threads
NS	Neutral Start
O/S	Oversize
OC	Oil Clutch Transmission
PS	Powershift Transmission
PTO	Power Take Off
RPM	Revolutions per Minute
S/N	Serial Number
SFL	Semi-Free Lift
TMM	Truck Management Module
Type D	UL Type D, Diesel-Powered Safety Rating
Type DS	UL Type DS, Diesel-Powered Safety Rating
Type E	UL Type E, Battery Powered Safety Rating
Type EE	UL Type EE, Battery-Powered Safety Rating
Type ES	UL Type ES, Battery-Powered Safety Rating
Type G	UL Type G, Gasoline-Powered Safety Rating
Type GS	UL Type GS, Gasoline-Powered Safety Rating
Type LP	UL Type LP, LP Gas-Powered Safety Rating
Type LPS	UL Type LPS, LP Gas-Powered Safety Rating
U/S	Undersize
UL	Underwriters Laboratory
UK	United Kingdom
U.S.	United States
V	Volts
Xmsn	Transmission

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com