

PARTS MANUAL


**CHALLENGER
H25-30-35XL
(H1.25-1.50-1.75XL)**

(C 001)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

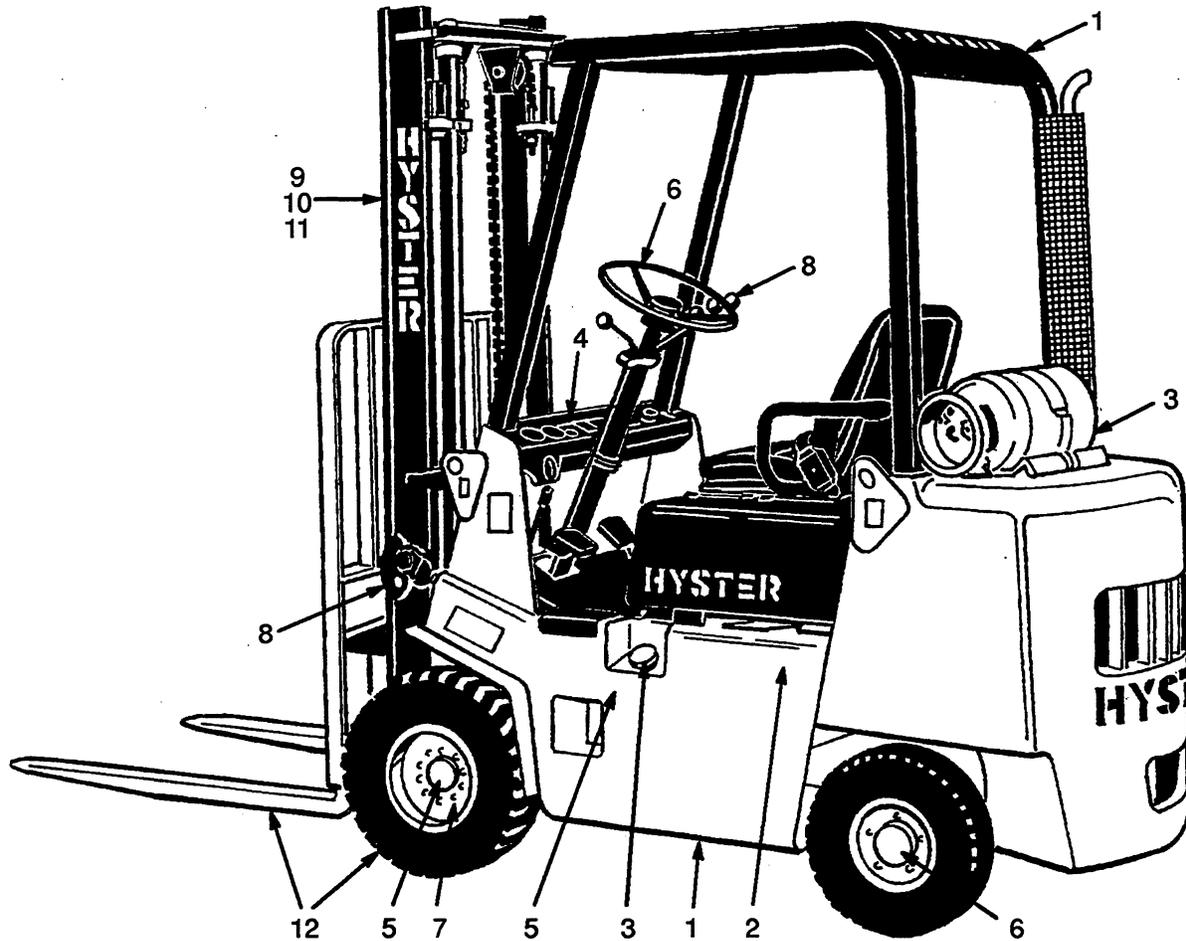

REF	SECTION	PAGE
1	Frame And Body	3
2	Engine	17
3	Fuel	51
4	Electrical	75
5	Transmission	103
6	Steering	131
7	Brake	141
8	Hydraulic	151
9	Mast-Vista Two-Stage LFL	173
10	Mast-Vista Three Stage FFL	183
11	Mast-Two Stage FFL	197
12	Optional	209
13	Numerical Index	235

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
A	
AIR FILTER (Figure 38)	Page 62
ALTERNATOR (Figure 58) GASOLINE LPG Last Used On S/N C1B-8183 (Gas) Last Used On S/N C1B-8059 (LPG)	Page 94
ALTERNATOR (Figure 59) GASOLINE LPG First Used On S/N C1B-8184 (Gas) First Used On S/N C1B-8060 (LPG)	Page 95
ALTERNATOR (Figure 60) DIESEL	Page 96
ALTERNATOR (Figure 62) TYPES GS, LPS & GS First Used On S/N C1B-6180	Page 100
ALTERNATOR (Figure 61) TYPES GS, LPS & DS Last Used On S/N C1B-6179	Page 98
ALTERNATOR TYPES GS, LPS & GS First Used On S/N C1B-6180	Page 101
ALTERNATOR TYPES GS, LPS & DS Last Used On S/N C1B-6179	Page 99
B	
BACKUP ALARM (Figure 137)	Page 234
BRAKE (Figure 85)	Page 146
BRAKE LINKAGE (Figure 83)	Page 142

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C	
CAMSHAFT & VALVES (Figure 18) DIESEL	Page 32
CAMSHAFT & VALVES (Figure 27) GASOLINE LPG	Page 43
CARBURETOR (Figure 35) GASOLINE	Page 58
CARBURETOR (Figure 33) LPG	Page 55
CARRIAGE (Figure 104) LFL	Page 181
CARRIAGE (Figure 112) 3 STG FFL	Page 196
CARRIAGE (Figure 119) 2 STG FFL	Page 208
CLUTCH-FORWARD/REVERSE (Figure 68) Last Used On S/N C1B-3159	Page 112
CLUTCH-FORWARD/REVERSE (Figure 69) First Used On S/N C1B-3160	Page 114
CONVERTER (Figure 47)	Page 73
COOLING (Figure 13)	Page 22

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
COUNTERWEIGHT (Figure 9)	Page 15
CRANKSHAFT, PISTON & FLYWHEEL (Figure 17) DIESEL	Page 30
CRANKSHAFT, PISTON & FLYWHEEL (Figure 26) GASOLINE LPG	Page 40
CYLINDER BLOCK (Figure 14) DIESEL	Page 24
CYLINDER BLOCK (Figure 24) GASOLINE LPG	Page 38
CYLINDER HEAD (Figure 15) DIESEL	Page 26
CYLINDER HEAD (Figure 25) GASOLINE LPG	Page 39
D	
DIFFERENTIAL (Figure 70) Last Used On S/N C1B-3159	Page 116
DIFFERENTIAL (Figure 71) First Used On S/N C1B-3160	Page 118
DISTRIBUTOR (Figure 54)	Page 90
DRIVE AXLE (Figure 72) Last Used On S/N C1B-3159	Page 120

TABLE OF CONTENTS

DESCRIPTION	PAGE
D	
DRIVE AXLE (Figure 73) First Used On S/N C1B-3160	Page 122
DRIVE TIRE & WHEEL (Figure 134)	Page 228
E	
ELECTRICAL (Figure 48) GASOLINE LPG	Page 78
ELECTRICAL (Figure 49) DIESEL	Page 80
ELECTRICAL (Figure 50) TYPES GS & LPS	Page 82
ELECTRICAL (Figure 51) TYPE DS	Page 84
ELECTRICAL DIESEL	Page 81
ELECTRICAL DS	Page 85
ELECTRICAL TYPES GS & LPS	Page 83
ENGINE MOUNT (Figure 11)	Page 19
EXHAUST (Figure 12)	Page 20

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
F	
FIRE EXTINGUISHER (Figure 133)	Page 227
FLOOR COWL & PLATES (Figure 4)	Page 8
FLOW VALVE (Figure 92)	Page 157
FORK (Figure 136)	Page 232
FORWARD/REVERSE SWITCH (Figure 64)	Page 105
FREE LIFT (Figure 116) 2 STG FFL	Page 204
FREE LIFT CYLINDER (Figure 118) 2 STG FFL	Page 207
FREE-LIFT (Figure 109) 3 STG FFL	Page 192
FREE-LIFT CYLINDER (Figure 111) 3 STG FFL	Page 195
FUEL (Figure 34)	Page 56
FUEL (Figure 32) LPG	Page 52
FUEL FILTER (Figure 41) DIESEL	Page 67
FUEL INJECTION (Figure 39) DIESEL	Page 64
FUEL PUMP (Figure 37) GASOLINE	Page 61

TABLE OF CONTENTS

DESCRIPTION	PAGE
G	
GOVERNOR (Figure 36) GASOLINE LPG	Page 60
GOVERNOR (Figure 40) DIESEL	Page 66
H	
HEADER HOSE (Figure 125) TWO-STAGE 332000, 323000 And 351000 Series Mast	Page 214
HEADER HOSE (Figure 126) TWO-STAGE 372000 And 388000 Series Mast	Page 216
HEADER HOSE (Figure 127) THREE-STAGE	Page 218
HEADER HOSE (Figure 128) FREE-LIFT	Page 220
HOOD & LINKAGE (Figure 5)	Page 10
HYDRAULIC (Figure 89) DIESEL	Page 152
HYDRAULIC (Figure 90) GASOLINE LPG	Page 154
HYDRAULIC PUMP (Figure 91)	Page 156

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
I	
INNER MAST (Figure 101) 2 STG LFL	Page 176
INNER MAST (Figure 107) 3 STG FFL	Page 188
INNER MAST (Figure 114) 2 STG FFL	Page 200
INSTRUMENT PANEL (Figure 52)	Page 86
INSTRUMENT PANEL (Figure 53) TYPES GS, LPS & DS	Page 88
INSTRUMENT PANEL TYPE GS, LPS & DS	Page 89
INSTRUMENT PANEL	Page 87
INTERMEDIATE MAST (Figure 106) 3 STG FFL	Page 186
L	
LABELS & PAINT (Figure 3)	Page 6
LIFT (Figure 102) LFL	Page 178
LIFT CYLINDER (Figure 103) LFL	Page 180
LIFTING EYE (Figure 131)	Page 226

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
L (Continued)	
LIGHTS (U.S.) (Figure 129)	Page 222
LIGHTS (EUROPE) (Figure 130)	Page 224
LINKAGE-FORWARD/REVERSE (Figure 63)	Page 104
LOAD BACKREST EXTENSION (Figure 10)	Page 15
LOCK-OFF FILTER (Figure 46)	Page 73
M	
MAIN LIFT (Figure 108) 3 STG FFL	Page 190
MAIN LIFT (Figure 115) 2 STG FLL	Page 202
MAIN LIFT CYLINDER (Figure 110) 3 STG FFL	Page 194
MAIN LIFT CYLINDER (Figure 117) 2 STG FFL	Page 206
MANIFOLD (Figure 20) DIESEL	Page 34
MANIFOLD (Figure 29) GASOLINE LPG	Page 46

TABLE OF CONTENTS

DESCRIPTION	PAGE
M (Continued)	
MASTER CYLINDER (Figure 88)	Page 150
MONOTROL PEDAL (Figure 45) First Used On S/N C1B-4702	Page 72
O	
OIL CRANKCASE & PAN (Figure 16) DIESEL	Page 29
OIL CRANKCASE & PAN (Figure 28) GASOLINE LPG	Page 44
OIL FILTER (Figure 22) DIESEL	Page 36
OIL PUMP & OIL FILTER (Figure 30) GASOLINE LPG	Page 47
OIL PUMP (Figure 23) DIESEL	Page 37
OUTER MAST (Figure 100) 2 STG LFL	Page 174
OUTER MAST (Figure 105) 3 STG FFL	Page 184
OUTER MAST (Figure 113) 2 STG FFL	Page 198

TABLE OF CONTENTS

DESCRIPTION	PAGE
P	
PARK BRAKE (Figure 86)	Page 148
PARK LEVER BRAKE (Figure 87)	Page 149
PEDAL/LINKAGE (Figure 84)	Page 144
S	
SEAT (Figure 6)	Page 12
SIDE SHIFT CARRIAGE (Figure 120)	Page 210
SIDE SHIFT CARRIAGE (Figure 121)	Page 211
SIDE SHIFT CYLINDER (Figure 122)	Page 212
SIDE SHIFT CYLINDER (Figure 123)	Page 212
SIDE SHIFT CYLINDER (Figure 124)	Page 213
STANDARD SEAT (Figure 7)	Page 13
STARTER (Figure 55) GASOLINE LPG	Page 91
STARTER (Figure 56) DIESEL	Page 92
STARTER (Figure 57) DIESEL	Page 93
STEER TIRE & WHEEL (Figure 135)	Page 230
STEERING COLUMN (Figure 77)	Page 132

TABLE OF CONTENTS

DESCRIPTION	PAGE
S (Continued)	
STEERING AXLE (Figure 78)	Page 134
STEERING CYLINDER (Figure 81) Last Used On S/N C1B-6688	Page 138
STEERING CYLINDER (Figure 82) First Used On S/N C1B-6689	Page 139
STEERING PUMP (Figure 79) Last Used On S/N C1B-6688	Page 136
STEERING PUMP (Figure 80) First Used On S/N C1B-6689	Page 137
STROBE LIGHT (Figure 132)	Page 226
SUSPENSION SEAT (Figure 8)	Page 14
T	
THROTTLE LINKAGE (Figure 42) LAST USED ON S/N C1B-4701	Page 68
THROTTLE LINKAGE (Figure 43) FORWARD/REVERSE SHIFT LEVER First Used On S/N C1B-4702	Page 69
THROTTLE LINKAGE- (Figure 44) MONOTROL First Used On S/N C1B-4702	Page 70
TILT CYLINDER (Figure 99)	Page 170
TIMING GEAR (Figure 19) DIESEL	Page 33
TORQUE CONVERTER (Figure 65)	Page 106
TRANSMISSION (Figure 66) Last Used On S/N C1B-3159	Page 108
TRANSMISSION (Figure 67) First Used On S/N C1B-3160	Page 110

TABLE OF CONTENTS

DESCRIPTION	PAGE
V	
VALVE (Figure 74) TRANSMISSION FWD/REV SHIFT LEVER Last Used On S/N C1B-3159	Page 124
VALVE (Figure 75) TRANSMISSION FWD/REV Shift Lever First Used On S/N C1B-3160	Page 126
VALVE (Figure 76) TRANSMISSION Monotrol Pedal First Used On S/N C1B-4702	Page 128
VALVE (Figure 94) TWO-FUNCTION	Page 160
VALVE (Figure 96) THREE-FUNCTION	Page 164
VALVE (Figure 98) FOUR-FUNCTION	Page 168
VALVE/ATTACHING PARTS (Figure 93) TWO-FUNCTION	Page 158
VALVE/ATTACHING PARTS (Figure 95) THREE-FUNCTION	Page 162
VALVE/ATTACHING PARTS (Figure 97) FOUR-FUNCTION	Page 166
W	
WATER PUMP (Figure 21) DIESEL	Page 35
WATER PUMP (Figure 31) GASOLINE LPG	Page 48

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com