

PARTS MANUAL

CHALLENGER

 
H30-60H

(E003)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

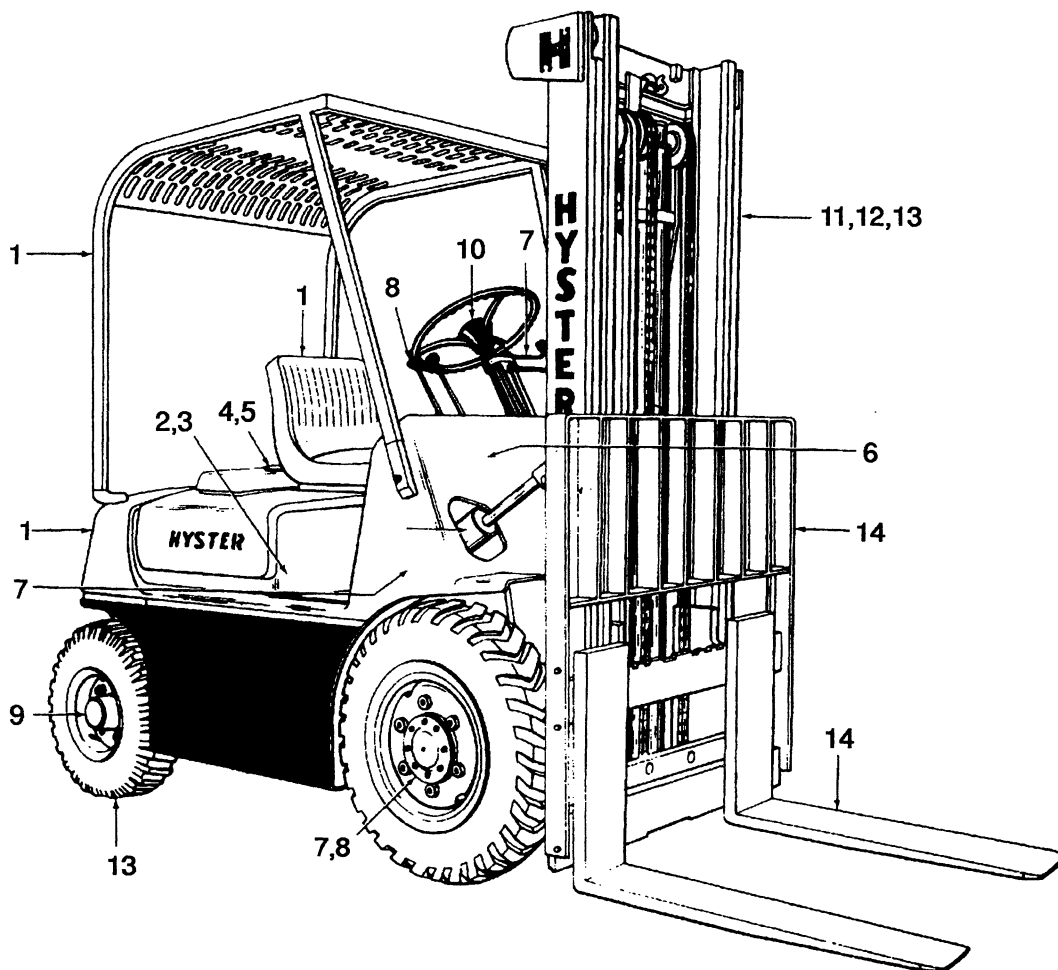

REF	SECTION	PAGE
1	FRAME AND BODY	Page 3
2	GASOLINE ENGINE	Page 13
3	DIESEL ENGINE	Page 33
4	FUEL	Page 55
5	ELECTRICAL	Page 85
6	CLUTCH AND LINKAGE	Page 105
7	TRANSMISSION	Page 109
8	BRAKES AND LINKAGE	Page 127
9	HYDRAULIC SYSTEM	Page 135
10	STEERING	Page 155
11	INTERMEDIATE FREE-LIFT MASTS	Page 163
12	FREE-LIFT MAST	Page 175
13	THREE-STAGE MAST	Page 189
14	OPTIONAL EQUIPMENT	Page 207
..	NUMERICAL INDEX	Page 231

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
A	
AIR FILTER	Page 82
ALTERNATOR TYPES GS, LPS, DS	Page 96
ALTERNATOR	Page 94
B	
BLOCK HANDLER	Page 212
BRAKE LINKAGE OIL CLUTCH	Page 130
BRAKE LINKAGE POWERSHIFT	Page 131
BRAKES	Page 128
C	
CARBURETOR GASOLINE	Page 68
CARBURETOR GASOLINE	Page 70
CARBURETOR LPG	Page 78
CARRIAGE FREE-LIFT MAST	Page 187
CARRIAGE INTERMEDIATE FREE-LIFT	Page 174
CARRIAGE THREE-STAGE MAST	Page 206
CHOKE CONTROL GASOLINE	Page 72
CLUTCH PEDAL	Page 107
CLUTCH	Page 106

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CONTROL KNOBS	Page 229
CONTROL VALVE LINKAGE	Page 142
CONTROL VALVE FOUR FUNCTION	Page 148
CONTROL VALVE THREE FUNCTION	Page 146
CONTROL VALVE TWO FUNCTION	Page 144
CONVERTER LPG	Page 80
COOLING	Page 22
COUNTERWEIGHT	Page 8
CRANKSHAFT AND PISTONS DIESEL	Page 36
CYLINDER BLOCK AND CRANKCASE GASOLINE	Page 14
CYLINDER BLOCK DIESEL	Page 34
CYLINDER HEAD AND MANIFOLD GASOLINE	Page 18
CYLINDER HEAD DIESEL	Page 38
CYLINDER SIDESHIFT	Page 213
D	
DIFFERENTIAL EUROPE	Page 125
DIFFERENTIAL	Page 124
DISTRIBUTOR	Page 92

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
D (Continued)	
DRIVE AXLE	Page 122
DRIVE PUMP AND FLYWHEEL HOUSING GASOLINE AND LPG	Page 118
E	
ELECTRICAL DIESEL	Page 88
ELECTRICAL GASOLINE AND LPG	Page 86
ENGINE MOUNTS DIESEL	Page 52
ENGINE MOUNTS GASOLINE	Page 24
EXHAUST OVERHEAD NON STEVEDORING	Page 28
EXHAUST OVERHEAD STEVEDORING	Page 30
EXHAUST	Page 26
F	
FENDER AND FLOORPLATE	Page 4
FIRE EXTINGUISHER	Page 214
FORKS	Page 211
FORWARD AND REVERSE LEVER	Page 208
FREE LIFT THREE-STAGE MAST H30-50H (H1.50-2.50H)	Page 196
FREE LIFT THREE-STAGE MAST H60H (H3.00H)	Page 198
FREE-LIFT LIFT CYLINDER THREE-STAGE MAST	Page 204

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
F (Continued)	
FUEL FILTER AND FUEL LINES DIESEL	Page 64
FUEL INJECTION DIESEL	Page 66
FUEL DIESEL	Page 58
FUEL GASOLINE	Page 60
FUEL LPG FIRST USED ON S/N E3A-2691, E3D-1704, E3H-1622, E3S-1680, E3T-1674	Page 76
FUEL LPG LAST USED ON S/N E3A-2690, E3D-1703, E3H-1621, E3S-1679, E3T-1673	Page 74
H	
HAND PUMP	Page 160
HEADER HOSES FREE-LIFT MAST	Page 182
HEADER HOSES INTERMEDIATE FREE-LIFT	Page 168
HEADER HOSES THREE-STAGE MAST	Page 200
HOOD AND LINKAGE	Page 6
HYDRAULIC DRIVE PUMP DIESEL	Page 48
HYDRAULIC FILTER	Page 154
HYDRAULIC PUMP	Page 150
HYDRAULIC SYSTEM	Page 136
HYDRAULIC TANK	Page 140

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
I	
INSTRUMENT PANEL	Page 90
L	
LABELS AND PAINT	Page 10
LIFT CYLINDER FREE-LIFT MAST	Page 184
LIFT CYLINDER INTERMEDIATE FREE-LIFT	Page 172
LIFT FREE-LIFT MAST	Page 180
LIFT INTERMEDIATE FREE-LIFT	Page 166
LIGHTS	Page 222
LOAD EXTENSION	Page 210
M	
MAIN LIFT CYLINDER THREE-STAGE MAST	Page 202
MAIN LIFT THREE-STAGE MAST	Page 194
MANIFOLDS DIESEL	Page 40
MAST INTERMEDIATE FREE-LIFT	Page 164
MASTER CYLINDER	Page 134
MAST FREE-LIFT MAST	Page 176
MAST THREE-STAGE MAST	Page 190
MONOTROL PEDAL POWERSHIFT	Page 62

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
O	
OIL PIPES AND FILTER DIESEL	Page 46
OIL PUMP AND OIL PAN DIESEL	Page 44
OIL PUMP GASOLINE	Page 20
OVERHEAD GUARD RETRACTABLE	Page 220
OVERHEAD GUARD	Page 9
P	
PARK BRAKE	Page 132
PUBLICATIONS	Page 2
R	
RELIEF VALVE	Page 141
S	
SEAT	Page 12
SHIFT LINKAGE OIL CLUTCH	Page 120
SIDESHIFT CARRIAGE INTERMEDIATE FREE-LIFT	Page 216
SIDESHIFT CARRIAGE THREE-STAGE AND FREE-LIFT	Page 218
STARTER DIESEL EUROPE	Page 102
STARTER DIESEL	Page 100
STARTER GASOLINE AND LPG	Page 98


TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
S (Continued)	
STEERING AXLE	Page 156
STEERING CONTROL	Page 158
STEERING CYLINDER	Page 162
T	
THROTTLE LINKAGE	Page 56
TILT CYLINDER	Page 152
TIMING GEARS DIESEL	Page 50
TREES AND WHEELS DUAL DRIVE WHEELS	Page 226
TIRES AND WHEELS SINGLE DRIVE WHEELS	Page 224
TIRES AND WHEELS STEERING	Page 228
TRANSMISSION CONTROL VALVE POWERSHIFT	Page 121
TRANSMISSION GEARS OIL CLUTCH	Page 110
TRANSMISSION GEARS POWERSHIFT	Page 112
TRANSMISSION HOUSING AND TORQUE CONVERTER POWERSHIFT	Page 116
TRANSMISSION HOUSING OIL CLUTCH	Page 114
V	
VALVE COVER AND ROCKER SHAFT DIESEL	Page 42
W	
WATER PUMP DIESEL	Page 53

HOW TO USE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.


The different constructions are indicated by keys, symbols and footnotes.



SERIAL CODE C187

TABLE OF CONTENTS


DESCRIPTION	PAGE
CARRIAGE (Figure 107) VISTA 2-STG LFL	Page 192
CARRIAGE (Figure 136) VISTA 3-STG FFL	
CARRIAGE (Figure 166) VISTA 2-STG FFL	
CARRIAGE (Figure 197) VISTA 4-STG FFL	
CARRIAGE (Figure 203) SIDE-SHIFT	
CARRIAGE (Figure 204) SIDE-SHIFT	
CLUTCH-FORWARD AND	



SERIAL CODE C187


INDEX—NUMERICAL


PART NO	REF NO	FIGURE NO	PART NO	REF NO	FIGURE NO	PART NO	REF NO	FIGURE NO	PART NO	REF NO	FIGURE NO
126	51	28	90	13		97	19		33	20	
						99	18		35	10	
						101	19		36	16	
									15212	2	
											129
											181
											14
											9



SERIAL CODE C108

 ILLUSTRATED CONTENTS

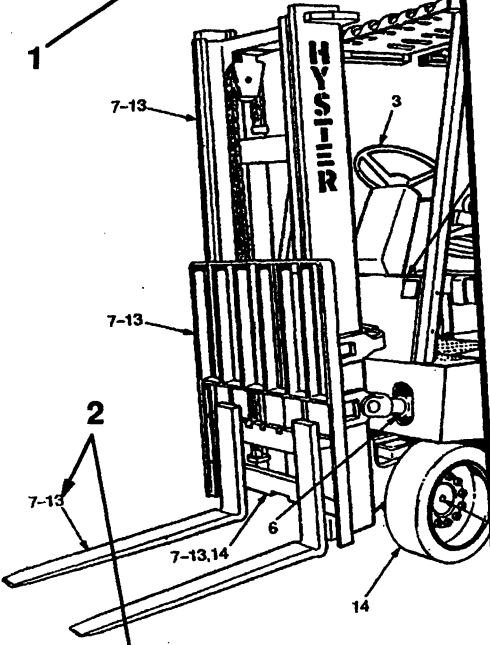




SERIAL CODE C108

CARRIAGE (Figure 123)

 LAST USED ON S/N PENDING PER ECN 98765

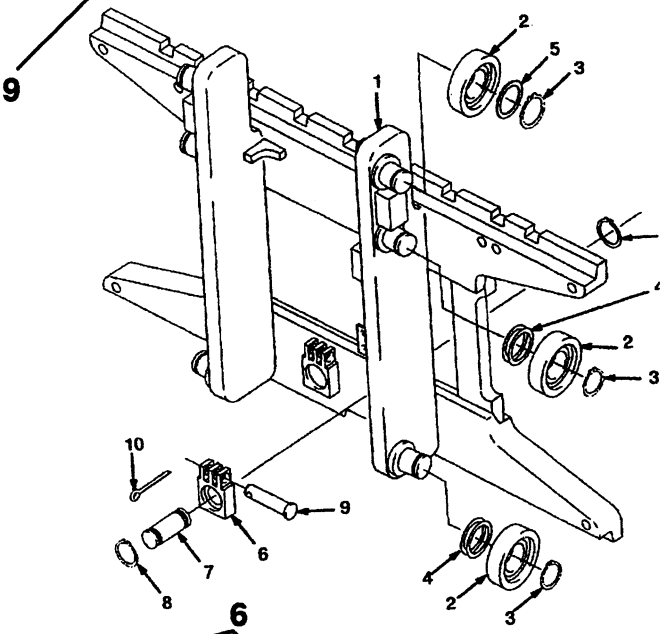

REF	DIVISION
1	Frame
2	Drive Axle
3	Steering
4	Brake/Accelerator
5	Electrical
6	Hydraulic
7	Mast-Vista Two-Stage Limited Free Lift
8	Mast-Global Two-Stage Limited Free Lift
9	Mast-Vista Three-Stage Full Free Lift
10	Mast-Global Three-Stage Full Free Lift
11	Mast-Vista Two-Stage Full Free Lift
12	Mast-Global Two-Stage Full Free Lift
13	Mast-Vista Four-Stage Full Free Lift
14	Optional Equipment

KEY	REF	PART NO.	NAME OF PART	QTY
A: E40-50XL				
B: E60XL				
	1	1371660	Carriage	1
	1	1371661	Carriage	1
	1	1359245	Frame	1
	1	1359246	Frame	1
	2	1345218	Load Roller ("A" Standard)	6
	2	1345219	Load Roller ("B" 0.03 in.)	6
	2	1345220	Load Roller ("C" 0.06 in.)	6
	3	12891	Snap Ring	6

REF	PART NO.	NAME OF PART
4	1345263	Shim
5	366116	Spacer
6	1369345	Chain Anchor
6	1369344	Chain Anchor
7	317735	Pin
8	131358	Snap Ring
9	323161	Pin
10	15200	Cotter Pin

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the illustrated index page immediately behind the front cover. Choose the general area of reference most likely to include the part.
2. Find the page number for the reference number you choose and turn to that page. Use the division index to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Master Index immediately following the Illustrated Index.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the numerical index at the back of the manual to find the part number. Turn to the figure listed and locate the part as indicated by the reference number.

GENERAL:

The assembly breakdowns include part numbers, description, quantities required, keys and footnotes to help in selecting the correct parts.

 
6. Keys are used to show effective serial numbers for two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C" or "D" and the corresponding quantity column to find the required parts.
7. Indented descriptions under "Name of Part" are used to indicate assemblies and sub-parts of assemblies. In the example, *LOAD ROLLER* (Item 2) is a subpart of the major assembly *CARRIAGE*.
8. Quantities shown are for one assembly. The quantities of the subpart *LOAD ROLLER* are indicated as six and six. This means six per *CARRIAGE* assembly.
9. Engineering change notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local dealer for Hyster lift trucks for serial number information listed by ECN number.
10. Additional fork lengths are available. Contact your dealer for Hyster lift trucks.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS



- (1) & (2) The first letter and three numbers indicates the truck model code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number series indicates the serial number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957 and 1980. The letters "I", "O", and "Q" will not be used.

 For pending serial numbers contact your local dealer for Hyster lift trucks.

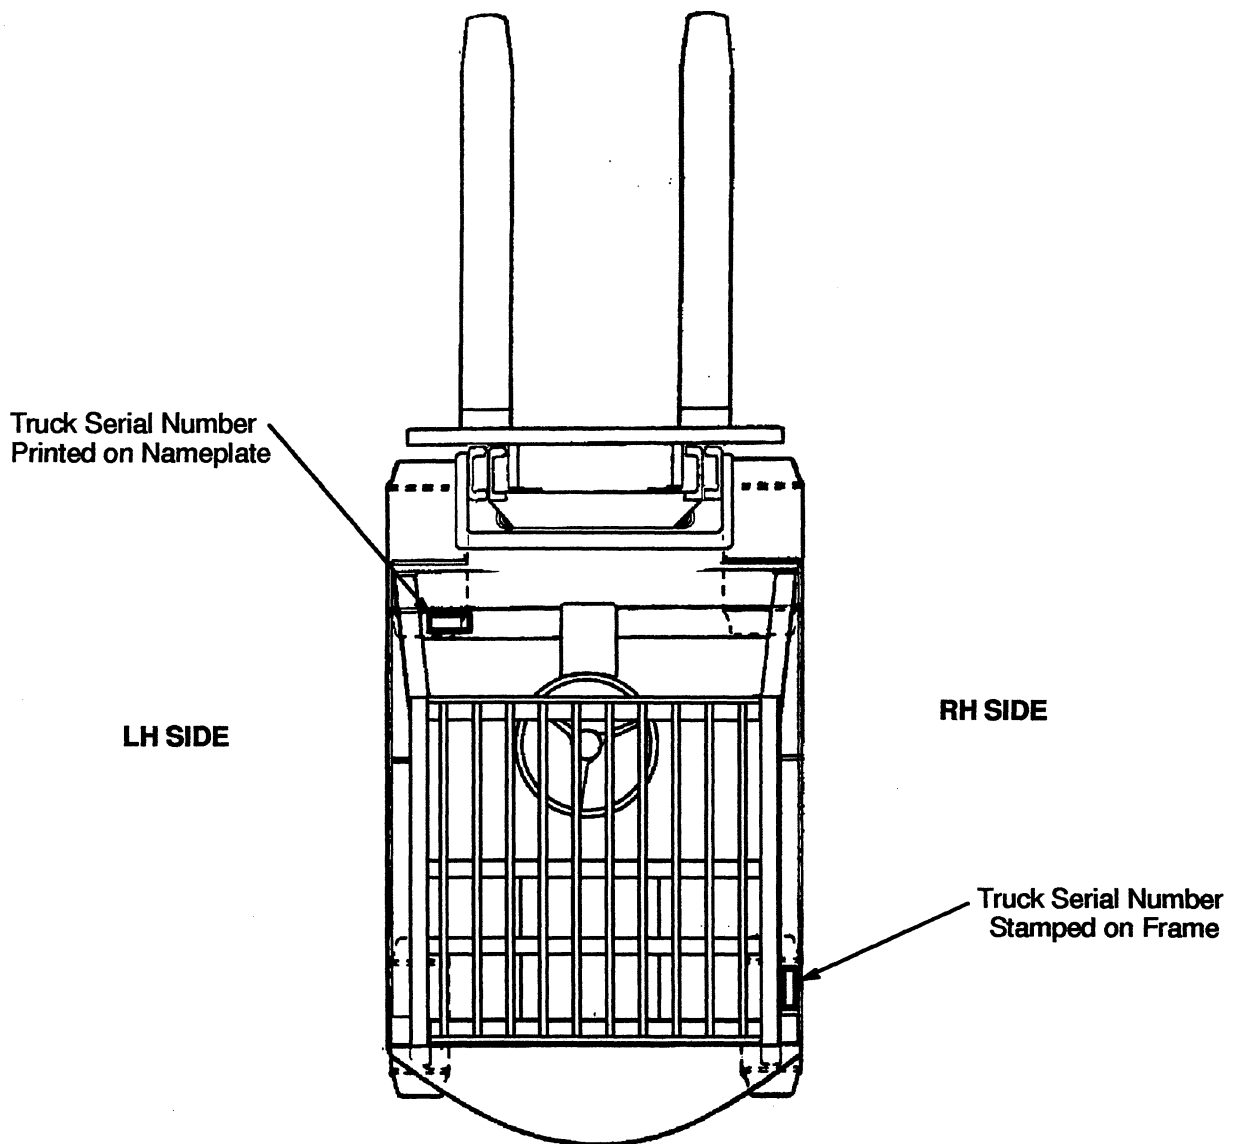

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com