




# PARTS MANUAL


**ELECTRIC  
R30E/EA/EF  
R35E  
(D118)**

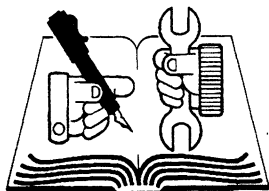

Hyster Easy Language Program

# CUSTOMER EDITION

# ILLUSTRATED CONTENTS

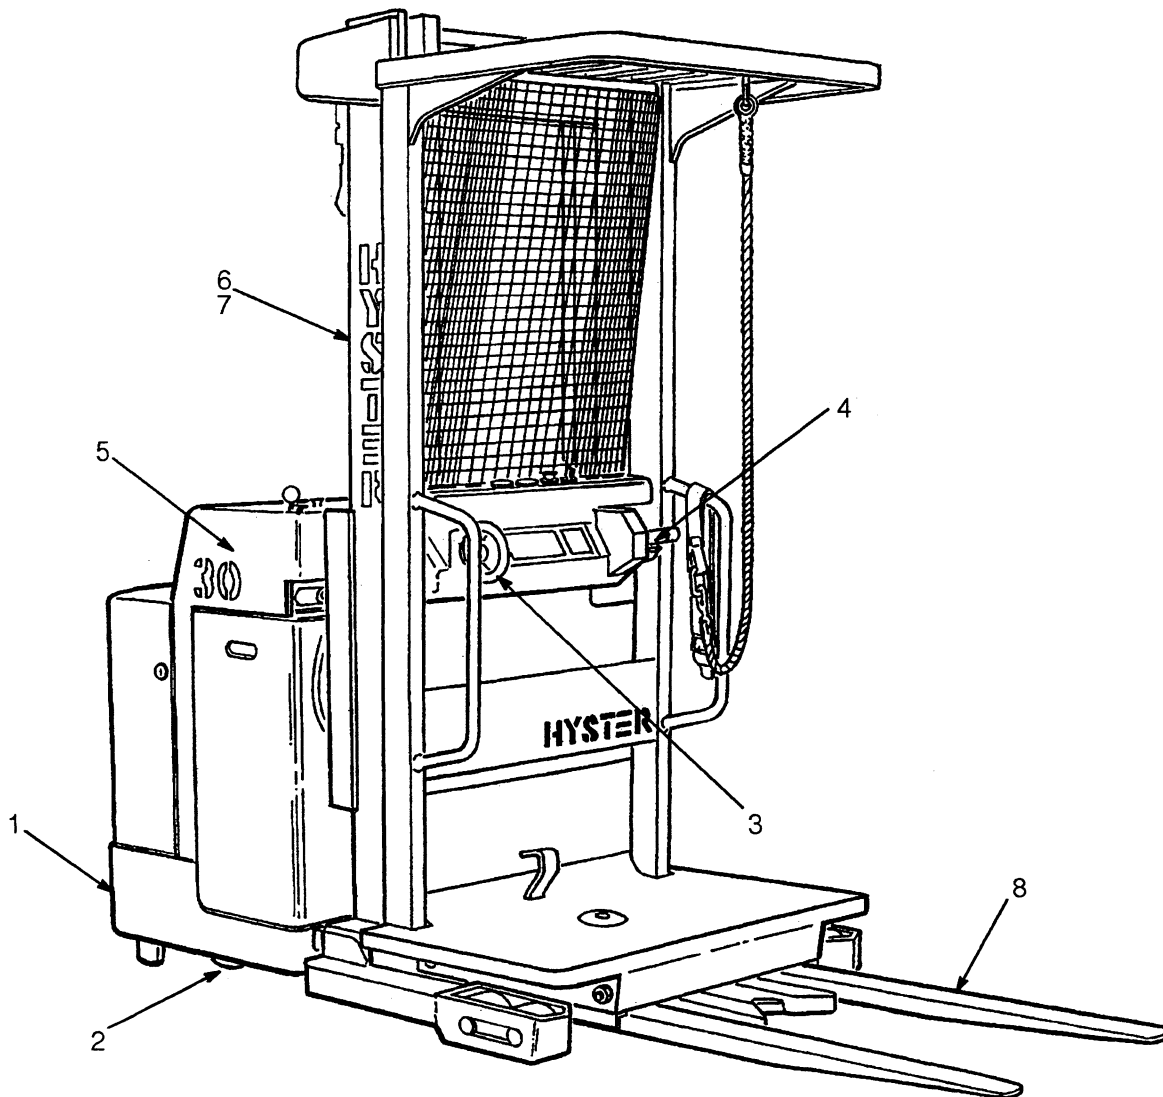

1	FRAME .....	7
2	UNIT-MASTER DRIVE .....	17
3	STEERING .....	22
4	HYDRAULIC .....	27
5	ELECTRICAL .....	33
6	MAST-VISTA TWO-STAGE .....	49
7	MAST-VISTA THREE-STAGE .....	61
8	OPTIONAL .....	76
9	INDEX-NUMERICAL .....	3



## TABLE OF CONTENTS

DESCRIPTION	PAGE NO.
ACCELERATOR .....	44
BRAKE .....	21
CARRIAGE VISTA TWO-STAGE .....	58 - 59
CARRIAGE VISTA THREE-STAGE .....	74 - 75
CASTER .....	14
CLAMP-PALLET .....	77
CONTACTOR .....	46 - 47
CONTROL-STEERING .....	24
COVERS .....	8 - 9
CYLINDER-LIFT VISTA TWO-STAGE .....	56
CYLINDER-LIFT VISTA THREE-STAGE .....	72 - 73
DISCONNECT-BATTERY .....	43
ELECTRICAL .....	34 - 35
ELECTRICAL CARRIAGE .....	36 - 37
EXTINGUISHER-FIRE .....	82
FAN .....	83
FORK .....	78
GUIDANCE-WIRE .....	80
HOODS/COVERS .....	8 - 9
HYDRAULIC .....	28 - 29
INDEX-NUMERICAL .....	3
LABELS/PAINT .....	12 - 13
LIFT VISTA TWO-STAGE .....	54 - 55
LIFT VISTA THREE-STAGE .....	68 - 71
LIGHTS .....	79
MAST VISTA TWO-STAGE .....	50 - 53
MAST VISA THREE-STAGE .....	62 - 67
MODULE-CONTROL .....	42
MOTOR-HYDRAULIC .....	31
MOTOR-STEERING .....	25
MOTOR-TRACTION .....	20
PAINT .....	12 - 13
PANEL-CONTACTOR .....	45
PANEL-INSTRUMENT .....	38 - 39
PANEL-TRACTION .....	40 - 41
PUBLICATIONS .....	15
PUMP-HYDRAULIC .....	30
REDUCER-SPEED .....	26
ROLLER-GUIDE .....	81
STEERING .....	23
TANK-HYDRAULIC .....	32
UNIT-MASTER-DRIVE .....	18 - 19
WHEEL-LOAD .....	10 - 11



## INDEX-NUMERICAL

139	-	67551	.....	84
89220	-	292680	.....	85
292681	-	367368	.....	86
367369	-	385868	.....	87
385869	-	1303926	.....	88
1303927	-	3011810	.....	89

# HOW TO USE THE ILLUSTRATED PARTS MANUAL

This manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

**3**

**TABLE OF CONTENTS**

ACTUATOR ..... 000  
 ALTERNATOR ..... 000  
 SELF-DRIVE ..... 000  
 AXLE-STEERING ..... 000

BLOCK-CYLINDER DIESEL ..... 000  
 BLOCK-CYLINDER GASOLINE L.P.C. .... 000  
 BRAKE ..... 000  
 BRAKE-PARK ..... 000  
 CAB ..... 000

**5**

**NUMERICAL INDEX**

PART NO	REF NO	PAGE NO	PART NO	REF NO	PAGE NO	PART NO	REF NO	PAGE NO	PART NO	REF NO	PAGE NO
128 000	3	15000 000	29	15127 000	9	15156 000	29	15183 000	5		
138 000	14	000 000	6	000 000	2	000 000	28	15200 000	6		
000 000	12	000 000	25	000 000	30	000 000	21	000 000	10		
000 000	28	000 000	1	15134 000	22	000 000	42	000 000	9		
000 000	33	000 000	21	15136 000	13	000 000	13	000 000	21		
139 000	12	000 000	5	000 000	16	000 000	10	000 000	12		
000 000	13	15007 000	5	15135 000	33	000 000	17	000 000	7		
000 000	25	000 000	6	15152 000	15	000 000	25	000 000	7		
000 000	30	15008 000	29	000 000	22	000 000	1	000 000	7		
142 000	17	15010 000	73	000 000	20	000 000	5	15211 000	13		
000 000	4	15015 000	12	000 000	11	000 000	27	000 000	14		
			10	000 000	6	000 000	20	000 000	26		
				000 000		000 000	42	000 000	31		
				000 000		000 000	32	15212 000	14		
									13		

**9**

**MOTOR**

LAST USED ON PENDING S/N PER LCH #9020 (SEE PAGE 403)

**6**

REF NO	HYSTER PART NO	NAME OF PART	QTY	UNIT	REF NO	HYSTER PART NO
1	313402	MOTOR	1		1	313402
2	313403	MOTOR	1		2	313403
3	317053	HEAD	1		3	317053
4	314810	SET-SPRING	1		4	314810
5	317054	SET-SPRING	1		5	317054
6	317055	HOLDER	1		6	317055
7	317134	HOLDER	1		7	317134
8	317114	RETAINER	1		8	317114
9	317056	BEARING	1		9	317056
10	317057	SET-BUSH	1		10	317057
11	317058	SET-BUSH	1		11	317058

**1**

**ILLUSTRATED CONTEXT**

**2**

REF	SECTION	PAGE
1	FRAME/BODY	100
2	UNIT-MASTER DRIVE	000
3	STEERING	000
4	BRAKE/ACCELERATOR	000
5	ELECTRICAL	000
6	HYDRAULIC	000
7	UPRIGHT-VISTA TWO-STAGE	100
8	UPRIGHT-VISTA THREE-STAGE	300
9	CARRIAGE	000
10	OPTIONAL	000
11	INDEX-NUMERICAL	000

**HYSTER COMPANY**

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function of the part required. Turn to the **Illustrated Index** immediately behind the front cover. Choose the general area of reference most likely to include the part.
2. Find the page number for the reference number you choose and turn to that page. Use the division index to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the **Table of Contents** immediately following the Illustrated Index.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the **Numerical Index** at the back of the manual to find the part number. Turn to the page listed and locate the part as indicated by the reference number.

GENERAL:

6. Keys are used to show effective serial numbers for two or more similar assemblies, RH and LH assembly parts, different configurations, etc.. Select the appropriate key, "A", "B", "C", or "D", which will indicate the column in which the part quantity can be found.
7. Indented descriptions under "Name of Part" are used to indicate assemblies and sub-parts of assemblies. In the example (Item 7), *HEAD* is a sub-part of the major assembly *MOTOR*, and *SET-SPRING* is one of several sub-parts of the assembly *HEAD*.
8. Quantities shown are for one assembly. Note that two assemblies are shown, but the quantities of the sub-parts are indicated as three. This means three per assembly.
9. Engineering change notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local dealer for Hyster lift truck serial number information listed by ECN number.

## Ordering parts:

When ordering replacement parts, give the unit serial number, part number, name of part, and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**