

PARTS MANUAL

**T5XT
(E142)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME/DRIVE UNIT	
2	ELECTRICAL SYSTEM	
3	STEER HANDLE/BRAKE SYSTEM	
4	REAR AXLE AND LOAD WHEELS	
5	OPTIONS	
6	NUMERICAL INDEX	

This Parts Manual is divided into 6 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
B	
BATTERY CONNECTOR	
S/N E142H-02126W⇒.....	2-18
BATTERY RETENTION.....	1-23
BRAKE SHOE AND LINKAGE.....	3-26
C	
CONTACTOR	
FORWARD/REVERSE	
⇒S/N E142H-02125W.....	2-14
S/N E142H-02126W⇒.....	2-16
CONTACTOR PANEL	
⇒S/N E142H-02125W, S/N E142H-991607S⇒.....	2-10
S/N E142H-02126W⇒.....	2-12
⇒S/N E142H-991600S.....	2-6
S/N E142H-991601S⇔S/N E142H-991606S.....	2-8
COUPLER ASSEMBLY.....	1-20
E	
ELECTRICAL	
⇒S/N E142H-02125W.....	2-2
S/N E142H-02126W⇒.....	2-4
F	
FLOOR MAT, PLATE, AND FOOT PEDAL.....	1-18
H	
HOODS AND COVERS.....	1-16
HOURMETER/BATTERY GAUGE.....	5-2
L	
LABELS	
S/N E142H-02126W⇒.....	1-14
LABELS AND PAINT	
⇒S/N E142H-02125W.....	1-12
M	
MASTER DRIVE UNIT.....	1-2
R	
REAR AXLE AND LOAD WHEELS.....	4-2
S	
STATIC STRAP INSTALLATION.....	1-22
STEER HANDLE AND BRAKE LINKAGE	
⇒S/N E142H-02125W.....	3-2
S/N E142H-02126W⇒.....	3-6
STEER HEAD	
⇒S/N E142H-01717T.....	3-10
⇒S/N E142H-02125W, S/N E142H-01718T⇒.....	3-14

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
S (continued)	
S/N E142H-02126W⇒.....	3-18
WIDE OPTION	
S/N E142H-02126W⇒.....	3-22
T	
TRACTION MOTOR	
⇒S/N E142H-01710T.....	1-6
S/N E142H-01711T⇒ ⇒S/N PENDING PER ECN 85044-43.....	1-8
S/N PENDING PER ECN 85044-43⇒.....	1-10

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com