

PARTS MANUAL

**H135-155XL
(G006)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	STEERING SYSTEM
7	BRAKE SYSTEM
8	HYDRAULIC SYSTEM
9	MAST-TWO STAGE LIMITED FREE-LIFT
10	MAST-THREE STAGE FULL FREE-LIFT
11	OPTIONS
12	NUMERICAL INDEX

This Parts Manual is divided into 12 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCELERATOR PEDAL AND BRACKET	
MONOTROL	3-28
WITH FORWARD AND REVERSE LEVER.....	3-26
AIR FILTER	
HEAVY DUTY	
DIESEL.....	3-6
GASOLINE AND LPG	3-4
STANDARD.....	3-2
ALTERNATOR MOUNTING	
DIESEL	4-20
AXLE HOUSING AND ATTACHING PARTS.....	5-24
B	
BRAKE	7-10
BRAKE BOOSTER.....	7-12
BRAKE LINES.....	7-4
BRAKE PEDAL LINKAGE	
POWERSHIFT	7-6
C	
CAB.....	11-2
CAMSHAFT AND OIL PAN	
GASOLINE AND LPG	
4.3L EPA COMPLIANT.....	2-26
CARRIAGE	
THREE STAGE FULL FREE-LIFT	10-18
TWO STAGE LIMITED FREE-LIFT.....	9-10
CLUTCH PACK	
POWERSHIFT	
DIRECTIONAL	5-10
INPUT.....	5-8
CONTROL LINKAGE	
POWERSHIFT	5-18
CONTROL VALVE	
FOUR FUNCTION	8-16
TWO AND THREE FUNCTION	8-14
CONTROL VALVE ATTACHING PARTS WITH FITTINGS	
FOUR FUNCTION	8-22
TWO AND THREE FUNCTION	8-18
CONTROL VALVE ATTACHING TUBES	8-24
COOLING AND FAN DRIVE	
DIESEL TIER II.....	2-50
COUNTERWEIGHT	1-18
COWL AND FLOOR PLATES	1-12
CRANKSHAFT AND PISTONS	
DIESEL	
TIER II	2-46
CYLINDER BLOCK	
DIESEL	
TIER II	2-40

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
C (continued)	
GASOLINE AND LPG 4.3L EPA COMPLIANT	2-24
CYLINDER HEAD GASOLINE AND LPG 4.3L EPA COMPLIANT	2-36
CYLINDER HEAD AND INDUCTION MANIFOLD DIESEL TIER II	2-42
D	
DIFFERENTIAL AND CARRIER	5-26
DISTRIBUTOR 4.3 L EPA COMPLIANT ENGINE	4-18
DRIVE ADAPTOR DIESEL TIER II	2-68
DRIVE AXLE	5-22
DRIVE SHAFT	8-30
DRIVE SHAFT ASSEMBLY	5-29
E	
ELECTRICAL SYSTEM DIESEL	4-4
GASOLINE AND LPG	4-2
ENGINE ASSEMBLY GASOLINE 4.3L EPA COMPLIANT	2-22
LPG 4.3L EPA COMPLIANT	2-20
ENGINE FUEL SYSTEM LPG 4.3L EPA COMPLIANT ENGINE	3-16
ENGINE MOUNTING GASOLINE, LPG AND DIESEL	2-18
EXHAUST DIESEL WITH CAB TIER II ENGINE	2-58
WITHOUT CAB TIER II ENGINE	2-60
EXHAUST GAS AND LPG WITH CAB	2-10
EPA COMPLIANT	2-14
WITHOUT CAB	2-8
EPA COMPLIANT	2-12
EXHAUST MANIFOLD DIESEL TIER II	2-56
GASOLINE AND LPG 4.3L EPA COMPLIANT	2-16

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
F	
FAN DRIVE AND ALTERNATOR MOUNTING	
4.3L EPA COMPLIANT ENGINE	2-6
FLYWHEEL	
GASOLINE, LPG AND DIESEL	2-70
FORKS	
PIN TYPE.....	1-20
FREE-LIFT	
THREE STAGE FULL FREE-LIFT	10-10
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	10-16
FUEL INJECTION PUMP	
DIESEL	
TIER II	2-66
FUEL SUPPLY SYSTEM	
DIESEL TIER II	3-10
GASOLINE.....	3-8
LPG	3-14
FULL SUSPENSION SEAT	
SHEET 1 OF 2.....	1-6
SHEET 2 OF 2.....	1-8
G	
GAUGE CLUSTER.....	4-12
GENERAL TRUCK	1-2
H	
HEADER HOSE	
THREE STAGE FULL FREE LIFT	10-20
TWO STAGE LIMITED FREE-LIFT.....	9-12
HEATER	11-6
HOOD.....	1-10
HYDRAULIC OIL FILTER	8-12
HYDRAULIC PUMP.....	8-26
HYDRAULIC SYSTEM	8-2
HYDRAULIC TANK.....	8-10
I	
INNER MAST	
THREE STAGE FULL FREE-LIFT	10-6
TWO STAGE LIMITED FREE-LIFT.....	9-4
INSTRUMENT PANEL.....	4-8
INTAKE MANIFOLD AND FUEL RAIL	
GASOLINE	
4.3L EPA COMPLIANT ENGINE.....	2-34
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	10-4

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
L	
LABELS.....	1-14
LIFT	
TWO STAGE LIMITED FREE-LIFT.....	9-6
LIFT CYLINDER	
TWO STAGE LIMITED FREE-LIFT.....	9-8
LIGHTS.....	11-20
LOAD BACKREST EXTENSION.....	1-22
LPG REGULATOR	
4.3L EPA COMPLIANT ENGINE.....	3-20
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT.....	10-8
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT.....	10-14
MASTER CYLINDER.....	7-14
MONOTROL PEDAL.....	3-30
N	
NON-SUSPENSION SEAT.....	1-4
O	
OIL COOLER	
DIESEL	
TIER II.....	2-64
OIL FILTER	
DIESEL	
TIER II.....	2-62
OIL PAN AND PUMP	
DIESEL	
TIER II.....	2-48
OIL PUMP	
GASOLINE AND LPG	
4.3L EPA COMPLIANT.....	2-38
OUTER MAST	
THREE STAGE FULL FREE-LIFT.....	10-2
TWO STAGE LIMITED FREE-LIFT.....	9-2
OVERHEAD GUARD.....	1-16
P	
PARK BRAKE.....	7-2
R	
RADIATOR	
GAS AND LPG.....	2-4

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
S	
SIDE-SHIFT CARRIAGE	
78-INCH	
THREE STAGE FULL FREE-LIFT	11-14
TWO STAGE LIMITED FREE-LIFT	11-12
SIDE-SHIFT CYLINDER	11-18
STARTER	
GASOLINE AND LPG.....	4-14
STARTER MOTOR	
DIESEL	4-16
STEERING AXLE.....	6-8
STEERING COLUMN.....	6-2
STEERING CONTROL UNIT	6-6
STEERING CYLINDER.....	6-12
STEERING HYDRAULIC.....	8-4
STEERING PUMP.....	6-10
T	
THROTTLE BODY AND LPG MIXER	
4.3L EPA COMPLIANT ENGINE	3-18
THROTTLE BODY ASSEMBLY	
GASOLINE	
4.3L EPA COMPLIANT ENGINE.....	3-22
THROTTLE LINKAGE	
GAS, LPG, AND DIESEL.....	3-24
TILT CYLINDER	8-28
TIMING GEAR	
DIESEL	
TIER II	2-54
TIRES AND WHEELS	
DRIVE.....	11-24
STEERING.....	11-26
TORQUE CONVERTER	
POWERSHIFT	5-16
TRANSMISSION	
POWERSHIFT	5-2
TRANSMISSION CONTROL VALVE	
POWERSHIFT	5-12
TRANSMISSION COOLING.....	8-8
TRANSMISSION GEARS	
POWERSHIFT	5-6
V	
VALVE COVER AND INLET MANIFOLD	
GASOLINE AND LPG	
4.3L EPA COMPLIANT.....	2-30
VALVE COVER AND ROCKER ARM SHAFT	
DIESEL	
TIER II	2-44

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
W	
WATER PUMP AND OUTLET	
DIESEL	
TIER II	2-52
WIPER AND FAN	11-10
WIRE HARNESS	
COWL	
DIESEL.....	4-24
GASOLINE AND LPG	4-22
NEUTRAL START MONOTROL PEDAL	
GASOLINE AND LPG	4-27
NEUTRAL START, FORWARD AND REVERSE LEVER	
GASOLINE AND LPG	4-28
WIRE HARNESS (ENGINE)	
DIESEL	4-30

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/96).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL -	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F.....	

SECTION 13 NUMERICAL INDEX

PART NO.	ITEM PAGE NO.	PART NO.	ITEM PAGE NO.	PART NO.	ITEM PAGE NO.	PART NO.	ITEM PAGE NO.
142	3-4 19	10-13	25	11-27	29	12-31	12
12445	3-32 19	10-17	6	11-31	25	16719	3-35 5
	3-34 1	10-27	11	11-32	37	16751	3-18 27
		11-11	6	8-4	29	16849	3-34 21
		11-16	11	8-8	34	16863	3-36 20
		12-5	13	9-7	9	16865	3-6 17
		12-12	6	9-7	19	16882	9-7 30
		13-3	17	9-11	9		9-11 27
		13-23	46	10-9	21		10-10 36
		13-27	46	10-9	26		10-13 32
		14-26	14	10-13	16		11-7 24
		14-28	14	11-7	18		11-9 17
		14-30	14				

SECTIONS

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Transmission	2	2
	2021670	Case	4	4
1	2023419	Bearing Cap	4	4
2	296426	Washer	1	1
3	293592	Bolt	2	2
4	2021390	Cover	4	4
5	1371655	Collar Pin	1	1
6	2021329	O-Ring	4	4
7	2021915	Plug	1	1
8	2021675	Housing	22	22
9	2021336	Pin	39	39
10	287880	Bolt	1	1
11	292682	Lockwasher	1	1
12		Hydraulic Pump	1	1
13		⇒ Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	8	8
16	256418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capcrew	4	4
24	292683	Lockwasher	4	4
25	293837	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick reference can be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents on Page i.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index on Page 12-1 to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)
7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and subparts of assemblies. In the example on the

previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - ⇒ **S/N D001H-2628**
Indicates last serial number affected.
 - S/N D001H-2629** ⇒
Indicates the first serial number affected.
 - S/N D001H-1553 ⇔ S/N D001H-3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- ⇒ **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** ⇒
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

- ⇒ **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ⇒
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00 ⇔ D/B 4/00**
Indicates a range of production dates of the item affected.


Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS

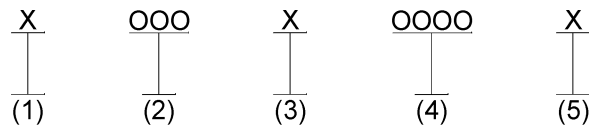

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957 and 1980. The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

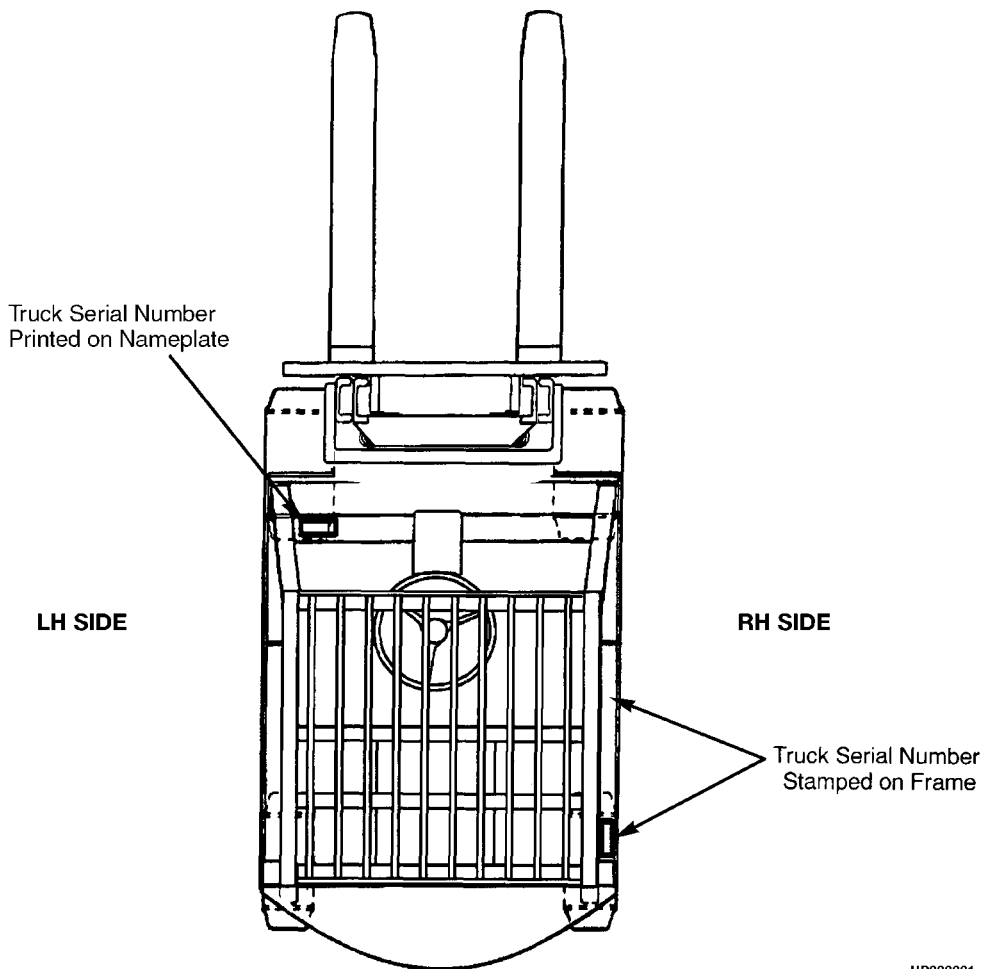

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com