

PARTS MANUAL

**R30XM2, R30XMA2,
R30XMF2
(G118)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ELECTRICAL SYSTEM
3	DRIVE UNIT
4	STEERING SYSTEM
5	HYDRAULIC SYSTEM
6	MAST-THREE STAGE FULL FREE-LIFT
7	OPTIONS
8	NUMERICAL INDEX

This Parts Manual is divided into 8 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
B	
BATTERY CONNECTOR ASSEMBLY	2-8
BATTERY DISCONNECT	2-10
BATTERY TRAY AND PULLER	7-6
C	
CASTER	1-24
CHAINS, PINS, AND ANCHORS	
THREE STAGE FULL FREE-LIFT	6-16
COLD STORAGE HEATER PLATE	7-24
CONNECTING AND TAKE-UP HOSES	
THREE STAGE FULL FREE-LIFT	6-2
CONSOLE ELECTRICAL ARRANGEMENT	2-4
CONTACTOR PANEL ASSEMBLY	
24/36 VOLT 'E'	2-12
24/36 VOLT 'EE'	2-14
CONTROL COMPARTMENT	1-6
D	
DECAL AND PLATE LOCATION	1-8
DRIVE MOTOR	
⇒ S/N PENDING PER ECN 83579-08	3-8
S/N PENDING PER ECN 83579-08⇒	3-12
DRIVE UNIT	3-4
DRIVE UNIT INSTALLATION	3-2
E	
ELECTRIC BRAKE	3-14
ELECTRICAL ARRANGEMENT	2-2
F	
FIXED CONSOLE	7-10
FORKS	1-26
FULL BODY FAN INSTALLATION	7-8
FURNITURE OVERHEAD GUARD WELDMENT	7-22
G	
GUIDE ROLLER ASSEMBLY	7-4
H	
HEIGHT ENCODER ASSEMBLY	
THREE STAGE FULL FREE-LIFT	6-8
HOIST CONTACTOR	
24/36 VOLT 'E'	2-18
24/36 VOLT 'EE'	2-20
HOODS AND COVERS	1-2
HYDRAULIC ARRANGEMENT	5-2
HYDRAULIC PUMP ASSEMBLY	5-10
HYDRAULIC TANK ASSEMBLY	5-6

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
L	
LIFT MOTOR	5-8
LIGHT AND FAN ASSEMBLY	7-2
LOAD WHEEL	
SINGLE	1-20
TANDEM	1-22
LOWER COILED CABLE ASSEMBLY	
THREE STAGE FULL FREE-LIFT	6-4
M	
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	6-20
MAIN LIFT CYLINDER ARRANGEMENT	
THREE STAGE FULL FREE-LIFT	6-10
MAIN/TRACTION CONTACTOR	
24/36 VOLT 'E'	2-16
24/36 VOLT 'EE'	2-17
MULTI-FUNCTION CONTROL HANDLE	4-10
MULTI-FUNCTION CONTROL HANDLE ASSEMBLY	4-12
O	
OPERATOR PLATFORM	
CONTROLS	1-16
INTERFACE	1-14
STRUCTURE	1-10
OUTER, INTERMEDIATE, AND INNER MAST	
THREE STAGE FULL FREE-LIFT	6-12
P	
PALLET CLAMP ASSEMBLY	1-28
PIVOTING HANDRAIL	1-18
S	
STEER ASSEMBLY	
MULTI-TURN (MTS)	4-8
RETURN-TO-CENTER (RTC)	4-6
STEERING CHAIN AND SENSOR	4-4
STEERING GEAR AND MOTOR	4-2
U	
UPPER COILED CABLE ASSEMBLY	6-6
W	
WIRE DRIVER ASSEMBLY	7-14
WIRE GUARD ASSEMBLY	7-16
WIRE GUIDANCE SENSORS	7-12
WIRE TAKE-UP	
'EE' AND COLD STORAGE	7-18

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type GS	Gasoline-Powered Safety Rating
		UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com