

PARTS MANUAL


**RACKLOADER
R30CH**

(A186)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

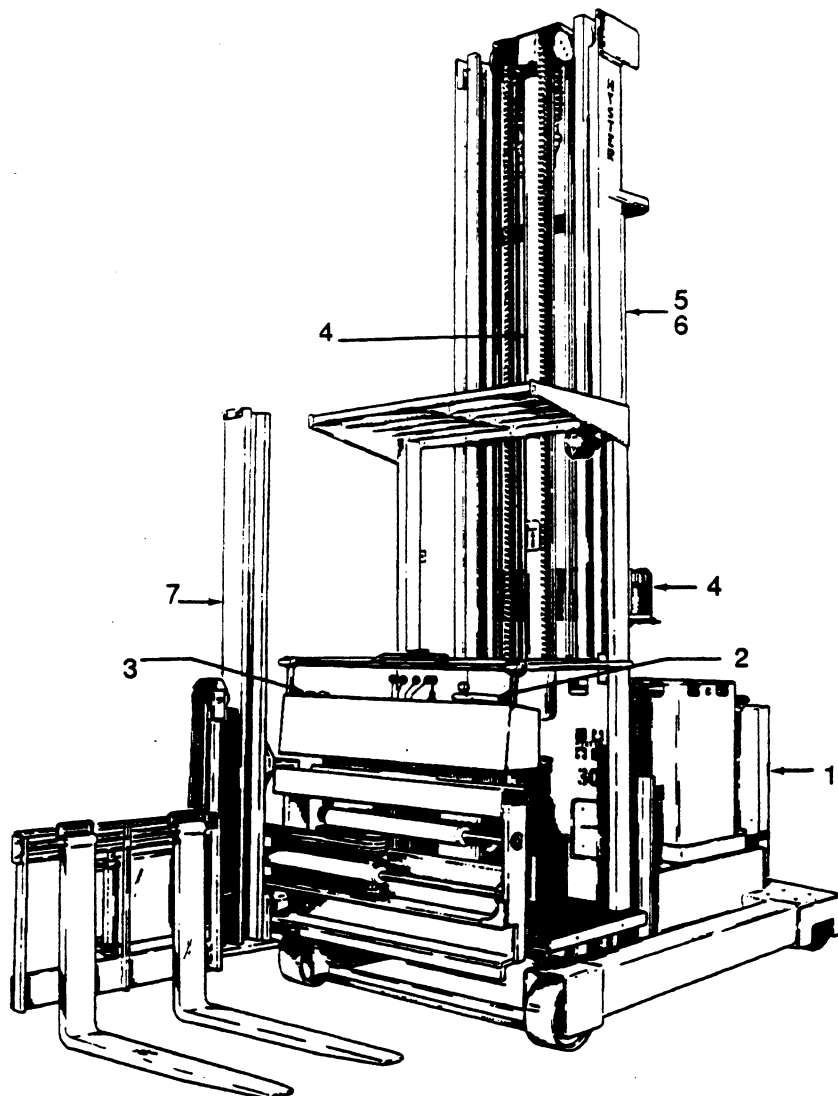

REF	SECTION	PAGE
1	Frame And Body	1
2	Steering	17
3	Electrical	29
4	Hydraulic	53
5	Mast-Two-Stage	75
6	Mast-Three-Stage	85
7	Attachments	101
8	Optional Equipment	117
9	Index-Numerical	127

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
A	
ACTUATOR	Page 115
ATTACHMENT PUMP LAST USED ON S/N A186D-1613	Page 69
B	
BASE ARM	Page 10
BRAKE LAST USED ON S/N A186U-1649	Page 12
BRAKE FIRST USED ON S/N A186D-1559	Page 14
BRAKE FIRST USED ON S/N A186U-1650 USED ON S/N A186D-1501 TO A186D-1558	Page 13
C	
CARRIAGE FREE-LIFT	Page 104
CARRIAGE	Page 80
CARRIAGE	Page 98
CASTER	Page 16
CONSOLE-OPERATOR	Page 44
CONTACTOR-BATTERY	Page 40
CONTACTOR-FORWARD AND REVERSE	Page 38

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
C (CONTINUED)	
CONTACTOR-PUMP	Page 41
CONTROL MODULE FIRST USED ON S/N A186D-1724	Page 50
CONTROL MODULE LAST USED ON S/N A186D-1723	Page 48
CONTROL PANEL	Page 34
CONTROL VALVE	Page 62
D	
DRIVER-WIRE	Page 124
E	
ELECTRIC PANEL	Page 32
ELECTRICAL CARRIAGE	Page 46
ELECTRICAL	Page 30
F	
FORK AND PIVOT	Page 106
FRAME AND COVERS	Page 8
FRAME-TRAVERSE AND BASE	Page 102
FREE LIFT CYLINDER LAST USED ON S/N A538D-1536	Page 94
FREE-LIFT CYLINDER FIRST USED ON S/N A538D-1537	Page 95

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
G	
GUIDANCE-WIRE	Page 122
H	
HYDRAULIC ATTACHMENTS FIRST USED ON S/N A186U-1618	Page 66
HYDRAULIC ATTACHMENTS LAST USED ON S/N A186U-1617	Page 64
HYDRAULIC MOTOR FIRST USED ON S/N A186D-1614	Page 72
HYDRAULIC MOTOR LAST USED ON S/N A186D-1613	Page 71
HYDRAULIC TANK	Page 60
HYDRAULIC FIRST USED ON S/N 186D-1614	Page 58
HYDRAULIC FIRST USED ON S/N 186U-1650 USED ON S/N A186D-1501 TO 186D-1613	Page 56
HYDRAULIC LAST USED ON S/N A186U-1649	Page 54
L	
LABELS AND PAINT LAST USED ON S/N A186D-1797	Page 2
LABELS AND PAINT FIRST USED ON S/N A186D-1798	Page 4
LIFT CYLINDER FIRST USED ON S/N A537D-1604	Page 83
LIFT CYLINDER LAST USED ON S/N A537D-1603	Page 82
LIFT LINKAGE	Page 78

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
L Continued	
LIFT PUMP AND ATTACHMENT FIRST USED ON S/N A186D-1614	Page 70
LIFT PUMP LAST USED ON A186D-1613	Page 68
LIFT-FREE-LIFT	Page 93
M	
MAIN LIFT CYLINDER	Page 114
MAIN CYLINDER FIRST USED ON S/N A538D-1537	Page 97
MAIN CYLINDER LAST USED ON S/N A538D-1536	Page 96
MAIN LIFT	Page 92
MASTER DRIVE UNIT	Page 6
MAST INNER	Page 90
MAST INTERMEDIATE	Page 88
MAST	Page 76
MAST OUTER	Page 86
P	
PANEL-ACCELERATOR	Page 42
R	
ROLLER-GUIDE	Page 121

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE NO.</u>
S	
SCR PANEL	Page 36
SELECTOR VALVE	Page 73
SIDE-SHIFT CYLINDER	Page 112
SOLENOID VALVE	Page 61
SPEED REDUCER FIRST USED ON S/N A186D-1765	Page 26
SPEED REDUCER USED ON ALL TRUCKS WITH S/N A186U USED ON S/N A186D-1501 TO A186D-1764	Page 24
STEERING COLUMN	Page 20
STEERING MOTOR FIRST USED ON S/N A186D-1825N	Page 22
STEERING MOTOR LAST USED ON S/N A186D-1824N	Page 21
STEERING	Page 18
STROBE LIGHT FIRST USED ON S/N A186D-1727	Page 120
STROBE LIGHT LAST USED ON S/N A186D-1726	Page 119
T	
TIRE AND WHEEL	Page 118
TRACTION MOTOR 36/48 VOLT	Page 15
TRAVERSE CYLINDER FIRST USED ON S/N A186D-1805	Page 110
TRAVERSE CYLINDER FIRST USED ON S/N A186U-1618 USED ON S/N A186D-1501 TO A186D-1804	Page 109
TRAVERSE CYLINDER LAST USED ON S/N A186U-1617	Page 108

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com