

PARTS MANUAL

 
**SPACESAVER
S40-50-60XL**

(A187)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

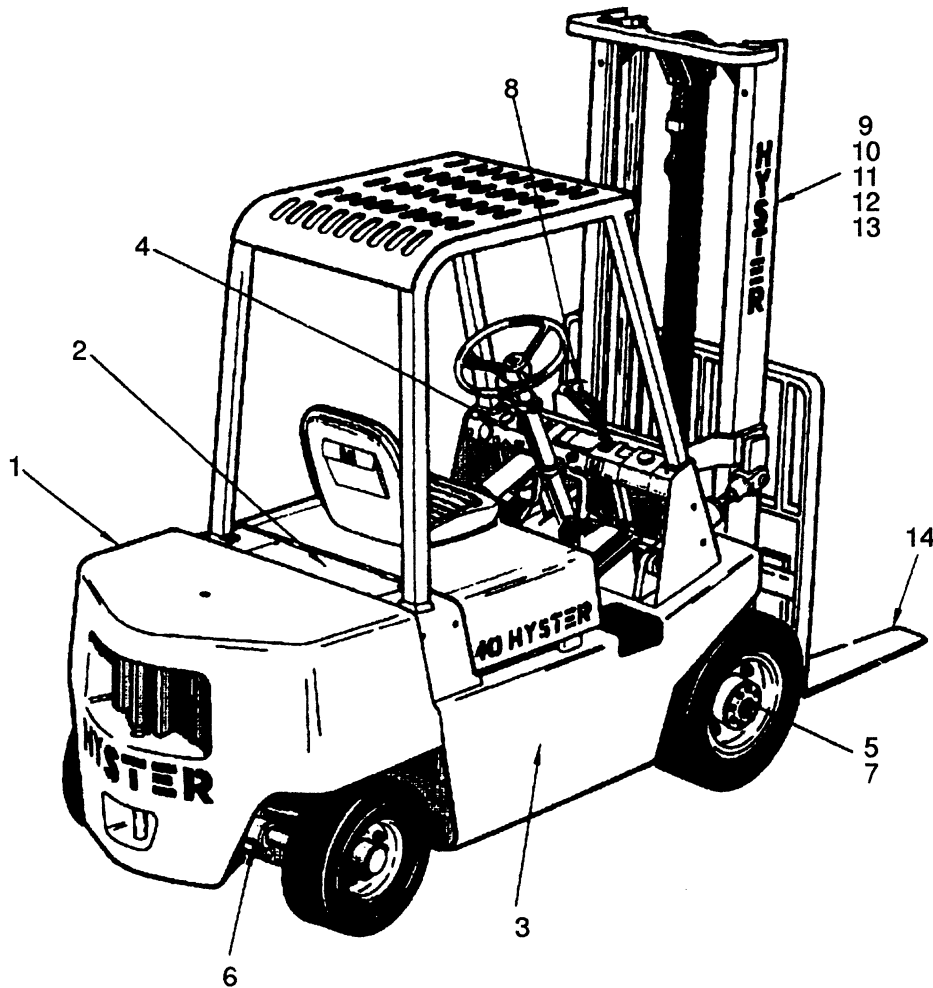

REF	SECTION	PAGE
1	FRAME	Page 3
2	ENGINE	Page 15
3	FUEL SYSTEM	Page 59
4	ELECTRICAL SYSTEM	Page 95
5	TRANSMISSION	Page 131
6	STEERING	Page 151
7	BRAKE	Page 159
8	HYDRAULIC SYSTEM	Page 169
9	VISTA TWO-STAGE LIMITED FREE LIFT MAST (2-STG LFL)	Page 205
10	VISTA THREE-STAGE FULL FREE LIFT MAST (3-STG FFL)	Page 215
11	VISTA TWO-STAGE FULL FREE LIFT MAST (2-STG FFL)	Page 239
12	VISTA FOUR-STAGE FULL FREE LIFT MAST 4-STG FFL (A515)	Page 255
13	VISTA FOUR-STAGE FULL FREE LIFT MAST 4-STG FFL (B515)	Page 267
14	OPTIONAL EQUIPMENT	Page 279
15	NUMERICAL INDEX	Page 317

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR FILTER (Figure 46)	Page 80
ALTERNATOR (Figure 66) GASOLINE & LPG M4-121G	Page 114
ALTERNATOR (Figure 67) DIESEL 2.4L	Page 115
ALTERNATOR (Figure 68) DIESEL 2.4L, GAS & LPG M4-121G: TYPES GS, LPS, & DS LAST USED ON S/N A187V-7079	Page 116
ALTERNATOR (Figure 69) DIESEL 2.4L, GAS & LPG M4-121G: TYPES GS, LPS, & DS FIRST USED ON S/N A187V-7080	Page 118
ALTERNATOR (Figure 70) GASOLINE & LPG 4-153	Page 120
ALTERNATOR (Figure 71) GASOLINE & LPG 4-153 OPTIONAL	Page 122
ALTERNATOR (Figure 72) TYPES GS & LPS 4-153	Page 124
B	
BRAKE (Figure 92)	Page 164
BRAKE HYDRAULICS (Figure 90)	Page 160
BRAKE PEDAL & LINKAGE (Figure 91)	Page 162
C	
CAMSHAFT & VALVES (Figure 15) DIESEL 2.4L	Page 27
CAMSHAFT/VALVES (Figure 27) GASOLINE & LPG M4-121G	Page 46
CARBURETOR (Figure 39) GASOLINE M4-121G	Page 68
CARBURETOR (Figure 40) LPG M4-121G	Page 70
CARBURETOR (Figure 41) GASOLINE 4-153	Page 72
CARBURETOR (Figure 42) LPG 4-153	Page 74
CARRIAGE (Figure 117) 2-STG LFL	Page 214
CARRIAGE (Figure 127) 3-STG FFL	Page 236
CARRIAGE (Figure 135) 2-STG FFL	Page 254
CARRIAGE (Figure 142) 4-STG FFL (A515)	Page 266
CARRIAGE (Figure 149) 4-STG FFL (B515)	Page 278
CHOKE CONTROL (Figure 43) GASOLINE 4-153	Page 76
CONTROL VALVE (Figure 108) TWO FUNCTION	Page 194

TABLE OF CONTENTS

DESCRIPTION	PAGE
CONTROL VALVE (Figure 110) THREE FUNCTION	Page 198
CONTROL VALVE (Figure 112) FOUR FUNCTION	Page 202
CONTROL VALVE (Figure 83) FORWARD/REVERSE SHIFT LEVER	Page 146
CONTROL VALVE (Figure 84) MONOTROL PEDAL	Page 148
COOLING (Figure 11) DIESEL 2.4L	Page 20
COOLING (Figure 22) GASOLINE & LPG M4-121G	Page 36
COOLING (Figure 31) GASOLINE & LPG 4-153	Page 50
COUNTERWEIGHT (Figure 4)	Page 8
CRANKCASE & OIL PAN (Figure 14) DIESEL 2.4L	Page 26
CRANKCASE/OIL PAN (Figure 26) GASOLINE & LPG M4-121G	Page 44
CRANKSHAFT/PISTON/FLYWHEEL (Figure 16) DIESEL 2.4L	Page 28
CRANKSHAFT/PISTON/FLYWHEEL (Figure 25) GASOLINE LPG M4-121G	Page 42
CYLINDER HEAD (Figure 13) DIESEL 2.4L	Page 24
CYLINDER HEAD (Figure 24) GASOLINE & LPG M4-121G	Page 40
CYLINDER HEAD (Figure 33) GASOLINE & LPG 4-153	Page 56
CYLINDER BLOCK (Figure 12) DIESEL 2.4L	Page 22
CYLINDER BLOCK (Figure 23) GASOLINE & LPG M4-121G	Page 38
CYLINDER BLOCK (Figure 32) GASOLINE & LPG 4-153	Page 52
D	
DIFFERENTIAL (Figure 82)	Page 144
DISTRIBUTOR (Figure 64) HIGH ENERGY IGNITION M4-121	Page 112
DISTRIBUTOR (Figure 65) 4-153	Page 113
DRIVE AXLE (Figure 85)	Page 150
E	
ELECTRICAL SYSTEM (Figure 57) DIESEL 2.4L	Page 98
ELECTRICAL SYSTEM (Figure 56) GASOLINE & LPG M4-121G	Page 96
ELECTRICAL SYSTEM (Figure 58) GASOLINE & LPG 4-153	Page 100

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
ELECTRICAL SYSTEM (Figure 59) GASOLINE & LPG M4-121G GS & LPS	Page 102
ELECTRICAL SYSTEM (Figure 60) DIESEL TYPE DS	Page 104
ELECTRICAL SYSTEM (Figure 61) GASOLINE & LPG 4-153 GS & LPS	Page 106
ENGINE MOUNTS (Figure 8) GASOLINE & LPG M4-121G, DIESEL 2.4L	Page 16
ENGINE MOUNTS (Figure 9) GASOLINE & LPG 4-153	Page 17
EXHAUST (Figure 10)	Page 18
F	
FIRE EXTINGUISHER (Figure 165)	Page 315
FLOORPLATES (Figure 2)	Page 5
FLOW VALVE (Figure 105)	Page 189
FLYWHEEL AND PUMP DRIVE (Figure 79) GASOLINE & LPG 4-153	Page 135
FORK (Figure 150)	Page 280
FORWARD/REVERSE LINKAGE (Figure 76) MECHANICAL	Page 132
FORWARD/REVERSE CLUTCH (Figure 81)	Page 140
FORWARD/REVERSE SWITCH (Figure 77) ELECTRICAL	Page 133
FREE-LIFT CYLINDER (Figure 134) 2-STG FFL	Page 252
FREE-LIFT CYLINDER (Figure 141) 4-STG FFL (A515)	Page 265
FREE-LIFT CYLINDER (Figure 148) 4-STG FFL (B515)	Page 277
FREE-LIFT (Figure 123) 3-STG FFL 362000 SERIES MAST	Page 226
FREE-LIFT (Figure 124) 3-STG FFL 367000, 386000, 388000 and 1311000 SERIES MASTS	Page 228
FREE-LIFT (Figure 132) 2-STG FFL	Page 248
FREE-LIFT (Figure 139) 4-STG FFL (A515)	Page 262
FREE-LIFT (Figure 146) 4-STG FFL (B515)	Page 274
FUEL (Figure 35) LPG M4-121G LAST USED ON S/N A187V-5626	Page 60
FUEL (Figure 36) LPG M4-121G FIRST USED ON S/N A187V-5627	Page 62
FUEL (Figure 37) LPG 4-153	Page 64

TABLE OF CONTENTS

DESCRIPTION	PAGE
FUEL FILTER (Figure 51) DIESEL 2.4L	Page 87
FUEL INJECTION (Figure 47) DIESEL 2.4L	Page 82
FUEL INTAKE (Figure 38) GASOLINE & DIESEL	Page 66
FUEL PUMP (Figure 45) GASOLINE M4-121G	Page 78
G	
GOVERNOR (Figure 44) GASOLINE & LPG M4-121G	Page 77
H	
HAND PUMP (Figure 87)	Page 154
HEADER HOSE (Figure 154) 337000 SERIES MASTS 2-STG LFL	Page 286
HEADER HOSE (Figure 155) 371000 SERIES MASTS 2-STG LFL	Page 288
HEADER HOSE (Figure 156) 362000, 367000 & 386000 SERIES MASTS 3-STG FFL	Page 290
HEADER HOSE (Figure 157) 1311000 SERIES MAST 3-STG FFL	Page 294
HEADER HOSE (Figure 158) 362000, 367000 & 386000 SERIES MASTS 2-STG FFL	Page 298
HEADER HOSE (Figure 159) 1311000 SERIES MASTS 2-STG FFL	Page 302
HEADER HOSE (Figure 160) (4-STG FFL)	Page 306
HOOD (Figure 3)	Page 6
HYDRAULIC (Figure 100) GASOLINE & LPG M4-121G FIRST USED ON S/N A187V-9629	Page 180
HYDRAULIC (Figure 101) GASOLINE & LPG 4-153 LAST USED ON S/N A187V-9628	Page 182
HYDRAULIC (Figure 102) GASOLINE & LPG 4-153 FIRST USED ON S/N A187V-9629	Page 184
HYDRAULIC (Figure 95) DIESEL 2.4L LAST USED ON S/N A187V-5938	Page 170
HYDRAULIC (Figure 96) DIESEL 2.4L USED ON S/N A187V-5939 TO A187V-9628	Page 172
HYDRAULIC (Figure 97) DIESEL 2.4L FIRST USED ON S/N A187V-9629	Page 174

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
HYDRAULIC (Figure 98) GASOLINE & LPG M4-121G LAST USED ON S/N A187V-5938	Page 176
HYDRAULIC (Figure 99) GASOLINE & LPG M4-121G USED ON S/N A187V-5939 TO A187V-9628	Page 178
HYDRAULIC PUMP (Figure 103) GASOLINE & LPG M4-121G, DIESEL 2.4L	Page 186
HYDRAULIC PUMP (Figure 104) GASOLINE & LPG 4-153	Page 188
I	
INNER AND NUMBER THREE MAST (Figure 137) 4-STG FFL (A515)	Page 258
INNER AND NUMBER THREE MAST (Figure 144) 4-STG FFL (B515)	Page 270
INNER MAST (Figure 114) 2-STG LFL	Page 208
INNER MAST (Figure 120) 3-STG FFL	Page 220
INNER MAST (Figure 129) 2-STG FFL	Page 242
INSTRUMENT PANEL (Figure 62)	Page 108
INSTRUMENT PANEL (Figure 63) TYPES GS, LPS & DS	Page 110
INTERMEDIATE MAST (Figure 119) 3-STG FFL	Page 218
L	
LABELS & PAINT (Figure 7)	Page 12
LIFT CYLINDER (Figure 116) 2-STG LFL	Page 212
LIFT CYLINDER (Figure 125) 3-STG FFL MAIN	Page 232
LIFT CYLINDER (Figure 126) 3-STG FFL FREE-LIFT	Page 234
LIFT CYLINDER (Figure 133) MAIN 2-STG FFL	Page 250
LIFT (Figure 115) 2-STG LFL	Page 210
LIGHTS (Figure 161) U.S.	Page 308
LOAD BACKREST EXTENSION (Figure 5)	Page 9
LOCK-OFF FILTER (Figure 48) LPG	Page 84
LPG CONVERTER (Figure 49) PRODUCTION ASSEMBLY	Page 85
LPG CONVERTER (Figure 50) POST-PRODUCTION CONVERSION	Page 86

TABLE OF CONTENTS

DESCRIPTION	PAGE
M	
MAIN LIFT CYLINDER (Figure 140) 4-STG FFL (A515)	Page 264
MAIN LIFT CYLINDER (Figure 147) 4-STG FFL (B515)	Page 276
MAIN LIFT (Figure 121) 3-STG FFL 362000 SERIES MAST	Page 222
MAIN LIFT (Figure 122) 3-STG FFL 367000, 386000, 388000 and 1311000 SERIES MASTS	Page 224
MAIN LIFT (Figure 130) 2-STG FFL 337000 SERIES MAST	Page 244
MAIN LIFT (Figure 131) 2-STG FFL 367000 & 1311000 SERIES MASTS	Page 246
MAIN LIFT (Figure 138) 4-STG FFL (A515)	Page 260
MAIN LIFT (Figure 145) 4-STG FFL (B515)	Page 272
MANIFOLD (Figure 18) DIESEL 2.4L	Page 31
MANIFOLD (Figure 28) GASOLINE & LPG M4-121G	Page 47
MASTER CYLINDER (Figure 94)	Page 168
MONOTROL PEDAL (Figure 55)	Page 94
O	
OIL FILTER (Figure 20) DIESEL 2.4L	Page 33
OIL PUMP (Figure 21) DIESEL 2.4L	Page 34
OIL PUMP (Figure 34) GASOLINE & LPG 4-153	Page 58
OIL PUMP/OIL FILTER (Figure 29) GASOLINE & LPG M4-121G	Page 48
OUTER AND NUMBER TWO MAST (Figure 136) 4-STG FFL (A515)	Page 256
OUTER AND NUMBER TWO MAST (Figure 143) 4-STG FFL (B515)	Page 268
OUTER MAST (Figure 113) 2-STG LFL	Page 206
OUTER MAST (Figure 118) 3-STG FFL	Page 216
OUTER MAST (Figure 128) 2-STG FFL	Page 240
P	
PARK BRAKE (Figure 93)	Page 166
PUBLICATIONS (Figure 1)	Page 1


TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
S	
SEAT (Figure 6)	Page 10
SIDESHIFT CARRIAGE (Figure 151)	Page 282
SIDESHIFT CYLINDER (Figure 152)	Page 284
SIDESHIFT CYLINDER (Figure 153)	Page 285
STARTER (Figure 73) GASOLINE & LPG M4-121G	Page 126
STARTER (Figure 74) DIESEL 2.4L	Page 127
STARTER (Figure 75) GASOLINE & LPG 4-153	Page 128
STEERING AXLE (Figure 88)	Page 156
STEERING CONTROL (Figure 86)	Page 152
STEERING CYLINDER (Figure 89)	Page 158
STROBE LIGHT (Figure 162) MEDIUM INTENSITY	Page 310
STROBE LIGHT (Figure 163) HIGH INTENSITY	Page 312
T	
THROTTLE LINKAGE (Figure 52) FORWARD/REVERSE SHIFT LEVER LAST USED ON S/N A187V-3674	Page 88
THROTTLE LINKAGE (Figure 53) FORWARD/REVERSE SHIFT LEVER FIRST USED ON S/N A187V-3675	Page 90
THROTTLE LINKAGE (Figure 54) MONOTROL PEDAL	Page 92
TILT CYLINDER (Figure 106)	Page 190
TIMING GEAR (Figure 17) DIESEL 2.4L	Page 30
TIRE & WHEEL (Figure 164)	Page 314
TORQUE CONVERTER (Figure 78)	Page 134
TRANSMISSION (Figure 80)	Page 136
V	
VALVE/ATTACHING PARTS (Figure 107) TWO FUNCTION	Page 192
VALVE/ATTACHING PARTS (Figure 109) THREE FUNCTION	Page 196
VALVE/ATTACHING PARTS (Figure 111) FOUR FUNCTION	Page 200
W	
WATER PUMP (Figure 19) DIESEL 2.4L	Page 32
WATER PUMP (Figure 30) GASOLINE LPG M4-121G	Page 49

HOW TO USE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.


The different constructions are indicated by keys, symbols and footnotes.



SERIAL CODE C187

TABLE OF CONTENTS


DESCRIPTION	PAGE
CARRIAGE (Figure 107) VISTA 2-STG LFL	Page 192
CARRIAGE (Figure 136) VISTA 3-STG FFL	
CARRIAGE (Figure 166) VISTA 2-STG FFL	
CARRIAGE (Figure 197) VISTA 4-STG FFL	
CARRIAGE (Figure 203) SIDE-SHIFT	
CARRIAGE (Figure 204) SIDE-SHIFT	
CLUTCH-FORWARD AND	



SERIAL CODE C187


INDEX—NUMERICAL


PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO
126	51 28	90	13	97	19	33	20	129	14
				99	18	35	10	131	11
				101	19	36	16	15212	2



SERIAL CODE C108


ILLUSTRATED CONTENTS

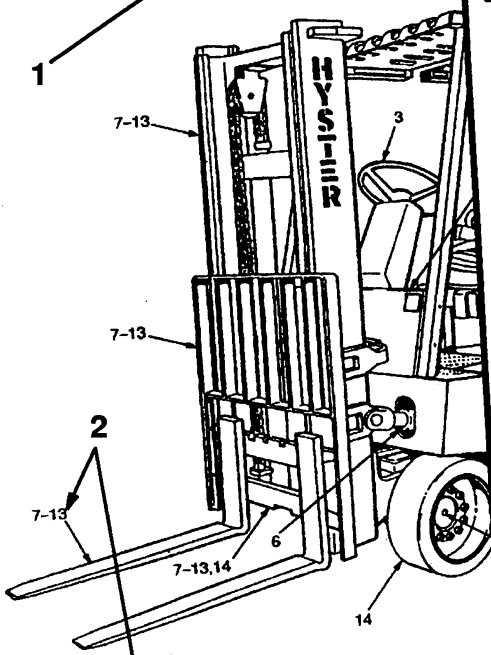



SERIAL CODE C108

CARRIAGE (Figure 123)
LAST USED ON S/N PENDING PER ECN 98765

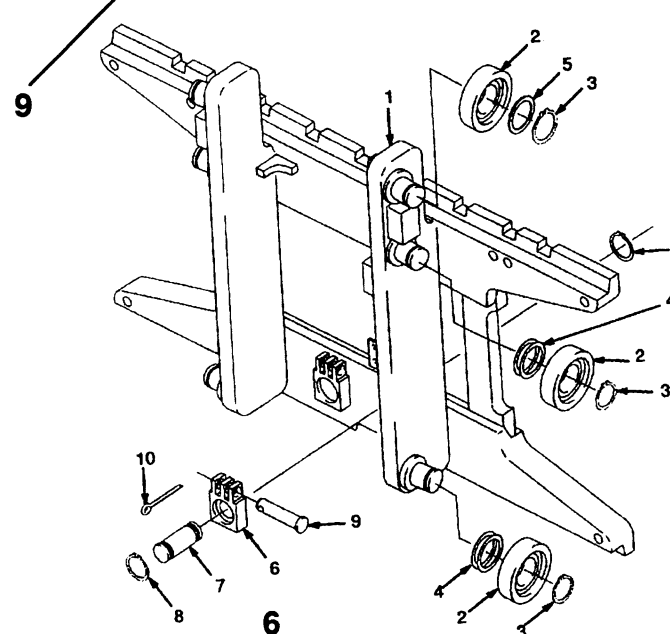

REF	DIVISION
1	Frame
2	Drive Axle
3	Steering
4	Brake/Accelerator
5	Electrical
6	Hydraulic
7	Mast-Vista Two-Stage Limited Free Lift
8	Mast-Global Two-Stage Limited Free Lift
9	Mast-Vista Three-Stage Full Free Lift
10	Mast-Global Three-Stage Full Free Lift
11	Mast-Vista Two-Stage Full Free Lift
12	Mast-Global Two-Stage Full Free Lift
13	Mast-Vista Four-Stage Full Free Lift
14	Optional Equipment

KEY	QTY	REF	PART NO.	NAME OF PART
A: E40-50XL				
B: E60XL				
		1	1371658	Carriage
		1	1371659	Carriage
		1	1359331	Carriage
		1	1359332	Carriage
		2	1333398	Load Roller ("A" Standard)
		2	1333399	Load Roller ("B" 0.76 mm)
		2	1337900	Load Roller ("C" 1.52 mm)
		3	58901	Snap Ring

REF	PART NO.	NAME OF PART
4	129387	Shim
5	366115	Spacer
6	1369345	Chain Anch
6	1369344	Chain Anch
7	317735	Pin
8	131358	Snap Ring
9	323161	Pin
10	15200	Cotter Pin

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the illustrated index page immediately behind the front cover. Choose the general area of reference most likely to include the part.
2. Find the page number for the reference number you choose and turn to that page. Use the division index to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Master Index immediately following the Illustrated Index.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the numerical index at the back of the manual to find the part number. Turn to the figure listed and locate the part as indicated by the reference number.

GENERAL:

 
- The assembly breakdowns include part numbers, description, quantities required, keys and footnotes to help in selecting the correct parts.
6. Keys are used to show effective serial numbers for two or more similar assemblies, RH and LH assembly parts, etc. select the appropriate key, "A", "B", "C" or "D" and the corresponding quantity column to find the required parts.
 7. Indented descriptions under "Name of Part" are used to indicate assemblies and sub-parts of assemblies. In the example (Item 7), *HEAD* is a sub-part of the major assembly *MOTOR* and *SET-SPRING* is one of several sub-parts of the assembly *HEAD*.
 8. Quantities shown are for one assembly. Note that two assemblies are shown, but the quantities of the subparts are indicated as three and three. This means three per assembly.
 9. Engineering change notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local dealer for Hyster lift trucks for serial number information listed by ECN number.
 10. Additional fork lengths are available. Contact your dealer for Hyster lift trucks.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS



- (1) & (2) The first letter and three numbers indicates the truck model code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number series indicates the serial number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957 and 1980. The letters "I", "O", and "Q" will not be used.

 For pending serial numbers contact your local dealer for Hyster lift trucks.

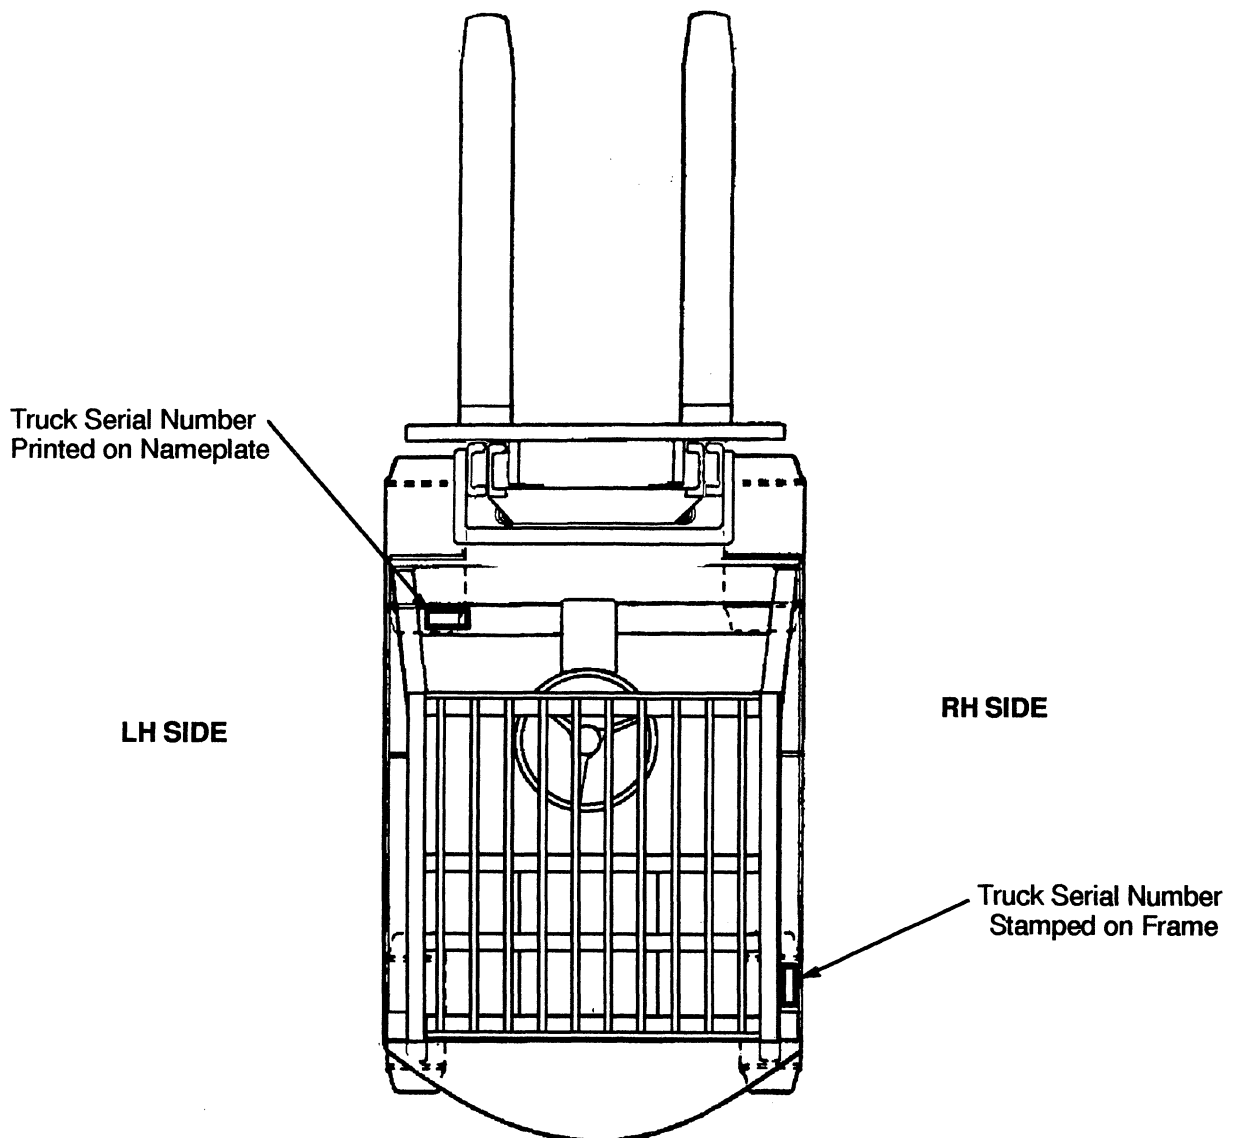


Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

IDENTIFICATION OF MASTS NUMBERS

LIFT EQUIPMENT IDENTIFICATION

 1. Mast group numbers and total lift heights are stamped on the right hand outer mast approximately four feet from the bottom of the fork. The group numbers include the inner and outer masts, lift cylinder, lift chain and bleeder hoses or pipes.
2. The carriage and tilt cylinder numbers are located as shown. Lift cylinder numbers are stamped on the cylinder shell near the bleeder screw or on the chain anchor. Fork part number, capacity rating, plant code letter and date of manufacture are stamped approximately six inches below the top RH side of forks. Always refer to these group and part numbers when ordering service parts.

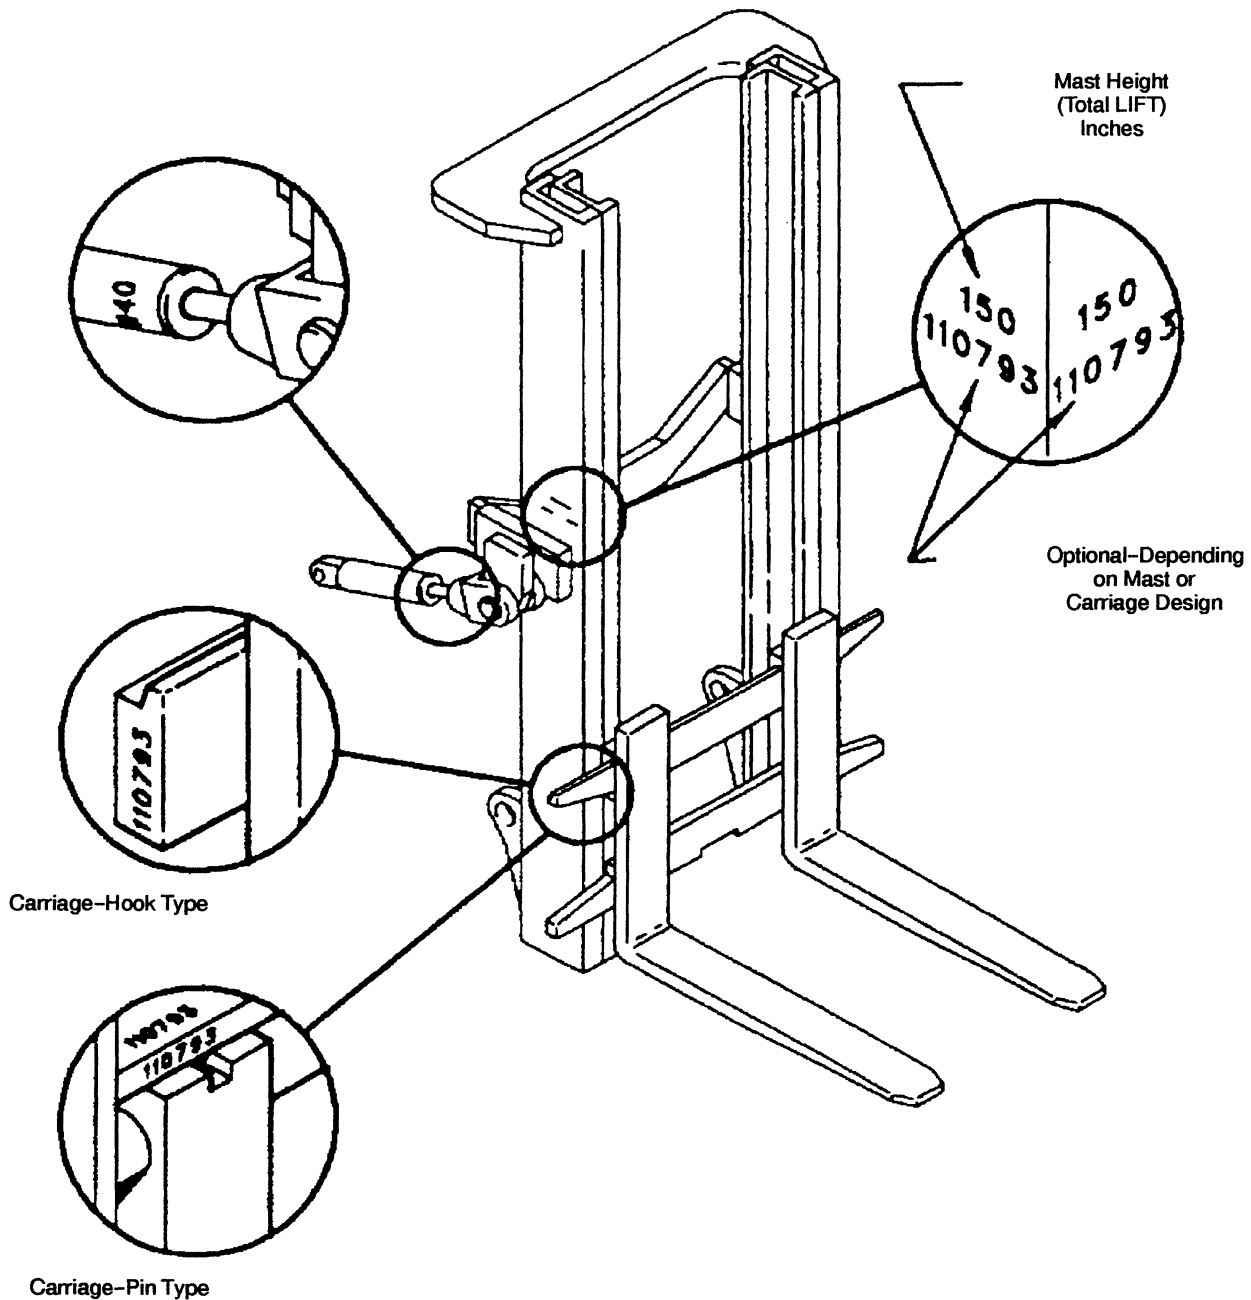

PUBLICATIONS (Figure 1)

Every new lift truck is provided with at least three publications. These publications are the PARTS MANUAL, the OPERATING MANUAL, and the section of the SERVICE MANUAL called Periodic Maintenance.

The OPERATING MANUAL must always be available on every lift truck. This manual has information that the operator must know for inspection and operation of the lift truck. The section Periodic Maintenance

has a recommended schedule of service intervals and the procedures for servicing the lift truck.

These manuals, other publications and programs are available from your Dealer for Hyster Lift Trucks to help you operate and maintain your lift truck professionally. See the list that follows for reference to items for lift trucks in this PARTS MANUAL.

PUBLICATION	HYSTER PART NUMBER
Operating Manuals	
English (U.S.)	897413
English (Non-U.S.)	897147
Spanish	853441
French	853428
German	853440
Dutch	853427
Swedish	853493
Danish	853617
Italian	853616
Portugese	853618
Service Manual (Complete)	599915
The Frame (100 SRM 254)	910461
The Isuzu C240 Engine (600 SRM 70)	899768
The Mazda M4-121G Engine (600 SRM 66)	899767
The GM Engine (600 SRM 3)	899766
The Rochester Carburetor (900 SRM 11)	910057
The Gasoline Carburetor (900 SRM 129)	910168
The LPG System (900 SRM 15)	899772
The Single-Speed Powershift Transmission - Description and Operation (1300 SRM 255)	899323
Repairs (1300 SRM 256)	899324
The Drive Axle (1400 SRM 85)	910171
The Steering System (1600 SRM 459)	897407
The Steering Control Unit (1600 SRM 257)	910458
The Steering Axle (1600 SRM 258)	910460
The Brake System (1800 SRM 458)	897405
The Brake System (1800 SRM 157)	910174
The Hydraulic System and Gear Pump Assembly (1900 SRM 130)	899780
The Hydraulic Pump Drive Assembly (1900 SRM 339)	897121
The Main Control Valve (2000 SRM 77)	899782
The Tilt Cylinders (2100 SRM 103)	910102
The Electrical System, Mazda (2200 SRM 132)	899791
The Electrical System, Isuzu (2200 SRM 134)	899792
Microprocessor Spark Timing System (2200 SRM 463)	897412
The Alternator (2200 SRM 2)	899784
The Starter (2200 SRM 106)	910107
The High Energy Ignition System (2200 SRM 107)	899788
Electrical Gauges, Meters and Senders (2200 SRM 143)	910110
Electrical Warning Devices (2200 SRM 144)	910111
Vista Masts - Description (4000 SRM 222)	899237
Vista Masts - Repair (4000 SRM 223)	910435

PUBLICATIONS

Service Manual (Continued)

Four-Stage Mast - Repair (4000 SRM 318)	897100
Lift Cylinders (4000 SRM 135)	910119
Periodic Maintenance (8000 SRM 259)	910757
Capacities and Specifications (8000 SRM 260)	910465
Diagrams (8000 SRM 462)	897411
Diagrams (8000 SRM 261)	910459
Inch (SAE) and Metric Fasteners (8000 SRM 231)	910442

Parts Manual	599864
---------------------------	--------

Operator Training Program

Operator Training Kit Complete	
Slide Format with Carry Case	852802
1/2" VHS Format with Carry Case	852800
"Safety is an Attitude" (1/2" VHS)	852690
"Safety Rules" Playing Cards	852695

Sold Alone Kit Catalog	852505
-------------------------------------	--------

Guide to Users of Industrial Lift Trucks	852930
---	--------

FRAME

COUNTERWEIGHT (Figure 4) Page 8

FLOORPLATES (Figure 2) Page 5

 
HOOD (Figure 3) Page 6

LABELS & PAINT (Figure 7) Page 12

LOAD BACKREST EXTENSION (Figure 5) Page 9

SEAT (Figure 6) Page 10

FLOORPLATES (Figure 2)

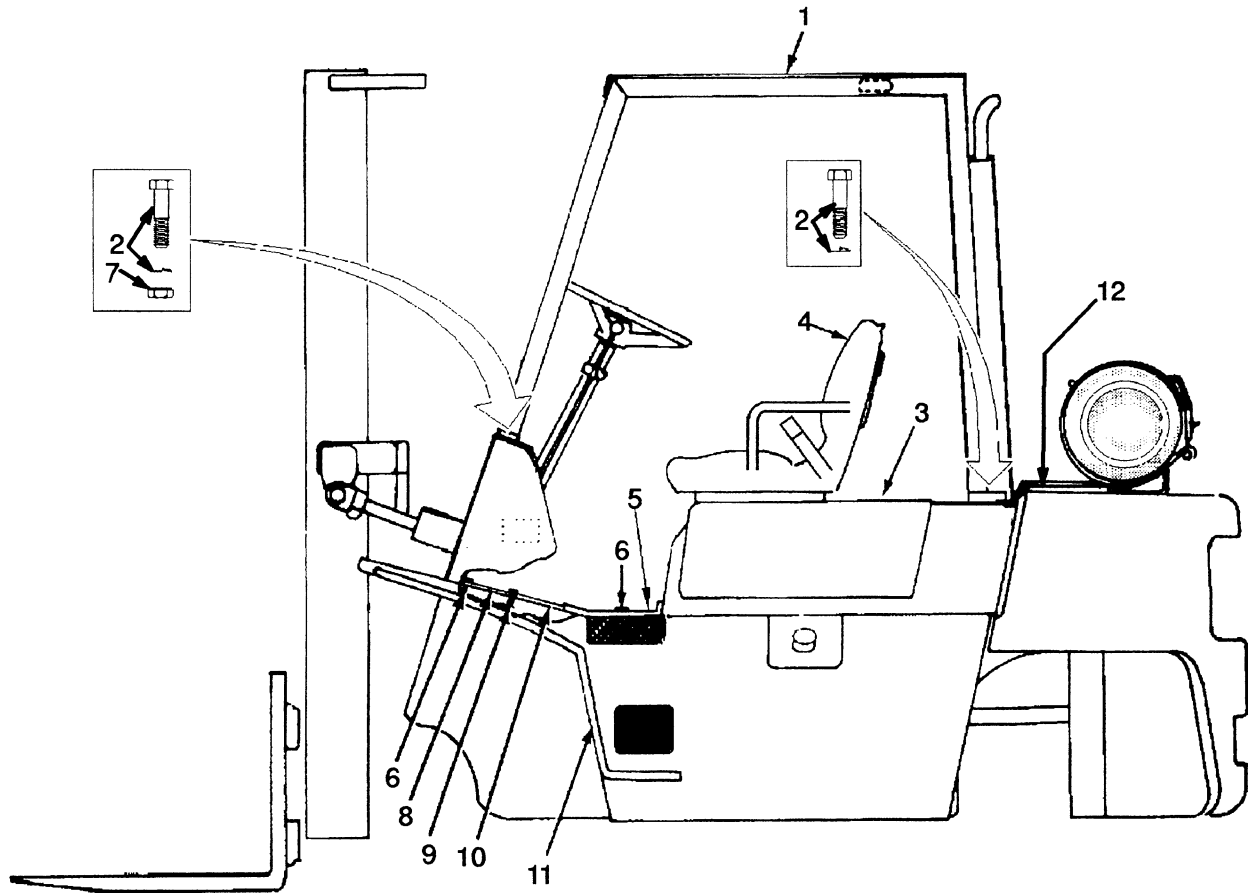

KEY

A: Gasoline & LPG M4-121G, Diesel 2.4L
 B: Gasoline & LPG 4-153

REF	PART NO.	NAME OF PART	QTY		REF	PART NO.	NAME OF PART	QTY	
			A	B				A	B
1	335571	Overhead Guard	1	1	9	152974	Rod End Pin	1	1
2	292528	Capscrew	4	4	9	15212	Cotter Pin	1	1
2	292683	Lockwasher	4	4	9	320159	Washer	1	1
3	Hood	1	1	9	78927	Spring	1	1
		See Figure 3			10	333059	Cover	1	1
4	Seat	1	1	11	342868	Fender (Wide Tread)	2	2
		See Figure 6			12	261165	Foam Tape		AR
5	364872	Floorplate	1	..	12	261164	Foam Tape		AR
5	377279	Floorplate		1	12	377281	Sound Liner		2
6	329067	Screw	4	4	12	377282	Sound Liner		1
7	216877	Nut	2	2	12	377286	Trim		2
8	371894	Floorplate (Monotrol Pedal)	1	1					

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com