

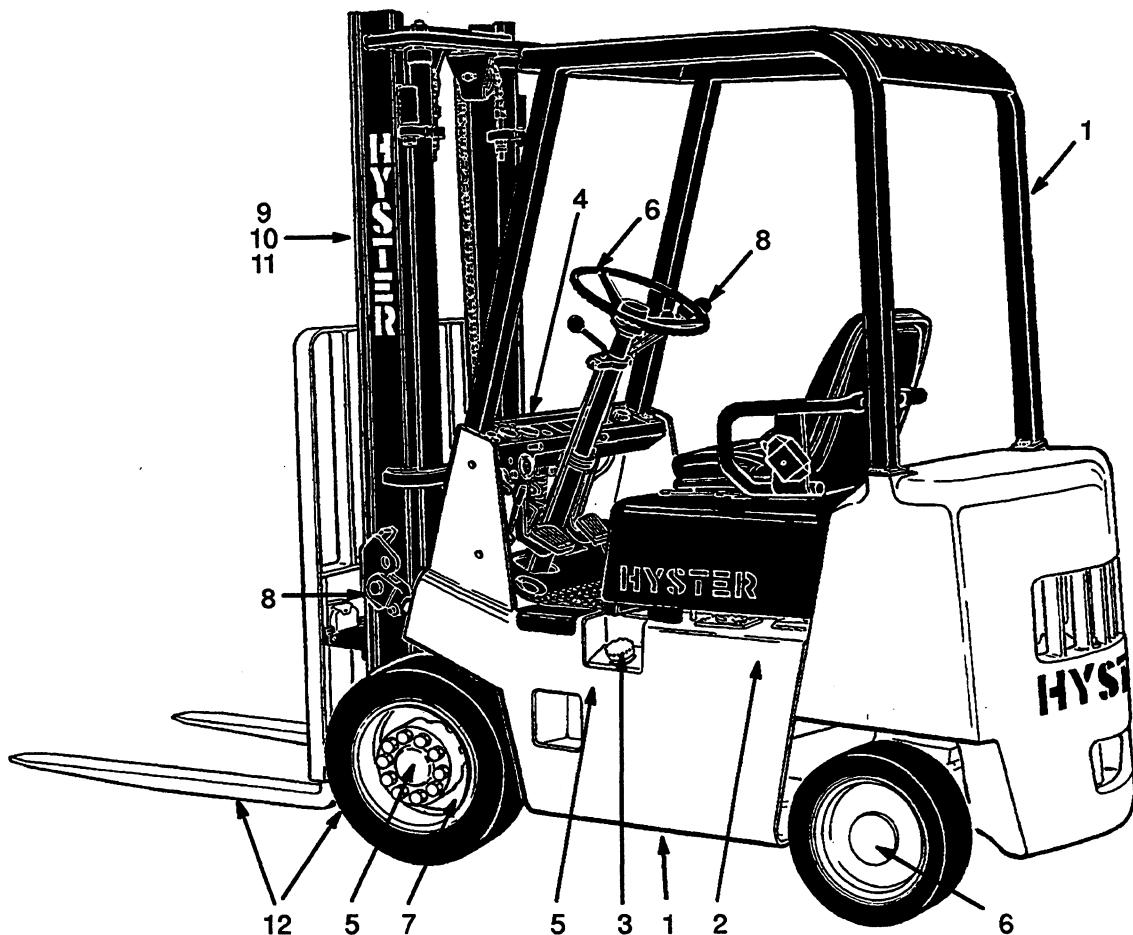
PARTS MANUAL

**SPACESAVER
S25-30-35XL
(S1.25-1.50-1.75XL)**

(B010)

CUSTOMER EDITION

HYSTER

INDEX-ILLUSTRATED

| REF | SECTION | PAGE |
|-----|----------------------------------|------|
| 1 | Frame And Body | 4 |
| 2 | Engine | 15 |
| 3 | Fuel | 49 |
| 4 | Electrical | 71 |
| 5 | Transmission | 95 |
| 6 | Steering | 123 |
| 7 | Brake | 131 |
| 8 | Hydraulic | 141 |
| 9 | Mast-Vista Two-Stage LFL | 163 |
| 10 | Mast-Vista Three Stage FFL | 173 |
| 11 | Mast-Two Stage FFL | 187 |
| 12 | Optional | 199 |
| 13 | Numerical Index | 221 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|--|-----------------|
| A | |
| AIR FILTER (Figure 38) | Page 60 |
| ALTERNATOR (Figure 61) TYPES GS, LPS & DS FIRST USED ON S/N B10B-5355 | Page 92 |
| ALTERNATOR (Figure 57) GASOLINE LPG LAST USED ON S/N B10B-6497 (GAS) LAST USED ON S/N B10B-6413 (LPG) | Page 87 |
| ALTERNATOR (Figure 58) GASOLINE LPG FIRST USED ON S/N B10B-6498 (GAS) FIRST USED ON S/N B10B-6414 (LPG) | Page 88 |
| ALTERNATOR (Figure 59) DIESEL | Page 89 |
| ALTERNATOR (Figure 60) TYPES GS, LPS & DS LAST USED ON S/N B10B-5354 | Page 90 |
| B | |
| BACKUP ALARM (Figure 135) | Page 220 |
| BRAKE (Figure 84) | Page 136 |
| BRAKE LINKAGE (Figure 82) | Page 132 |
| C | |
| CAMSHAFT & VALVES (Figure 18) DIESEL | Page 30 |
| CAMSHAFT & VALVES (Figure 27) GASOLINE LPG | Page 41 |
| CARBURETOR (Figure 35) GASOLINE | Page 56 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|---|-----------------|
| C (CONTINUED) | |
| CARBURETOR (Figure 33) LPG | Page 52 |
| CARRIAGE (Figure 103) | Page 171 |
| CARRIAGE (Figure 111) | Page 186 |
| CARRIAGE (Figure 118) | Page 198 |
| COOLING (Figure 13) | Page 20 |
| COUNTERWEIGHT (Figure 9) | Page 15 |
| CRANKCASE & OIL PAN (Figure 16) DIESEL | Page 26 |
| CRANKCASE & OIL PAN (Figure 28) GASOLINE LPG | Page 42 |
| CRANKSHAFT, PISTON & FLYWHEEL (Figure 26) GASOLINE LPG | Page 38 |
| CRANKSHAFT, PISTON & FLYWHEEL (Figure 17) DIESEL | Page 28 |
| CYLINDER BLOCK (Figure 14) DIESEL | Page 22 |
| CYLINDER BLOCK (Figure 24) GASOLINE LPG | Page 36 |
| CYLINDER HEAD (Figure 15) DIESEL | Page 24 |
| CYLINDER HEAD (Figure 25) GASOLINE LPG | Page 37 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|---|------------------------|
| D | |
| DIFFERENTIAL (Figure 69) LAST USED ON S/N B10B-3065 | Page 108 |
| DIFFERENTIAL (Figure 70) FIRST USED ON S/N B10B-3066 | Page 110 |
| DISTRIBUTOR (Figure 54) | Page 84 |
| DRIVE AXLE (Figure 71) LAST USED ON S/N B10B-3065 | Page 112 |
| DRIVE AXLE (Figure 72) FIRST USED ON S/N B10B-3066 | Page 114 |
| DRIVE TIRE & WHEEL (Figure 132) | Page 217 |
| E | |
| ELECTRICAL (Figure 48) GASOLINE LPG | Page 72 |
| ELECTRICAL (Figure 49) DIESEL | Page 74 |
| ELECTRICAL (Figure 50) TYPES GS AND LPS | Page 76 |
| ELECTRICAL (Figure 51) TYPE DS | Page 78 |
| ENGINE MOUNT (Figure 11) | Page 17 |
| EXHAUST (Figure 12) | Page 18 |
| F | |
| FIRE EXTINGUISHER (Figure 133) | Page 217 |
| FLOOR COWL & PLATES (Figure 4) | Page 8 |
| FORK (Figure 134) IDENTIFICATION BY PART NUMBER | Page 218 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|---|-----------------|
| F (CONTINUED) | |
| FORWARD & REVERSE CLUTCH (Figure 67) LAST USED ON S/N B10B-3065 | Page 104 |
| FORWARD & REVERSE CLUTCH (Figure 68) FIRST USED ON S/N B10B-3066 | Page 106 |
| FORWARD & REVERSE LINKAGE (Figure 62) | Page 96 |
| FORWARD & REVERSE SWITCH (Figure 63) | Page 97 |
| FREE LIFT (Figure 108) | Page 182 |
| FREE LIFT CYLINDER (Figure 110) | Page 185 |
| FREE LIFT CYLINDER (Figure 117) | Page 197 |
| FREE LIFT (Figure 115) | Page 194 |
| FUEL (Figure 32) LPG | Page 50 |
| FUEL (Figure 34) | Page 54 |
| FUEL FILTER (Figure 40) DIESEL | Page 64 |
| FUEL INJECTION (Figure 39) DIESEL | Page 62 |
| FUEL PUMP (Figure 37) GASOLINE | Page 59 |
| G | |
| GOVERNOR (Figure 36) GASOLINE LPG | Page 58 |

TABLE OF CONTENTS

| DESCRIPTION | PAGE NO. |
|--|-----------------|
| H | |
| HEADER HOSE (Figure 124) TWO-STAGE 332000, 323000 AND 351000 SERIES MAST | Page 204 |
| HEADER HOSE (Figure 125) TWO-STAGE 372000 AND 388000 SERIES MAST | Page 206 |
| HEADER HOSE (Figure 126) THREE-STAGE | Page 208 |
| HEADER HOSE (Figure 127) FREE-LIFT | Page 210 |
| HOOD & LINKAGE (Figure 5) | Page 10 |
| HYDRAULIC (Figure 88) DIESEL | Page 142 |
| HYDRAULIC (Figure 89) GASOLINE LPG | Page 144 |
| HYDRAULIC PUMP (Figure 90) | Page 146 |
| I | |
| INNER MAST (Figure 100) | Page 166 |
| INNER MAST (Figure 106) | Page 178 |
| INNER MAST (Figure 113) | Page 190 |
| INSTRUMENT PANEL (Figure 52) | Page 80 |
| INSTRUMENT PANEL (Figure 53) TYPES GS, LPS & DS | Page 82 |
| INTERMEDIATE MAST (Figure 105) | Page 176 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|--|-----------------|
| L | |
| LABELS & PAINT (Figure 3) | Page 6 |
| LIFT CYLINDER (Figure 102) | Page 170 |
| LIFT CYLINDER (Figure 109) MAIN | Page 184 |
| LIFT EYE (Figure 130) | Page 216 |
| LIFT (Figure 101) | Page 168 |
| LIGHTS (Figure 128) U.S. | Page 212 |
| LIGHTS (Figure 129) EUROPE | Page 214 |
| LOAD BACKREST EXTENSION (Figure 10) | Page 16 |
| LOCK-OFF FILTER (Figure 45) LPG | Page 69 |
| LPG CONVERTER (Figure 46) FIRST USED ON S/N B10B-809593 | Page 69 |
| LPG CONVERTER (Figure 47) FIRST USED ON S/N B10B-809594 | Page 70 |
| M | |
| MAIN LIFT (Figure 107) | Page 180 |
| MAIN LIFT (Figure 114) | Page 192 |
| MAIN LIFT CYLINDER (Figure 116) | Page 196 |
| MANIFOLD (Figure 20) DIESEL | Page 32 |
| MANIFOLD (Figure 29) | Page 44 |
| MASTER CYLINDER (Figure 87) | Page 140 |
| MONOTROL PEDAL (Figure 44) FIRST USED ON S/N B10B-4248 | Page 68 |

TABLE OF CONTENTS

| DESCRIPTION | PAGE NO. |
|---|-----------------|
| N | |
| NUMERICAL INDEX | Page 221 |
| O | |
| OIL FILTER (Figure 22) DIESEL | Page 34 |
| OIL PUMP & OIL FILTER (Figure 30) GASOLINE LPG | Page 45 |
| OIL PUMP (Figure 23) DIESEL | Page 35 |
| OUTER MAST (Figure 104) | Page 174 |
| OUTER MAST (Figure 112) | Page 188 |
| OUTER MAST (Figure 99) | Page 164 |
| P | |
| PARK BRAKE (Figure 85) | Page 138 |
| PARK BRAKE LEVER (Figure 86) | Page 139 |
| PEDAL & LINKAGE (Figure 83) | Page 134 |
| S | |
| SEAT (Figure 6) | Page 12 |
| SERVICE REPAIR KITS (Figure 2) | Page 3 |
| SIDE SHIFT CARRIAGE (Figure 119) | Page 200 |
| SIDE SHIFT CARRIAGE (Figure 120) | Page 201 |
| SIDE SHIFT CYLINDER (Figure 123) | Page 203 |
| SIDE SHIFT CYLINDER (Figure 121) | Page 202 |
| SIDE SHIFT CYLINDER (Figure 122) | Page 202 |
| STANDARD SEAT (Figure 7) | Page 13 |

TABLE OF CONTENTS

| <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|--|-----------------|
| S (CONTINUED) | |
| STARTER (Figure 55) GASOLINE LPG | Page 85 |
| STARTER (Figure 56) DIESEL | Page 86 |
| STEERING AXLE (Figure 77) | Page 125 |
| STEERING COLUMN (Figure 76) | Page 124 |
| STEERING CYLINDER (Figure 80) LAST USED ON S/N B10B-5701 | Page 128 |
| STEERING CYLINDER (Figure 81) FIRST USED ON S/N B10B-5702 | Page 129 |
| STEERING PUMP (Figure 78) LAST USED ON S/N B10B-5701 | Page 126 |
| STEERING PUMP (Figure 79) FIRST USED ON S/N B10B-5702 | Page 127 |
| STROBE LIGHT (Figure 131) | Page 216 |
| SUSPENSION SEAT (Figure 8) | Page 14 |
| T | |
| THROTTLE LINKAGE (Figure 41) LAST USED ON S/N B10B-4247 | Page 65 |
| THROTTLE LINKAGE (Figure 42) FORWARD/REVERSE SHIFT LEVER FIRST USED ON S/N B10B-4248 | Page 66 |
| THROTTLE LINKAGE (Figure 43) MONOTROL FIRST USED ON S/N B10B-4248 | Page 67 |
| TILT CYLINDER (Figure 98) | Page 160 |
| TIMING GEAR (Figure 19) DIESEL | Page 31 |
| TORQUE CONVERTER (Figure 64) | Page 98 |

TABLE OF CONTENTS

| DESCRIPTION | PAGE NO. |
|--|-----------------|
| T (CONTINUED) | |
| TRANSMISSION (Figure 65) LAST USED ON S/N B10B-3065 | Page 100 |
| TRANSMISSION (Figure 66) FIRST USED ON S/N B10B-3066 | Page 102 |
| V | |
| VALVE & ATTACHING PARTS (Figure 92) TWO-FUNCTION | Page 148 |
| VALVE & ATTACHING PARTS (Figure 94) THREE-FUNCTION | Page 152 |
| VALVE & ATTACHING PARTS (Figure 96) FOUR-FUNCTION | Page 156 |
| VALVE (Figure 73) TRANSMISSION FORWARD & REVERSE SHIFT LEVER LAST USED ON S/N B10B-3065 | Page 116 |
| VALVE (Figure 74) TRANSMISSION FORWARD & REVERSE SHIFT LEVER FIRST USED ON S/N B10B-3066 | Page 118 |
| VALVE (Figure 75) TRANSMISSION MONOTROL PEDAL FIRST USED ON S/N B10B-4248 | Page 120 |
| VALVE (Figure 93) TWO-FUNCTION | Page 150 |
| VALVE (Figure 95) THREE-FUNCTION | Page 154 |
| VALVE (Figure 97) FOUR-FUNCTION | Page 158 |
| VALVE-FLOW (Figure 91) | Page 147 |
| W | |
| WATER PUMP (Figure 21) DIESEL | Page 33 |
| WATER PUMP (Figure 31) GASOLINE LPG | Page 46 |

**Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us**

admin@servicemanualbit.com