

# **PARTS MANUAL**


**SPACESAVER  
S25XM, S30XM, S35XM,  
S40XMS**

**(C10)**

**CUSTOMER EDITION**

# ***HYSTER***

## ILLUSTRATED CONTENT

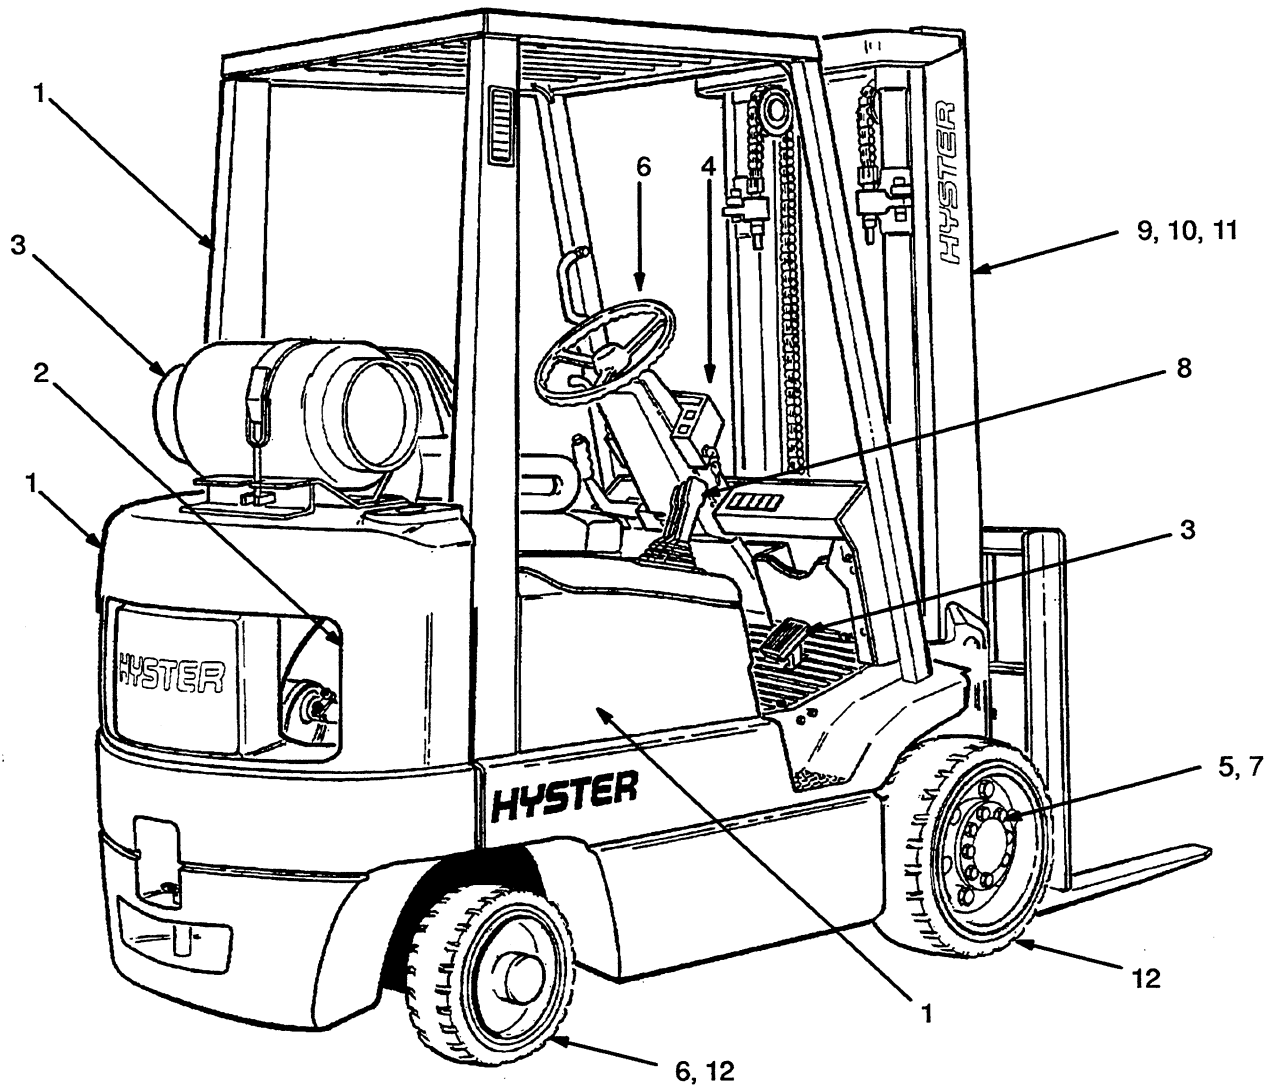

REF	SECTION	PAGE
1	FRAME .....	3
2	ENGINE .....	17
3	FUEL SYSTEM .....	39
4	ELECTRICAL SYSTEM .....	65
5	TRANSMISSION .....	93
6	STEERING SYSTEM .....	127
7	BRAKES .....	137
8	HYDRAULICS SYSTEM .....	149
9	TWO-STAGE LIMITED FREE LIFT MAST .....	179
10	THREE-STAGE FULL FREE LIFT MAST .....	199
11	TWO-STAGE FULL FREE LIFT MAST .....	225
12	OPTIONAL EQUIPMENT .....	249
13	NUMERICAL INDEX .....	269

**TABLE OF CONTENTS**

<b>DESCRIPTION</b>	<b>PAGE</b>
<b>A</b>	
AIR INTAKE AND FILTER (Figure 31) GASOLINE & LPG .....	Page 51
ALTERNATOR (Figure 58) GASOLINE & LPG STANDARD .....	Page 91
ALTERNATOR (Figure 59) TYPES: GS & LPS .....	Page 92
AUXILIARY FUNCTION TUBE (Figure 157) TWO-STAGE LFL .....	Page 264
AUXILIARY FUNCTION TUBE (Figure 158) TWO-STAGE FFL & THREE-STAGE FFL .....	Page 266
<b>B</b>	
BACK-UP ALARM (Figure 156) .....	Page 262
BATTERY (Figure 43) GASOLINE & LPG .....	Page 72
BRAKE ASSEMBLY (Figure 89) .....	Page 144
BRAKE LINES (Figure 88) .....	Page 142
BRAKE MASTER CYLINDER (Figure 91) .....	Page 147
BRAKE PEDAL LINKAGE (Figure 86) LAST USED ON S/N C10H-2046 .....	Page 138
BRAKE PEDAL LINKAGE (Figure 87) FIRST USED ON S/N C10H-2047 .....	Page 140
<b>C</b>	
CAMSHAFT AND VALVES (Figure 14) GASOLINE & LPG .....	Page 24
CARBURETOR (Figure 28) GASOLINE .....	Page 46

**TABLE OF CONTENTS**

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>C (Continued)</b>	
CARBURETOR (Figure 29) LPG .....	Page 48
CARRIAGE (Figure 114) .....	Page 190
CARRIAGE (Figure 128) THREE-STAGE FULL FREE LIFT .....	Page 216
CARRIAGE (Figure 141) TWO-STAGE FULL FREE LIFT .....	Page 240
CHARGE PUMP (Figure 62) LAST USED ON S/N C10H-2046 .....	Page 96
CHARGE PUMP (Figure 63) FIRST USED ON S/N C10H-2047 .....	Page 97
CONTROL VALVE (Figure 74) LAST USED ON S/N C10H-2046 .....	Page 118
CONTROL VALVE (Figure 75) USED ON S/N C10H-2047 ⇒ C10H-12724 .....	Page 119
CONTROL VALVE (Figure 76) FIRST USED ON S/N C10H-12725 .....	Page 120
COOLING SYSTEM (Figure 18) .....	Page 30
COUNTERWEIGHT (Figure 9) .....	Page 16
COWL ELECTRICAL (Figure 46) .....	Page 77
COWL HARNESS (Figure 47) .....	Page 79
CRANKSHAFT & PISTON (Figure 13) GASOLINE & LPG .....	Page 22
CYLINDER BLOCK (Figure 11) GASOLINE & LPG .....	Page 20
CYLINDER HEAD & COVER (Figure 10) GASOLINE & LPG .....	Page 18

## TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>D</b>	
DIFFERENTIAL (Figure 77) .....	Page 121
DISTRIBUTOR (Figure 56) GASOLINE & LPG .....	Page 88
DRIVE AXLE (Figure 78) .....	Page 122
DRIVE TIRE & WHEEL (Figure 150) .....	Page 254
<b>E</b>	
ELECTRICAL SYSTEM (Figure 16) GASOLINE & LPG .....	Page 27
ELECTRICAL SYSTEM (Figure 39) FRAME GASOLINE & LPG .....	Page 66
END PLATES (Figure 79) LAST USED ON S/N C10H-2046 .....	Page 124
END PLATES (Figure 80) FIRST USED ON S/N C10H-2047 .....	Page 125
ENGINE COVER (Figure 5) .....	Page 8
ENGINE ELECTRICAL SYSTEM (Figure 40) FRAME TYPE GS/LPS .....	Page 68
ENGINE FUEL SYSTEM (Figure 34) GASOLINE & LPG .....	Page 56
ENGINE HARNESS (Figure 53) GASOLINE & LPG .....	Page 85
ENGINE HARNESS (Figure 54) TYPES GS & LPS .....	Page 86
ENGINE MOUNT (Figure 20) GASOLINE & LPG LAST USED ON S/N C10H-2667 .....	Page 34
ENGINE MOUNT (Figure 21) GASOLINE & LPG FIRST USED ON S/N C10H-2668 .....	Page 35

**TABLE OF CONTENTS**

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>E (Continued)</b>	
EXHAUST (Figure 23) TYPES: GS & LPS .....	Page 38
EXHAUST STANDARD GASOLINE (Figure 22) STANDARD GASOLINE & LPG .....	Page 36
<b>F</b>	
FENDERS (Figure 149) LAST USED ON S/N C10H-2724 .....	Page 253
FILTER & LOCK-OFF VALVE (Figure 36) LPG .....	Page 60
FIRE EXTINGUISHER (Figure 154) .....	Page 260
FORK (Figure 119) .....	Page 198
FORK (Figure 133) THREE-STAGE FULL FREE LIFT .....	Page 224
FORK (Figure 146) TWO-STAGE FULL FREE LIFT .....	Page 248
FOUR FUNCTION CONTROL VALVE (Figure 104) SINGLE RELIEF LAST USED ON S/N PENDING PER ECN 86373 .....	Page 170
FOUR FUNCTION CONTROL VALVE (Figure 105) SINGLE RELIEF FIRST USED ON S/N PENDING PER ECN 86373 .....	Page 172
FOUR FUNCTION CONTROL VALVE (Figure 106) DUAL RELIEF LAST USED ON S/N PENDING PER ECN 86373 .....	Page 174
FOUR FUNCTION CONTROL VALVE (Figure 107) DUAL RELIEF FIRST USED ON S/N PENDING PER ECN 86373 .....	Page 176
FRAME AND FLOORPLATE (Figure 3) .....	Page 4
FREE-LIFT CYLINDER (Figure 127) THREE-STAGE FULL FREE LIFT .....	Page 214

## TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>F (Continued)</b>	
FREE-LIFT CYLINDER (Figure 140) TWO-STAGE FULL FREE LIFT .....	Page 238
FREE-LIFT (Figure 124) THREE-STAGE FULL FREE LIFT .....	Page 208
FREE-LIFT (Figure 137) TWO-STAGE FULL FREE LIFT .....	Page 232
FRONT & REAR LIGHTS (Figure 152) .....	Page 256
FUEL TANK AND LINES (Figure 38) GASOLINE .....	Page 62
GOVERNOR (Figure 30) GASOLINE & LPG .....	Page 50
<b>H</b>	
HARNESS (Figure 49) CLUSTER POWER .....	Page 81
HARNESS (Figure 50) FORWARD/REVERSE .....	Page 82
HARNESS (Figure 51) MONOTROL PEDAL .....	Page 83
HARNESS (Figure 52) SEAT SWITCH .....	Page 84
HARNESS (Figure 55) TAIL LIGHT .....	Page 87
HEADER HOSE-THREE-STAGE FFL (Figure 131) THREE FUNCTION .....	Page 220
HEADER HOSE-THREE-STAGE FFL (Figure 132) FOUR FUNCTION .....	Page 222
HEADER HOSE-TWO-STAGE FFL (Figure 144) THREE FUNCTION .....	Page 244
HEADER HOSE-TWO-STAGE FFL (Figure 145) FOUR FUNCTION .....	Page 246

**TABLE OF CONTENTS**

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>H (Continued)</b>	
HEADER HOSE-TWO-STAGE LFL (Figure 117) THREE FUNCTION .....	Page 194
HEADER HOSE-TWO-STAGE LFL (Figure 118) FOUR FUNCTION .....	Page 196
HYDRAULIC CLUTCH (Figure 71) LAST USED ON S/N C10H-2046 .....	Page 112
HYDRAULIC CLUTCH (Figure 73) FIRST USED ON S/N PENDING PER ECN 86576 .....	Page 116
HYDRAULIC PUMP (Figure 94) GASOLINE & LPG .....	Page 154
HYDRAULIC PUMP (Figure 95) GASOLINE & LPG USED ON S/N C10H-2047 ⇒ S/N C10H-3044 .....	Page 155
HYDRAULIC PUMP (Figure 96) GASOLINE & LPG FIRST USED ON S/N C10H-3045 .....	Page 156
HYDRAULICS (Figure 93) FIRST USED ON S/N PENDING PER ECN 86373 .....	Page 152
HYDRAULICS GROUP (Figure 92) LAST USED ON S/N PENDING PER ECN 86373 .....	Page 150
<b>I</b>	
INNER MAST (Figure 110) TWO-STAGE LIMITED FREE LIFT .....	Page 182
INNER MAST (Figure 122) THREE-STAGE FULL FREE LIFT .....	Page 204
INNER MAST (Figure 135) TWO-STAGE FULL FREE LIFT .....	Page 228
INSTRUMENT CLUSTER (Figure 44) .....	Page 73
INSTRUMENT PANEL HARNESS (Figure 48) .....	Page 80



## TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>I (Continued)</b>	
INTAKE AND EXHAUST MANIFOLD (Figure 15) GASOLINE & LPG .....	Page 26
INTERMEDIATE MAST (Figure 121) THREE-STAGE FULL FREE LIFT .....	Page 202
<b>L</b>	
LABELS & PAINT (Figure 8) .....	Page 14
LIFT CYLINDER (Figure 112) LEFT HAND .....	Page 186
LIFT CYLINDER (Figure 113) RIGHT HAND .....	Page 188
LIFT (Figure 111) TWO-STAGE LIMITED FREE LIFT .....	Page 184
LOAD BACKREST EXTENSION (Figure 115) .....	Page 191
LOAD BACKREST EXTENSION (Figure 129) .....	Page 217
LOAD BACKREST EXTENSION (Figure 142) .....	Page 241
LPG CONVERTER (Figure 37) .....	Page 61
LPG FUEL SYSTEM (Figure 35) .....	Page 58
LPG TANK (Figure 32) .....	Page 52
LPG TANK (Figure 33) .....	Page 54
<b>M</b>	
MAIN CYLINDER (Figure 125) LEFT HAND THREE-STAGE FULL FREE LIFT .....	Page 210
MAIN CYLINDER (Figure 126) RIGHT HAND THREE-STAGE FULL FREE LIFT .....	Page 212

**TABLE OF CONTENTS**

<b>DESCRIPTION</b>	<b>PAGE</b>
<b>M (Continued)</b>	
MAIN CYLINDER (Figure 138) LEFT HAND TWO-STAGE FULL FREE LIFT .....	Page 234
MAIN CYLINDER (Figure 139) RIGHT HAND TWO-STAGE FULL FREE LIFT .....	Page 236
MAIN LIFT (Figure 123) THREE-STAGE FULL FREE LIFT .....	Page 206
MAIN LIFT (Figure 136) TWO-STAGE FULL FREE LIFT .....	Page 230
MAST INSTALLATION (Figure 116) .....	Page 192
MAST INSTALLATION (Figure 130) THREE-STAGE FULL FREE LIFT .....	Page 218
MAST INSTALLATION (Figure 143) TWO-STAGE FULL FREE LIFT .....	Page 242
MIRROR (Figure 155) .....	Page 261
MONOTROL PEDAL (Figure 25) .....	Page 42
<b>N</b>	
NON-SUSPENSION SEAT (Figure 7) .....	Page 12
<b>O</b>	
OIL PUMP AND FILTER (Figure 17) GASOLINE & LPG .....	Page 28
OUTER MAST (Figure 109) TWO-STAGE LIMITED FREE LIFT .....	Page 180
OUTER MAST (Figure 120) THREE-STAGE FULL FREE LIFT .....	Page 200
OUTER MAST (Figure 134) TWO-STAGE FULL FREE LIFT .....	Page 226

## TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>O (Continued)</b>	
OVERHEAD GUARD (Figure 4) .....	Page 6
<b>P</b>	
PARK BRAKE LEVER (Figure 90) .....	Page 146
PUMP DRIVE (Figure 97) GASOLINE & LPG .....	Page 157
<b>R</b>	
RADIATOR & HOSES (Figure 19) GASOLINE & LPG .....	Page 32
<b>S</b>	
SHIFT LEVER (Figure 45) .....	Page 75
SIDESHIFT CARRIAGE (Figure 147) .....	Page 250
SIDESHIFT CYLINDER (Figure 148) .....	Page 252
SOLENOID VALVE (Figure 64) .....	Page 98
STARTER (Figure 57) GASOLINE & LPG .....	Page 90
STEERING AXLE (Figure 83) .....	Page 132
STEERING COLUMN (Figure 81) .....	Page 128
STEERING CONTROL VALVE (Figure 82) .....	Page 130
STEERING CYLINDER (Figure 84) USED ON PRIOR TO DATE CODE 96.06.121 .....	Page 134
STEERING CYLINDER (Figure 85) USED ON AFTER DATE CODE 96.06.121 .....	Page 135
STEERING TIRE & WHEEL (Figure 151) .....	Page 255

**TABLE OF CONTENTS**

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>S (Continued)</b>	
STROBE LIGHT (Figure 153) .....	Page 258
SUSPENSION SEAT (Figure 6) .....	Page 10
<b>T</b>	
TAIL LIGHT (Figure 41) EARLY PRODUCTION .....	Page 70
TAIL LIGHT (Figure 42) LATE PRODUCTION .....	Page 71
THREE FUNCTION CONTROL VALVE (Figure 100) SINGLE RELIEF FIRST USED ON S/N PENDING PER ECN 86373 .....	Page 162
THREE FUNCTION CONTROL VALVE (Figure 101) DUAL RELIEF LAST USED ON S/N PENDING PER ECN 86373 .....	Page 164
THREE FUNCTION CONTROL VALVE (Figure 102) DUAL RELIEF FIRST USED ON S/N PENDING PER ECN 86373 .....	Page 166
THREE FUNCTION CONTROL VALVE (Figure 99) SINGLE RELIEF LAST USED ON S/N PENDING PER ECN 86373 .....	Page 160
THROTTLE ASSY (Figure 24) .....	Page 40
THROTTLE LINKAGE (Figure 26) GASOLINE .....	Page 44
THROTTLE LINKAGE (Figure 27) LPG .....	Page 45
TILT CYLINDER (Figure 108) .....	Page 178
TIMING COVER & OIL PAN (Figure 12) GASOLINE & LPG .....	Page 21
TORQUE CONVERTER (Figure 60) LAST USED ON S/N C10H-2046 .....	Page 94

## TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
<b>T (Continued)</b>	
TORQUE CONVERTER (Figure 61) FIRST USED ON S/N C10H-2047 .....	Page 95
TRANSMISSION GEARS (Figure 67) LAST USED ON S/N C10H-2046 .....	Page 104
TRANSMISSION GEARS (Figure 68) FIRST USED ON S/N C10H-2047 .....	Page 106
TRANSMISSION HOUSING (Figure 65) LAST USED ON S/N C10H-2046 .....	Page 100
TRANSMISSION HOUSING (Figure 66) FIRST USED ON S/N C10H-2047 .....	Page 102
TRANSMISSION HYDRAULIC LINES (Figure 69) LAST USED ON S/N C10H-2046 ⇒ C10H-12723 .....	Page 108
TRANSMISSION HYDRAULIC LINES (Figure 70) FIRST USED ON S/N C10H-12724 .....	Page 110
<b>V</b>	
VALVE ATTACHING PARTS (Figure 103) FOUR FUNCTION .....	Page 168
VALVE ATTACHING PARTS (Figure 98) THREE FUNCTION .....	Page 158

**HOW TO USE THE ILLUSTRATED PARTS MANUAL**

This Parts Manual describes and illustrates assemblies, subassemblies and detail parts needed for service replacement.

The different constructions are indicated by keys, symbols and footnotes.

**Page 2 SERIAL CODE C010**  
**INDEX-MASTER**

DESCRIPTION	PAGE
Accelerator	28-29
Accumulator	34
Aide-Drive	24-25
Aide-Steering	25-26
Brake	
Brake-Park Lever Actuated	
Brake-Park Seat Actuated	
Carriage Code-Shift	
Carriage Valve Two-Stage Full Free Lift	
Carriage Valve Three-Stage Full Free Lift	
Control Panel	

**Page 14 SERIAL CODE C010**  
**INDEX-NUMERICAL**

PART NO.	FIGURE NO.	REF. NO.	PART NO.	FIGURE NO.	REF. NO.	PART NO.	FIGURE NO.	REF. NO.	PART NO.	FIGURE NO.	REF. NO.
368207	48	1	370159	42	11	370123	11	14	372605	22	34
368208	49	1				372606	22	34	375156	2	2
368209	47	1				372607	22	34	375157	3	3
368615	46	2	370250	43	7	372608	22	34	375158	4	4
368616	54	1	370251	1	1	372609	22	34	375159	5	5
368618	30	2	370252	1	1	372610	22	34	375160	6	6
368619	47	2	370253	1	1	372611	22	34	375161	7	7
368620	47	2	370254	1	1	372612	22	34	375162	8	8
368621	48	8	370255	1	1	372613	22	34	375163	9	9
368622	42	8	370256	1	1	372614	22	34	375164	10	10
368623	42	8	370257	1	1	372615	22	34	375165	11	11
368624	39	1	370258	1	1	372616	22	34	375166	12	12
						372617	22	34	375167	13	13
						372618	22	34	375168	14	14
						372619	22	34	375169	15	15
						372620	22	34	375170	16	16
						372621	22	34	375171	17	17
						372622	22	34	375172	18	18
						372623	22	34	375173	19	19
						372624	22	34	375174	20	20
						372625	22	34	375175	21	21
						372626	22	34	375176	22	22
						372627	22	34	375177	23	23
						372628	22	34	375178	24	24
						372629	22	34	375179	25	25
						372630	22	34	375180	26	26
						372631	22	34	375181	27	27
						372632	22	34	375182	28	28
						372633	22	34	375183	29	29
						372634	22	34	375184	30	30
						372635	22	34	375185	31	31
						372636	22	34	375186	32	32
						372637	22	34	375187	33	33
						372638	22	34	375188	34	34
						372639	22	34	375189	35	35
						372640	22	34	375190	36	36
						372641	22	34	375191	37	37
						372642	22	34	375192	38	38
						372643	22	34	375193	39	39
						372644	22	34	375194	40	40
						372645	22	34	375195	41	41
						372646	22	34	375196	42	42

**Page 22 SERIAL CODE C010**  
**SEAT**  
LAST USED ON PENDING S/N PER ECN 98020

**Page 1 SERIAL CODE D001-NORTH AMERICA**  
**ILLUSTRATED CONTENTS**

REF.	SECTION	PAGE
1	Frame	5
2	Engines	25
3	Fuel	85
4	Electrical	131
5	Transmission	171
6	Steering	193
7	Brakes	203
8	Hydraulics	215
9	Mast: Two-Stage Limited Free Lift	239
10	Mast: Three-Stage Full Free Lift	251
11	Mast: Two-Stage Full Free Lift	289
12	Optional Equipment	315
13	Numerical Index	346

**KEY**

KEY	DESCRIPTION
A	Without Seat Actuated Park Brake And Without Operator Restraint
B	With Seat Actuated Park Brake And Without Operator Restraint
C	Without Seat Actuated Park Brake And With Operator Restraint
D	With Seat Actuated Park Brake And With Operator Restraint

**REF. PART NO. NAME OF PART**

REF. PART NO.	NAME OF PART	A	B	C	D	REF. PAGE
1	364811 Sheetmetal Seat	1	1	1	1	10
1	362276 Fabric Seat	1	1	1	1	11
2	325434 Suspension Seat	1	1	1	1	12
2	374771 Suspension Seat	1	1	1	1	12
2	1346827 Suspension Seat	1	1	1	1	14
2	1346826 Suspension Seat	1	1	1	1	14
3	325361 Cushion	2	2	2	2	15
4	325364 Spring-Coil	1	1	1	1	15
5	325363 Spring-Torsion	1	1	1	1	15
8	325378 Absorber-Shock	1	1	1	1	15
7	325357 Pan-Seat	1	1	1	1	15
8	325358 Spline-Adj.	1	1	1	1	15
9	325352 Hook-Lever	1	1	1	1	15

HYSTER COMPANY  
See Service Manual for service procedures

©1997 HYSTER COMPANY  
See Service Manual for service procedures  
11/30/93

**WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:**  
(Please refer to the callouts on the facing page):

1. Determine the function and application of the required part. Turn to the Illustrated Contents page immediately behind the front cover and select the most appropriate section.
2. Use the Section Index to determine the assembly which would normally contain the required part. Locate the part on the page that contains the assembly.

**WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:**

3. Determine the assembly on which the required part is used. Turn to the Table of Contents pages that immediately follow the Illustrated Contents.
4. Locate the assembly on which the required part is used and turn to the page indicated for that assembly. Locate the part on the page that contains the assembly.

**WHEN THE PART NUMBER IS KNOWN:**

5. Use the Numerical Index to find the part number. Turn to the Page listed and locate the part as indicated by the reference number (REF NO).

**GENERAL INFORMATION:**

- Assembly Breakdowns include part numbers, descriptions, required quantities, keys, and footnotes, to help in selecting correct parts.
6. A "KEY" is used to indicate effective serial numbers for two or more similar assemblies, or for RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", or "D", and the corresponding "QTY" column to find the required parts.
  7. Indented descriptions under "NAME OF PART" indicate subparts of major assemblies. Major assemblies are not indented. A part with a first indent is a sub-part of the major assembly above it. Parts with second or third indents are sub-parts of the assembly above them and therefore also part of the major assembly.
  8. Quantities shown are for one assembly. Note that two assemblies are shown, but that the quantities of the subparts are indicated as "3" and "3". This means "3 per assembly".
  9. Engineering Change Notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local Dealer for Hyster Lift Trucks for serial number information listed by ECN number.

**ORDERING PARTS:**

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

**For additional information on parts ordering or service, consult your Hyster Dealer.**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**