

Skid Steer Small Platform

Service Manual - Skid Steer Small Platform

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Tracks](#)

[Section K - Engine](#)



Publication No.
9813/1350



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

General Information

Service Manual - Skid Steer Small Platform

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Tracks](#)

[Section K - Engine](#)



Publication No.
9813/1350



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Section 1 - General Information

| Contents | Page No. |
|--|-----------------|
| Introduction | |
| About this Publication | 1-1 |
| Machine Model and Serial Number | 1-1 |
| Using the Service Manual | 1-1 |
| Section Numbering | 1-1 |
| Left Side, Right Side | 1-2 |
| Cab/Canopy | 1-2 |
| Machine Description | 1-3 |
| The JCB Skid Steer Loader | 1-3 |
| Intended Use | 1-3 |
| Component Locations | 1-3 |
| Identifying Your Machine | 1-5 |
| Machine Identification Plate | 1-5 |
| Component Identification | 1-6 |
| ROPS and FOPS | 1-7 |
| Torque Settings | |
| Zinc Plated Fasteners and Dacromet Fasteners | 1-9 |
| Introduction | 1-9 |
| Bolts and Screws | 1-9 |
| Hydraulic Connections | 1-13 |
| 'O' Ring Face Seal System | 1-13 |
| Service Tools | |
| Numerical List | 1-15 |
| Tool Detail Reference | 1-17 |
| Section B - Frame and Bodywork | 1-17 |
| Section C - Electrics | 1-21 |
| Section E - Hydraulics | 1-22 |
| Section K - Engine | 1-26 |
| Service Aids | |
| Sealing and Retaining Compounds | 1-27 |

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com