

# Service Manual



## JCB 403

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.  
**9803-9490-2**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class  
Customer Support



## **Section 0 - Service Manual**

## Notes:



# Section 1

## General Information

Service Manual - JCB 403

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section K - Engine](#)



Publication No.  
**9803-9490-1**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class  
Customer Support



## **Section 1 - 1**

## Notes:



Contents	Page No.
<b>About this Manual</b>	
Introduction .....	1-1
Using the Service Manual .....	1-1
Units of Measurement .....	1-1
Section Numbering .....	1-1
Cross References .....	1-1
Using the Machine .....	1-1
Hydraulic Schematic Colour Codes .....	1-2
<b>Identifying the Machine</b>	
Serial Numbers .....	1-3
Machine Model and Serial Number .....	1-3
Data Plate .....	1-3
Typical Vehicle Identification Number (VIN) .....	1-3
Typical Engine Identification Number .....	1-3
<b>Standard Torque Settings</b>	
Zinc Plated Fasteners and Dacromet Fasteners .....	1-4
Introduction .....	1-4
Bolts and Screws .....	1-4
Hydraulic Connections .....	1-8
'O' Ring Face Seal System .....	1-8
'Torque Stop' Hose System .....	1-11
<b>Service Tools</b>	
Numerical List .....	1-12
Tool Detail Reference .....	1-16
Section B - Body and Framework .....	1-16
Section C - Electrics .....	1-17
Section E - Hydraulics .....	1-18
<b>Moving a Disabled Machine</b>	
Towing or Winching .....	1-22
<b>Service Consumables</b>	
Sealing and Retaining Compounds .....	1-24

**Please Click Here To Download The Complete Manual  
Download Other Manuals  
If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**