



# SERVICE MANUAL

## Wheeled Loader

PUBLISHED BY THE TECHNICAL PUBLICATIONS DEPARTMENT OF  
JCB SERVICE; © ROCESTER, STAFFORDSHIRE, ST14 5LS, ENGLAND  
Tel. ROCESTER (0889) 590312 PRINTED IN ENGLAND

**Publication No. 9803/4100**

This page left intentionally blank

GB

Service Manual

Publication No. 9803/4100

## **Wheeled Loader**

French

Manuel de service

Publication No. 9803/4100A

## **Chargeurs Sur Pneus**

German

Wartungshandbuch

Druckschrift Nr. 9803/4100A

## **Radlader**

Spanish

Manual de reparaciones

Publicación No. 9803/4100A

## **Cargadoras Sobre Ruedas**

Italian

Manuale de servizio

Stampato No. 9803/4100B

## **Caricatore Gommato**

This page left intentionally blank

## CATALOGUE / MANUAL - REPLACEMENT PAGES

Wheeled Loader Manual	14 th Set	Publication No. 9803/4100
-----------------------	-----------	---------------------------

These pages should be inserted immediately in their correct positions and pages of a lower issue no. removed and destroyed. The total contents of this publication can be checked using the index below. Retain index at front of book. Replacement pages issued in this set are indicated by an asterisk (\*).

Page No	Issue	Page No	Issue	Page No	Issue	Page No	Issue
Contents	2	5-24	1	2-6	1	3-6B	1
Introduction	4	5-25	1	2-7	1	3-6C	1
		5-26	1	2-8	1	3-6D	1
Section 1		5-27	1	2-9	1	3-7	1
		5-28	1	2-10	1	3-8	1
1-1	8	5-29	1	2-11	1	3-9	1
1-1A	3	5-30	1	2-12	1	3-10	1
1-2	8*	6-1	1	2-13	1	3-11	1
1-3	2	6-2	2	2-14	1	3-12	1
2-1	10	6-3	3	2-15	1	3-13	1
2-2	10	6-4	3	2-16	1	3-14	1
2-3	10	6-5	2	3-1	2	3-15	1
3-1	6	7-1	1	3-2	1	3-16	1
3-2	5	7-2	5	4-1	3	3-17	1
		7-2A	2	4-2	3	3-18	1
Section 2		7-3	2	4-3	1	3-19	1
		7-4	4	5-1	1*	3-20	1
1-1	8	7-5	1			3-21	1
1-1A	6	7-6	1	Section 5		3-22	1
1-1B	3	7-7	1			4-1	4
1-2	4	7-8	1	1-1	8	5-1	1
1-2A	3	7-9	1	1-1A	3	5-2	1
1-3	5	7-10	1	1-1B	3*	5-3	1
2-1	4	7-11	1	1-2	7	5-4	1
2-2	5	7-12	1	1-3	5	5-5	1
2-2A	3	7-13	2	2-1	10	5-6	2
2-3	5	7-14	1	2-2	4	5-7	2
3-1	3	7-15	2	2-3	3	5-8	2
3-2	2	7-16	1	3-1	6	5-9	2
3-3	4	8-1	1	3-2	6	5-10	2
3-4	1	8-2	1	4-1	3	5-11	1
3-5	2	9-1	3	4-2	3	5-12	2
4-1	2	10-1	10	4-3	2	5-13	2
4-2	1	10-1A	2	4-4	2	5-14	2
4-3	1	10-1B	1	5-1	4	5-15	2
5-1	3	10-1C	1	5-1A	3	5-16	2
5-2	3	10-1D	1	5-2	4	5-17	2
5-3	3	10-2	1	5-3	3	5-18	2
5-4	3	10-3	2	5-4	1	5-19	2
5-5	3	11-1	2	6-1	7	5-20	2
5-6	3	11-2	4	6-2	2	5-21	2
5-7	3	11-3	1	7-1	4	5-22	2
5-8	3	11-4	1	8-1	1	5-23	3
5-9	4	12-1	3	8-2	3	5-24	1
5-10	2	12-2	1	8-3	2	5-25	2
5-11	1	12-3	1			5-26	2
5-12	1			Section 6		5-27	2
5-13	2	Section 4				5-28	2
5-14	2			1-1	10*	5-29	2
5-15	1	1-1	2	1-2	4*	5-30	2
5-16	1	1-2	1	2-1	5	5-31	2
5-17	1	1-3	2	3-1	2	5-32	2
5-18	1	1-4	2	3-2	1	5-33	2
5-19	1	2-1	4	3-3	1	5-34	2
5-20	1	2-2	1	3-4	2	5-35	2
5-21	1	2-3	2	3-5	2	5-36	2
5-22	1	2-4	1	3-6	2	5-37	2
5-23	1	2-5	1	3-6A	1	5-38	2

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**