

Wheeled Loading Shovel - 446, 456

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/4180-08



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, World Parts Centre, Beamhurst, Uttoxeter, Staffordshire, ST14 5PA, England. Tel +44 1889 590312 Fax +44 1889 593377

World Class
Customer Support



Notes:

General Information

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/4180-08



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, World Parts Centre, Beamhurst, Uttoxeter, Staffordshire, ST14 5PA, England. Tel +44 1889 590312 Fax +44 1889 593377

World Class
Customer Support



Section 1 - General Information

Notes:



Section 1 - General Information

| Contents | Page No. |
|--|-----------------|
| Introduction | |
| About this Manual | 1 - 1 |
| Machine Model and Serial Number | 1 - 1 |
| Using the Service Manual | 1 - 1 |
| Section Numbering | 1 - 1 |
| Left Side, Right Side | 1 - 2 |
| Cross References | 1 - 2 |
| Identifying your Machine | 1 - 3 |
| Machine Identification Plate | 1 - 3 |
| Typical Vehicle Identification Number | 1 - 3 |
| Typical Product Identification Number | 1 - 4 |
| Component Identification Plates | 1 - 5 |
| Standard Torque Settings | |
| Zinc Plated Fasteners and Dacromet Fasteners | 1 - 7 |
| Introduction | 1 - 7 |
| Bolts and Screws | 1 - 7 |
| Hydraulic Connections | 1 - 11 |
| 'O' Ring Face Seal System | 1 - 11 |
| 'Torque Stop' Hose System | 1 - 14 |
| Service Tools | |
| Numerical List | 1 - 15 |
| Tool Detail Reference Section | 1 - 16 |
| Section B - Body and Framework | 1 - 16 |
| Section C - Electrics | 1 - 21 |
| Section E- Hydraulics | 1 - 23 |
| Section F - Transmission | 1 - 25 |
| Section G - Brakes | 1 - 28 |
| Service Aids | |
| Sealing and Retaining Compounds | 1 - 29 |
| Terms and Definitions | |
| Colour Coding | 1 - 31 |
| Hydraulic Schematic Colour Codes | 1 - 31 |
| Black and White Codes | 1 - 32 |
| Basic Operation | |
| Preparation for Towing | 1 - 33 |

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com